

T.sonic™ 820 Firmware Update Procedure


(Please make sure you backup all the data before continuing the firmware update procedure.)

Notice:


- a. Before beginning the procedure, please disconnect your T.sonic™ 820 from your computer.
- b. This firmware update program only supports Win2000 and WinXP. (Please log in with Administrator privileges)
- c. This procedure WILL delete all the files in your T.sonic™ 820.
- d. Please DO NOT connect your T.sonic™ 820 to any types of USB hubs, including USB ports on your monitor or keyboard.

Procedure:

1. After disconnecting your T.sonic™ 820 from the computer, please disconnect your T.sonic™ 820 from your computer. Press and hold the “Reset” button on T.sonic™ 820 for 2 seconds.
2. Press and hold the “Volume Down” button and connect T.sonic™ 820 to an available USB port on a computer.
3. Extract the .RAR file and then double click on the executable file to execute the “T.sonic 820: Firmware Upgrade” software program.

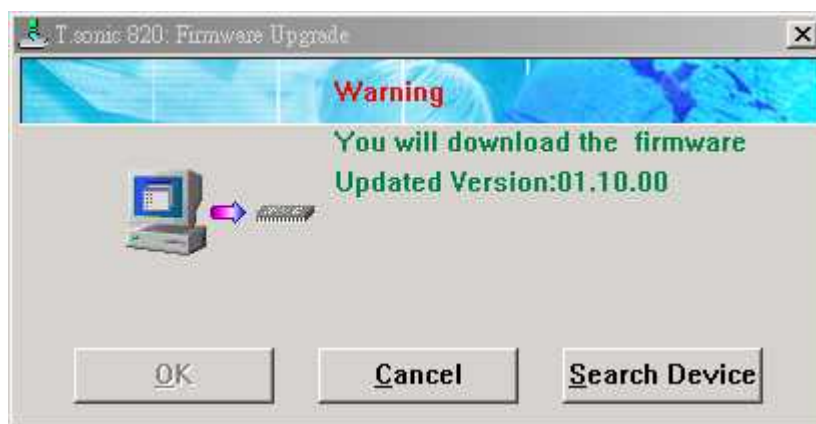

4. Click on the “Search Device” button to continue. A “Current Version: XX.XX.XX” message will be displayed in the window indicating that the T.sonic™ 820 has been successfully found. You may release the “Volume Down” button now.

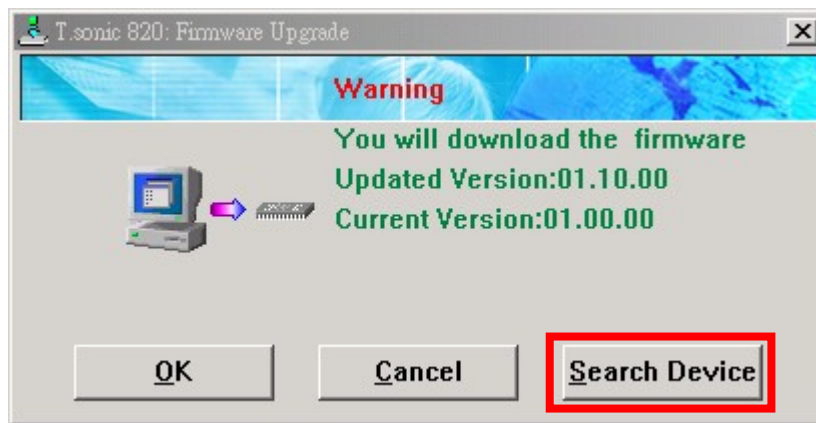

5. Click on the "OK" button to begin updating the firmware version of your **T.sonic™ 820**. This may take a few minutes. When the firmware update process completes, a "Firmware Upgrade Completed..." message will appear. Please click on the "OK" button to close the "T.sonic 820: Firmware Upgrade" program. Congratulations, your **T.sonic™ 820** is now updated.

