

TOSHIBA

VHS Hi-Fi
Video Cassette Recorder
M-649

OWNER'S MANUAL



INSTALLATION 6

OPERATING CONTROLS
AND FEATURES 18

PLAYBACK 27

SPECIALIZED
OPERATIONS 40

Using This Manual

Congratulations on your choice of a TOSHIBA M-649. You have selected a high-quality, precision-engineered instrument designed to give you years of video and audio enjoyment.

To get the best performance from your new VCR, it is important that you carefully read and follow the operating instructions in this manual in the sequence in which they are presented.

Should you experience a problem, please follow the "Trouble Checks" on page 51. The warranty describes what will be done for you should your new VCR need service during the warranty period. It also tells you how and from whom you should request service.

Table of Contents

Safety Precautions.....	1	Double Speed Playback.....	28
Accessories.....	1	Variable-Speed Slow-Motion Playback.....	28
IMPORTANT SAFEGUARDS.....	3-5	Still for Stop-Action Playback.....	28
INSTALLATION		Frame Advance.....	28
Choosing a Location for Your VCR.....	6	Tracking(Automatic and Manual).....	28
TV Antenna and VCR Connections.....	7	On-Screen Displays.....	29
VCR and TV Connections.....	8	Time Counter with Memory-Stop Feature.....	29
CATV Connections.....	9-12	RECORDING	
FIRST-TIME OPERATION		Recording Guides.....	30
Unpack the VCR and Accessories.....	13	Tape Recording Speeds.....	30
Install the Batteries in the Remote Control.....	13	Recording with TV Turned Off.....	30
Connect an Antenna or Cable-TV System to the VCR.....	13	Recording and Viewing the Same Program.....	31
Set the CH3/CH4 Switch on the Back of the VCR to		Recording and Viewing Different Programs.....	31
Select the "VCR Channel".....	13	One Touch Recording (OTR).....	32
Turn on the VCR and Select an Active Channel.....	14	Programming the Timer.....	33-35
Set the CATV.....	14	Timer Recording.....	36
Learn How to Use the TV/VCR Button.....	14	Recording From a Camcorder.....	37
Test the VCR Connections.....	14	Recording From another VCR.....	38
AutoProgram Channels Into the Channel Memory.....	15-16	Pause During Recordings.....	39
Set the Clock and Date.....	16	SPECIALIZED OPERATIONS	
Make a Recording and Play It Back.....	17	Index.....	40
VCR'S OPERATING CONTROLS AND FEATURES		Index Register.....	40
VCR's Jack Panels.....	18	How to Register Index Signal during Recording.....	40
VCR's Operating controls.....	19	Scan and Play (Index Playback).....	41
VCR's Display Panel.....	20	Skip Search 1(Index Playback).....	42
Remote Control Buttons that Control the VCR.....	21-22	Skip Search 2(Using the FRAME button).....	43
Remote Control Buttons that Control a TV.....	23-24	Auto Repeat.....	43
VCR Features		Remaining Tape Display Function.....	44
Quick-Play Feature.....	25	Connection for MTS.....	45
High-Speed Rewind.....	25	MTS(Multichannel TV sound).....	45
Auto Head Cleaner.....	25	Recording SAP and/or Stereo Broadcasts.....	46
VCR Set Up Menu.....	25	Play of SAP and/or Stereo Sound(or Monitor of Recording).....	46
VIDEO CASSETTES		SIMULCAST	
Tape Speed.....	26	Connection for Simulcast Recording.....	47
Erase protection.....	26	Simulcast Recording.....	47
Inserting and Removing Cassettes.....	26	Audio Equipment Connection.....	48
Cassette Care and Storage.....	26	Audio Hi-Fi Recording.....	49
PLAYBACK		Copying VCR Recording.....	50
Playback Guide.....	27	TROUBLE CHECKS.....	51
Picture Search.....	28	CLEANING THE VCR.....	52
Accel Search.....	28	DESIGN SPECIFICATIONS.....	52
		VCR LIMITED WARRANTY.....	Back Cover

IMPORTANT SAFEGUARDS

CAUTION: PLEASE READ AND OBSERVE ALL WARNINGS AND INSTRUCTIONS GIVEN IN THIS OWNER'S MANUAL AND THOSE MARKED ON THE UNIT. RETAIN THIS BOOKLET FOR FUTURE REFERENCE.

This set has been designed and manufactured to assure personal safety. However, improper use can result in electric shock or fire hazard. The safeguards incorporated in this unit will protect you if you observe the following procedures for installation, use and servicing. This unit is fully transistorized and does not contain any parts that can be repaired by the user.


DO NOT REMOVE THE CABINET COVER, OR YOU MAY BE EXPOSED TO DANGEROUS VOLTAGES. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



1. After unpacking this video product, read the owner's manual carefully, and follow all the operating and other instructions.




2. This video product should be operated only from the type of power source indicated on the marking labels. If you are not sure of the type of power supply to your home, consult your sales person or your local power company. For video products intended to operate from battery power, or other sources, refer to the operating instructions.

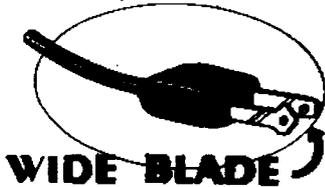

3. This video product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.



4. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the video product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be locked by placing the video product on a bed, sofa, rug or other similar surface. This video product should never be placed near or over a radiator or heat register. This video product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

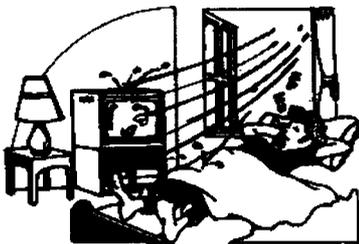

5. Do not expose this video product to rain or use near water. For example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool and the like.



6. Unplug the video product from wall outlet before cleaning. Use only a soft damp cloth a never use benzine, thinner or other solvents for cleaning.

IMPORTANT SAFEGUARDS(continued)




7. Do not allow anything to rest on the power cord. Do not locate this video product where the cord will be walked on.



8. Do not overload wall outlets and extension cords as this can result in fire or electric shock.

9. If an outside antenna or cable system is connected to the video product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANS/NFPA 70, provides information with respect to proper grounding of the mast and supporting structure, ground of the lead-in wire to an antenna discharge unit, size of grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.
- a. Use No. 10 AWG (5.3 mm²) copper, No. 8 AWG (8.4 mm²) aluminum, No. 17 AWG (1.0 mm²) copper-clad steel or bronze wire, or larger, as a ground wire.
 - b. Secure antenna lead-in and ground wires to house with stand-off insulators spaced from 4.6 feet (1.22-1.83m) apart.
 - c. Mount antenna discharge unit as close as possible to where lead-in enters house.
 - d. Use jumper wire not smaller than No. 6 AWG (13.3mm²) copper, or the equivalent, when a separate antenna-grounding electrode is used. See NEC section 810-21 (j).

EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE

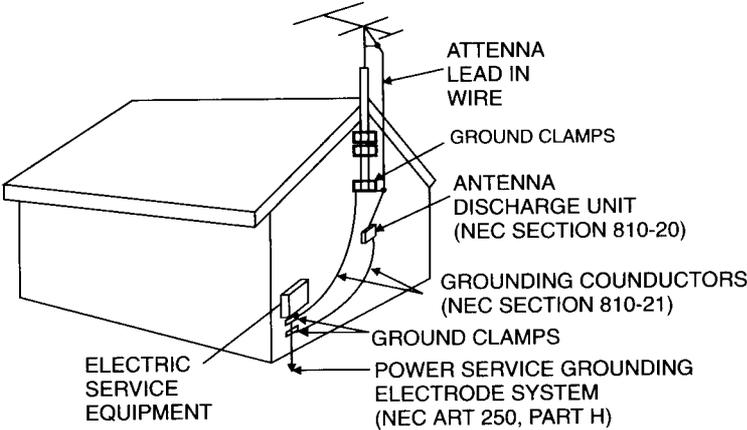

S2898A

10. An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuit, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.



11. For added protection for this video product receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the video product due to lightning and power-line surges.

IMPORTANT SAFEGUARDS(continued)




12. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.



13. Never push objects of any kind into this video product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the video product.

14. Do not use attachments not recommended by the video product manufacturer as they may cause hazards.

15. Do not place this video product on an unstable cart, stand, tripod, bracket, or table. The video product may fall, causing serious injury to a child or adult, a serious damage to the appliance. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the video product.

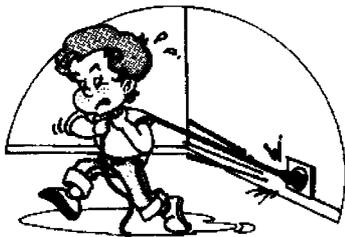

16. Unplug this video product from the wall outlet and refer servicing to qualified service personnel under the following conditions :

- A. When the power-supply cord or plug is damaged.
- B. If liquid has been spilled, or objects have fallen into the video product.
- C. If the video product has been exposed to rain or water.
- D. If the video product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the video product to its normal operation.
- E. If the video product has been dropped or the cabinet has been damaged.
- F. When the video product exhibits a distinct change in performance.



Do not attempt to service this video product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.



17. Upon completion of any service or repairs, request the service technicians assurance that only Factory Authorized Replacement Parts that have the same characteristics as the original parts were used, and that routine safety checks have been performed to determine that the video product is in safe operating condition. Unauthorized parts may result in fire, electrical shock, or other hazards.

GENERAL INSTALLATION INFORMATION

Choosing a Location for your VCR

- Choose a location that is convenient, but away from sources of heat such as direct sunlight and heating units.
- If the VCR is to be installed in an equipment rack or cabinet with other components, be sure that there is adequate ventilation at the back and around the sides of the components. The VCR should not be placed on or directly above a stereo amplifier because of the heat that rises from the amplifier.
- Choose a flat surface at least as large as the VCR so that it rests on its mounting feet. It is important that air can pass through the ventilation holes in the bottom of the unit to prevent it from overheating. Do not operate the VCR on a rug or carpet because the pile will obstruct these holes.



Some TV sets may cause interference in home VCR's. To avoid interference and get the best performance from your VCR, follow these guidelines :

- When placing the VCR under a TV, keep at least 18 inches between the bottom of the TV and the top of the VCR.
- If interference is present when the VCR is used on top of the TV or at the 18-inch distance below the set, move the VCR to a position beside the TV.
- If moving the VCR does not solve the interference problem, try plugging the VCR into a different wall socket.
- If interference continues after all the above, call your dealer or service representative.

What Are VHF and UHF?

When television broadcasting began, we called twelve VHF (very high frequency) channels and numbered them 2 through 13.

Later, as television broadcasting expanded, we called UHF (ultra high frequency) channels.

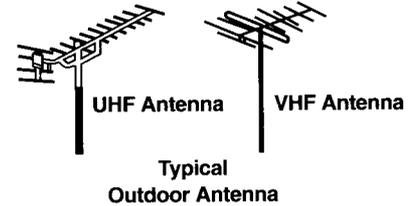
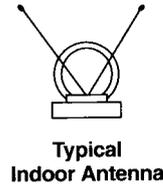


Your home antenna is a "signal receiver" that picks up TV broadcasts out of the air. These are several different types of antennas :

- Some receive only VHF channels.
- Some receive only UHF channels.
- Some receive both VHF and UHF channels.

Depending on the type of antenna, signals from the antenna can be conducted through either flat "twin-lead" cable or through round "coaxial" cable as shown below.

Types of Antenna Cables

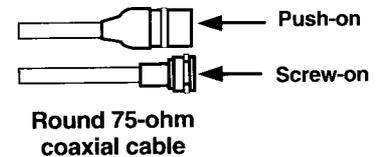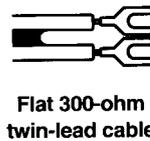

Cable-TV (CATV) supplies television signals directly by round cable without the need for a home antenna.

Cable-TV can deliver both VHF and/or UHF channels and programs not available from a home antenna. You will usually get better picture quality (for recording TV programs) if you connect an outdoor antenna or cable-TV system to your VCR. If this is not possible (or if you are in an area with good signal reception), use a good quality indoor antenna.

INSTALLATION

TV Antenna and VCR Connections

To connect the VCR to a antenna(Fig. 1), to combination VHF/UHF antenna(Fig.2), take the following steps:

Remove the VHF and/or UHF cable from your TV terminals and reconnect them to the VCR terminal as shown in the diagrams below.

Note: For VHF and UHF connections, follow procedure ① if you have a 75 Ω (ohm) coaxial cable, and follow procedure ② if you have a 300 Ω (ohm) twin lead connector.

Figure 1. VHF or UHF Reception Areas


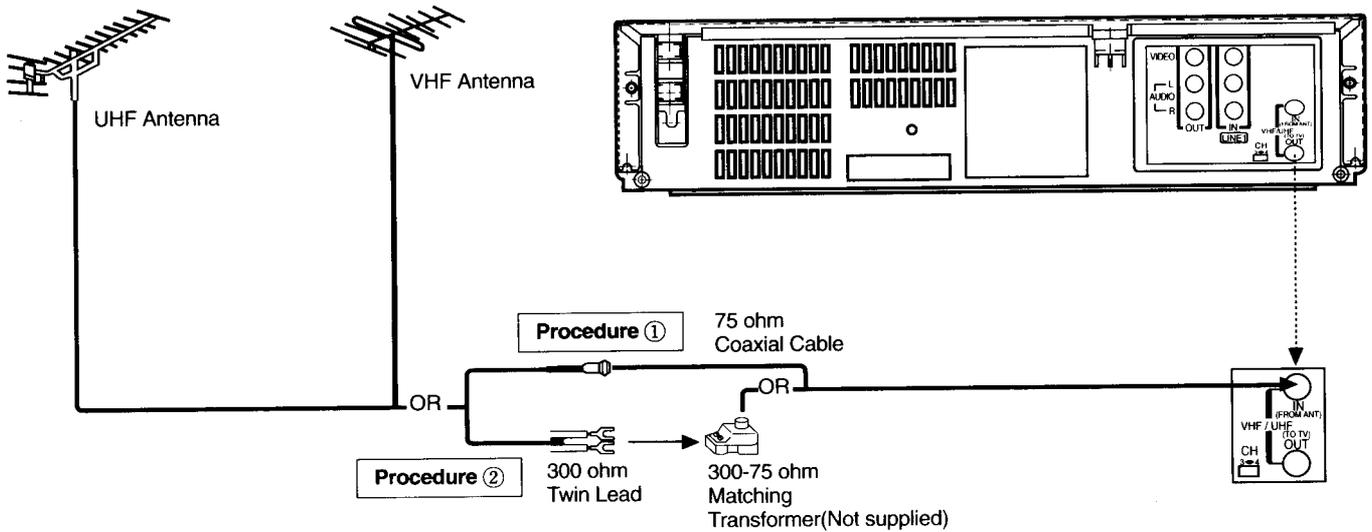


Figure 2. Combined VHF/UHF Reception Areas

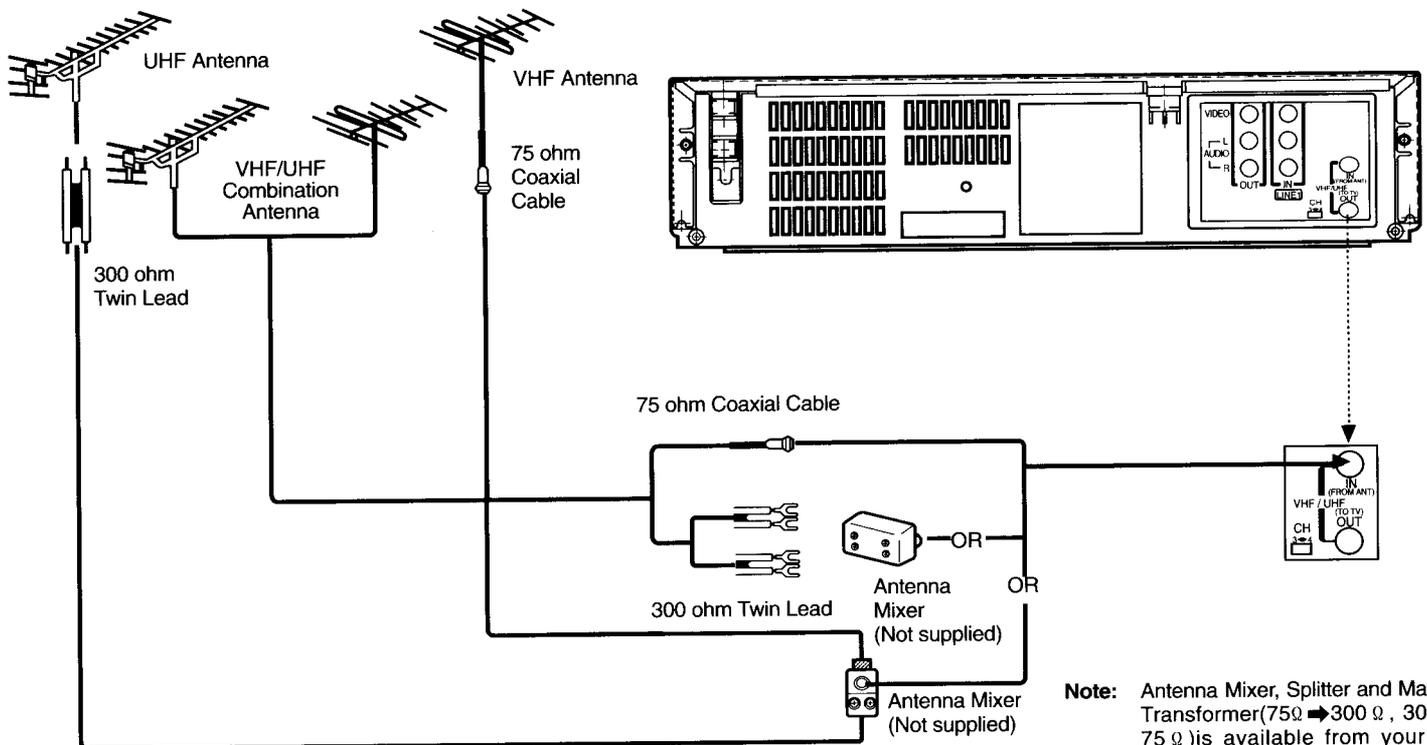

Note: Antenna Mixer, Splitter and Matching Transformer(75 Ω \rightarrow 300 Ω , 300 Ω \rightarrow 75 Ω)is available from your local electronics store.

INSTALLATION(continued)

VCR and TV Connections

Connection to TV Antenna terminals

Fig. 1 VHF(75ohm/300ohm) or VHF(75ohm) terminals connection



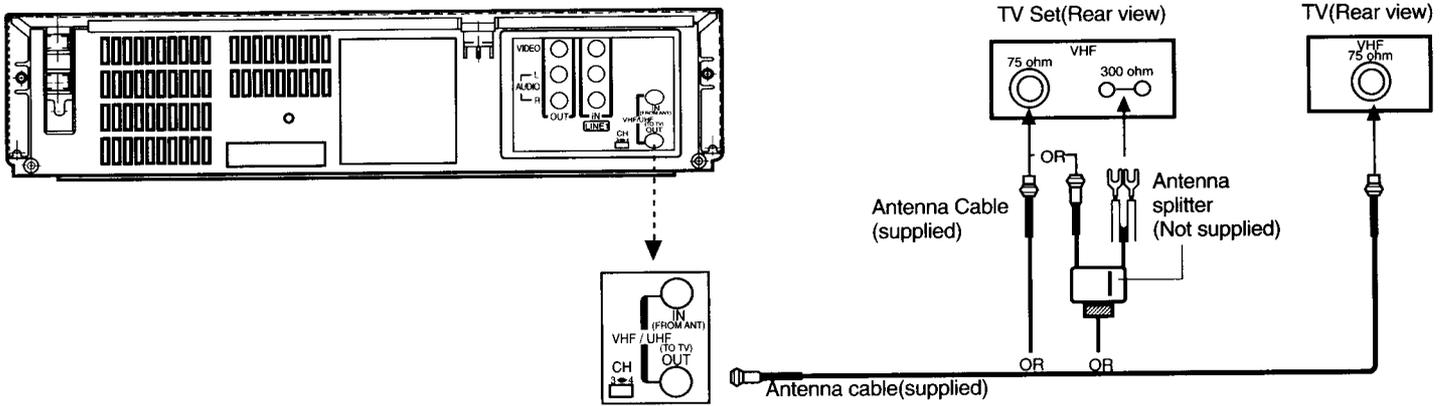


Fig. 2 VHF/UHF(75ohm/300ohm) or VHF/UHF(75ohm) terminals connection

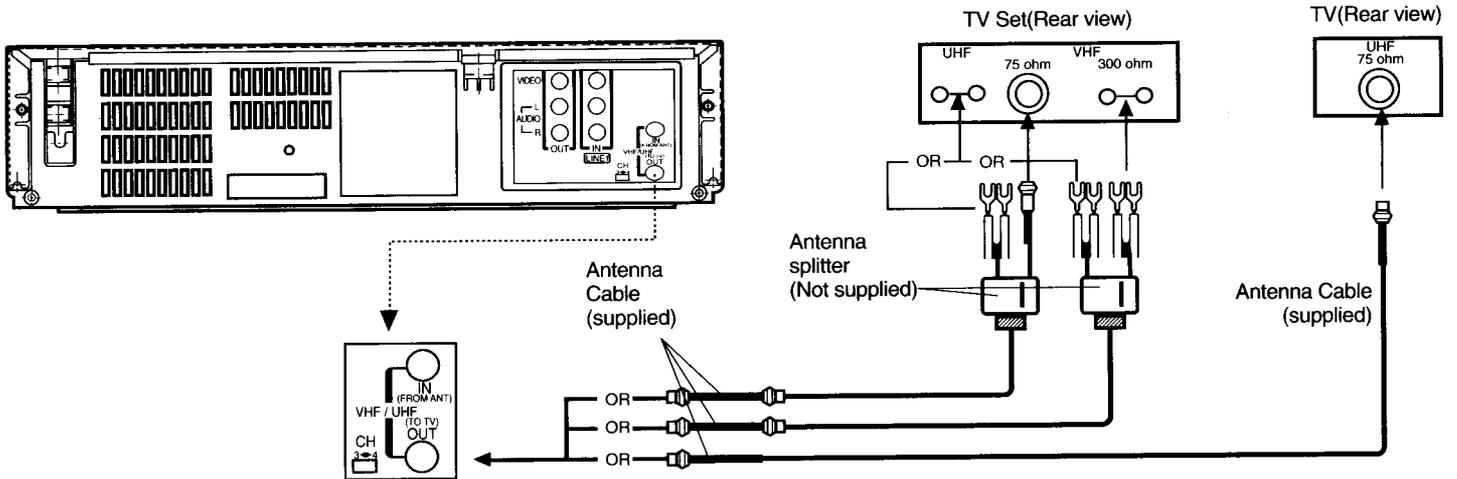

Connection to the TV with "VIDEO IN" and "AUDIO IN" connections

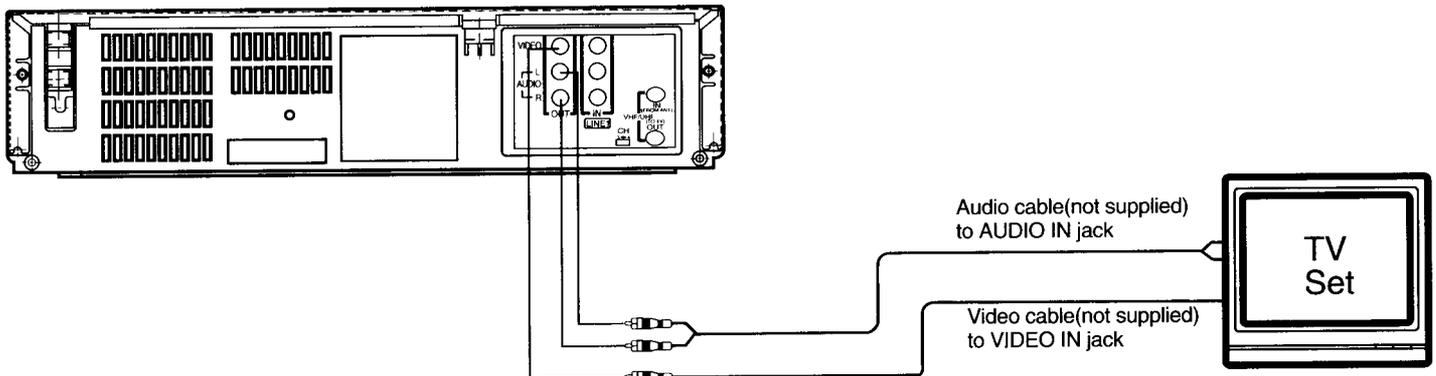


INSTALLATION(continued)

CATV Connections

There are several different systems of cable television at present. Therefore, there may be times when you use this VCR with one of these cable TV services.

We recommend that you consult your cable TV company to make sure that the cable is connected properly to match the cable TV system you want to watch.


To record and watch unscrambled channels

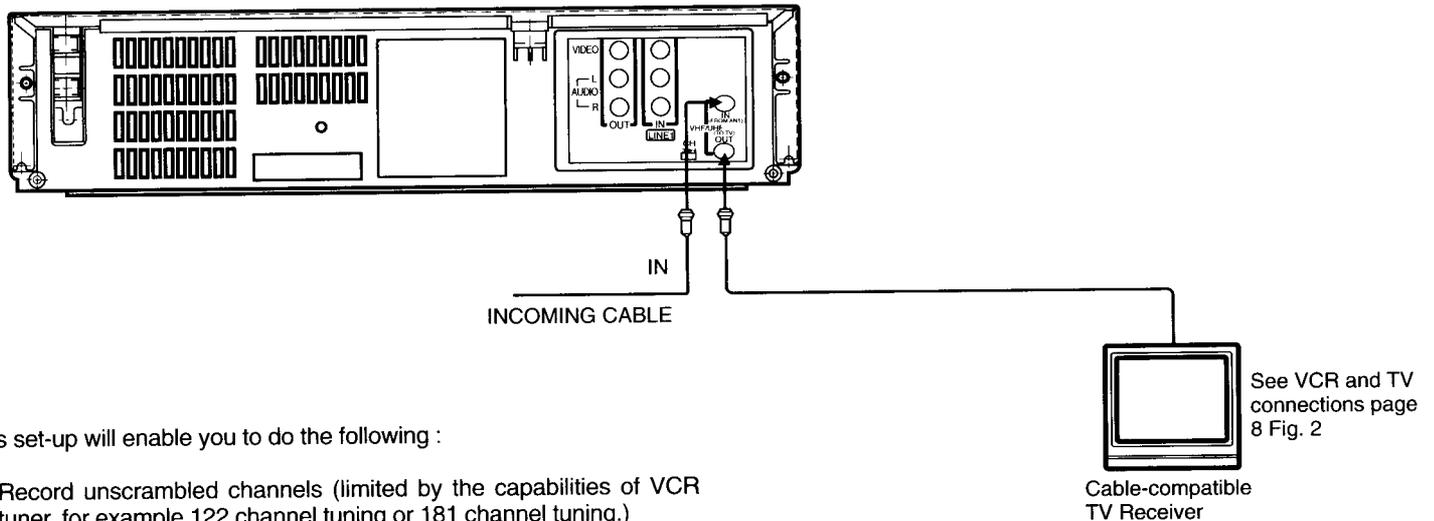

This set-up will enable you to do the following :

- Record unscrambled channels (limited by the capabilities of VCR tuner, for example 122 channel tuning or 181 channel tuning.)
- Record one channel and watch another.
- Use the programmable timer.

To record an unscrambled channel and watch another channel(Scrambled or unscrambled)

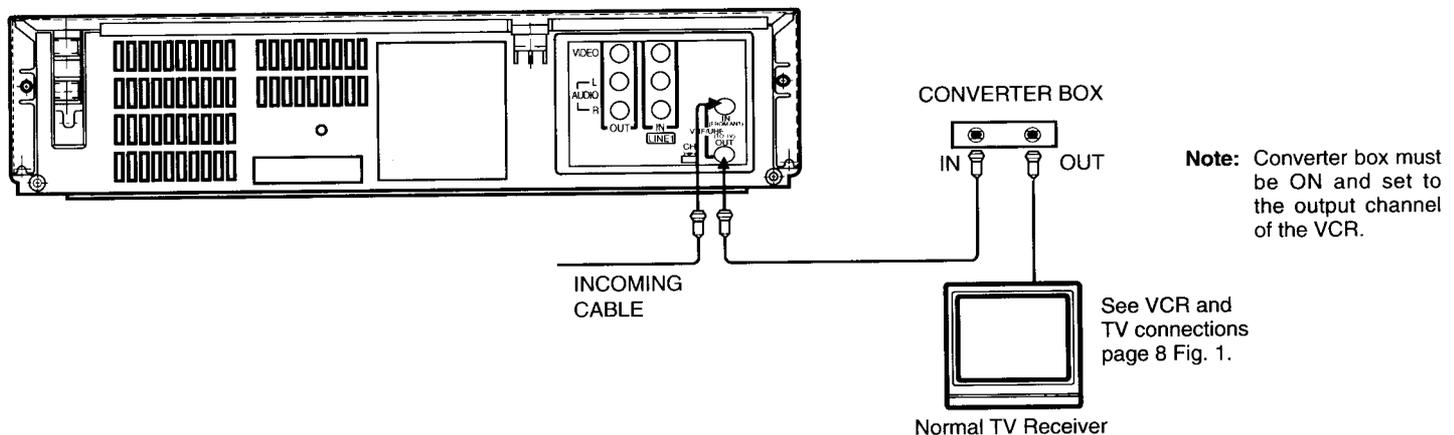

Note: Converter box must be ON and set to the output channel of the VCR.

This set-up will enable you to do the following :


- Record unscrambled channels (limited by the capabilities of VCR tuner, for example 122 channel tuning or 181 channel tuning.)
- Record one channel and watch another.
- Use the programmable timer to record a cable signal.

Notes:

- This set-up will not allow you to record scrambled channels.
- When in playback or when using the VCR tuner (TV/VCR switch in VCR position), the converter box must be set to channel 3 or 4.
- When TV/VCR switch is set to the TV position the converter box can tune into any available channel.

INSTALLATION(continued)

To record and watch the same channel(unscrambled/scrambled)

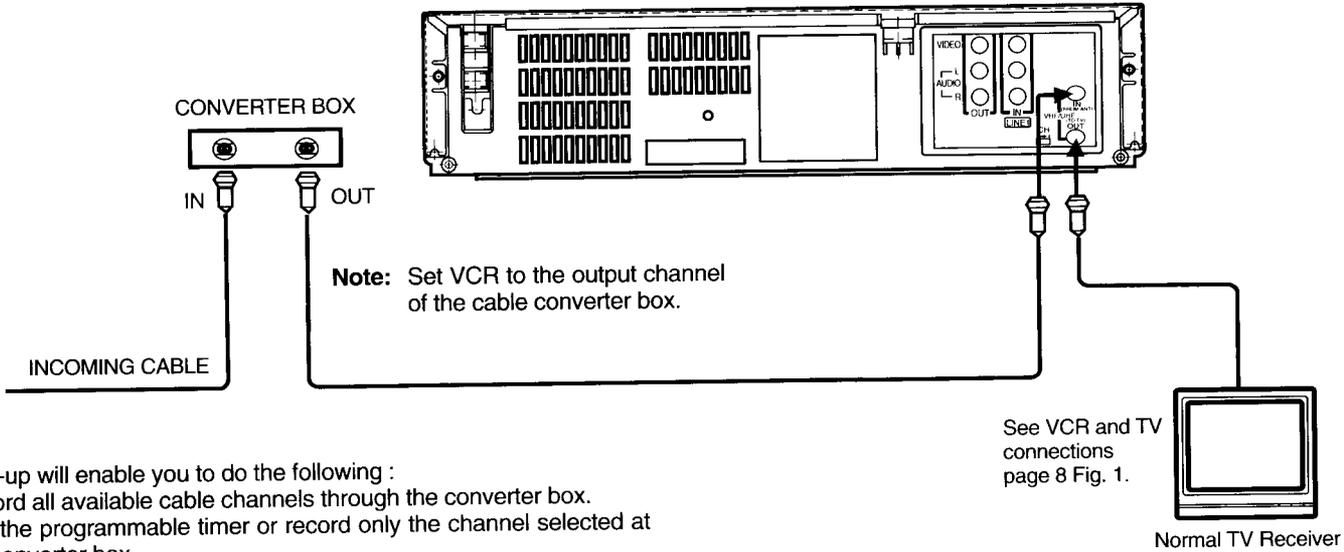


This set-up will enable you to do the following :

- Record all available cable channels through the converter box.
- Use the programmable timer or record only the channel selected at the converter box.

Note: This set-up will not allow you to record one channel and watch another.

To record only an unscrambled channel and watch unscrambled or scrambled channels

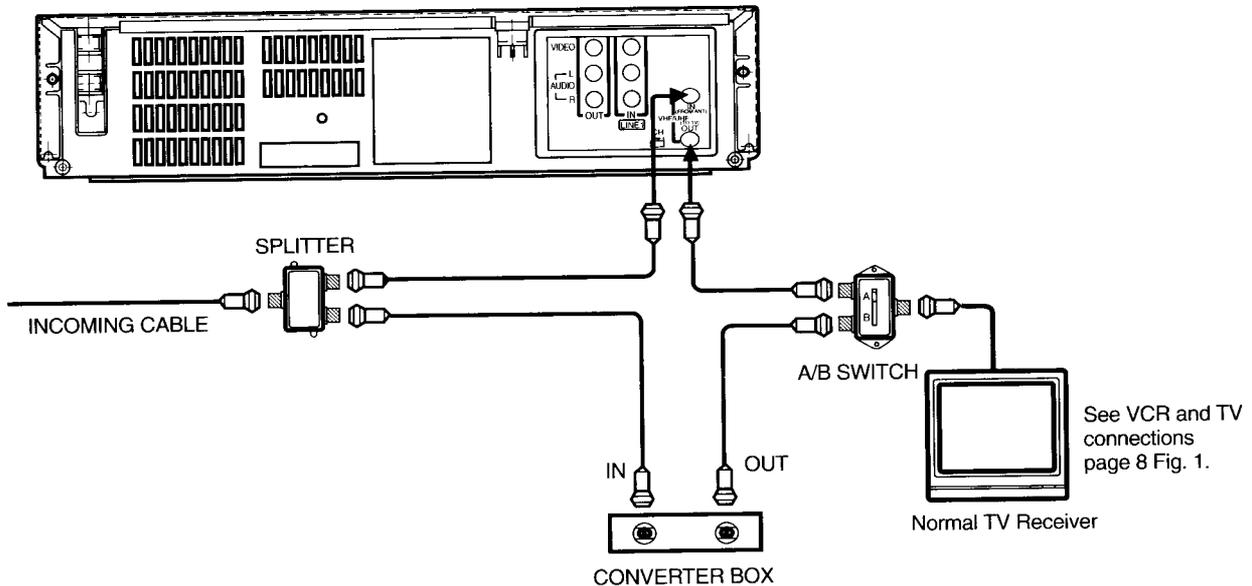

This set-up will enable you to do the following :

- Record an unscrambled cable channel.
- Monitor all cable channels from converter box when A/B switch is in "b" position.
- When one channel and record another.
- Use VCR remote control when A/B switch is in "A" position.
- Use programmable time to record cable signal.

Note: This set-up will not allow you to record scrambled channel.


Notes:

- Select the channel to watch on the converter.
- Set the TV channel selector to output of the converter and VCR.
- This set-up will not allow you to record scrambled channels.

INSTALLATION(continued)

To record and watch the same channel(unscrambled or scrambled)

To record one unscrambled or scrambled channel and watch another unscrambled channel

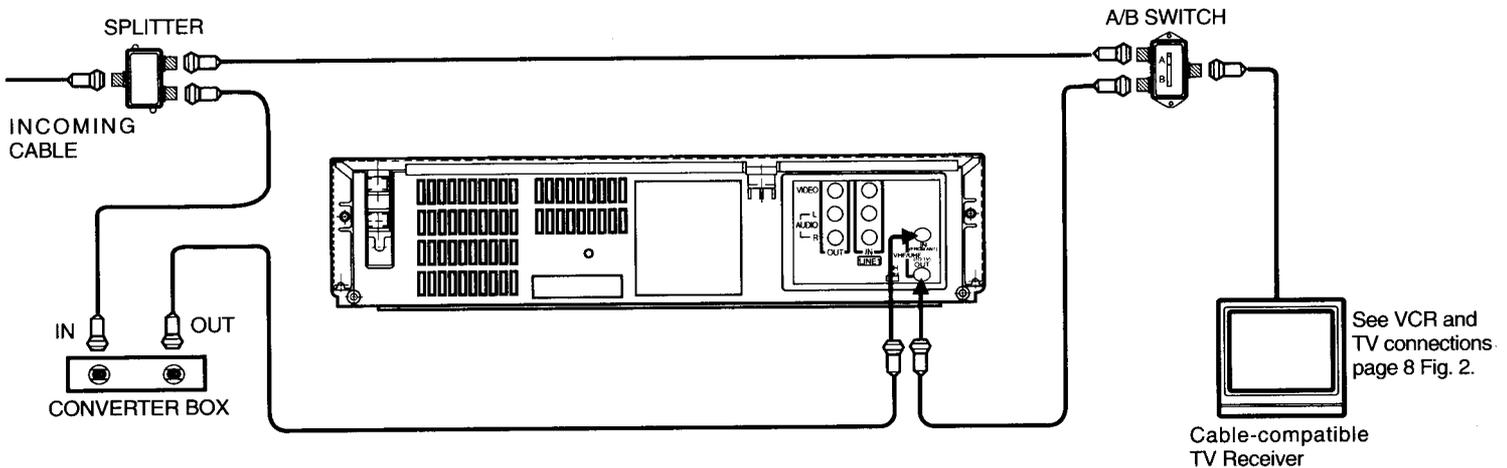

- Notes:**
- Set the VCR channel selector to output Channel of the converter.
 - Select the channel to be recorded on the converter.


- Notes:**
- Set the TV channel selector to output channel of VCR (3 or 4).

This set-up will enable you to do the following.

- Record all cable channels from the converter box.
- Record one scrambled channel and watch another unscrambled channel.

- Use the TV remote control when the A/B switch is in the "A" position.
- Use the programmable timer to record only the channel selected on the converter box. (converter box power must be ON.)

To record and watch a scrambled or unscrambled channel

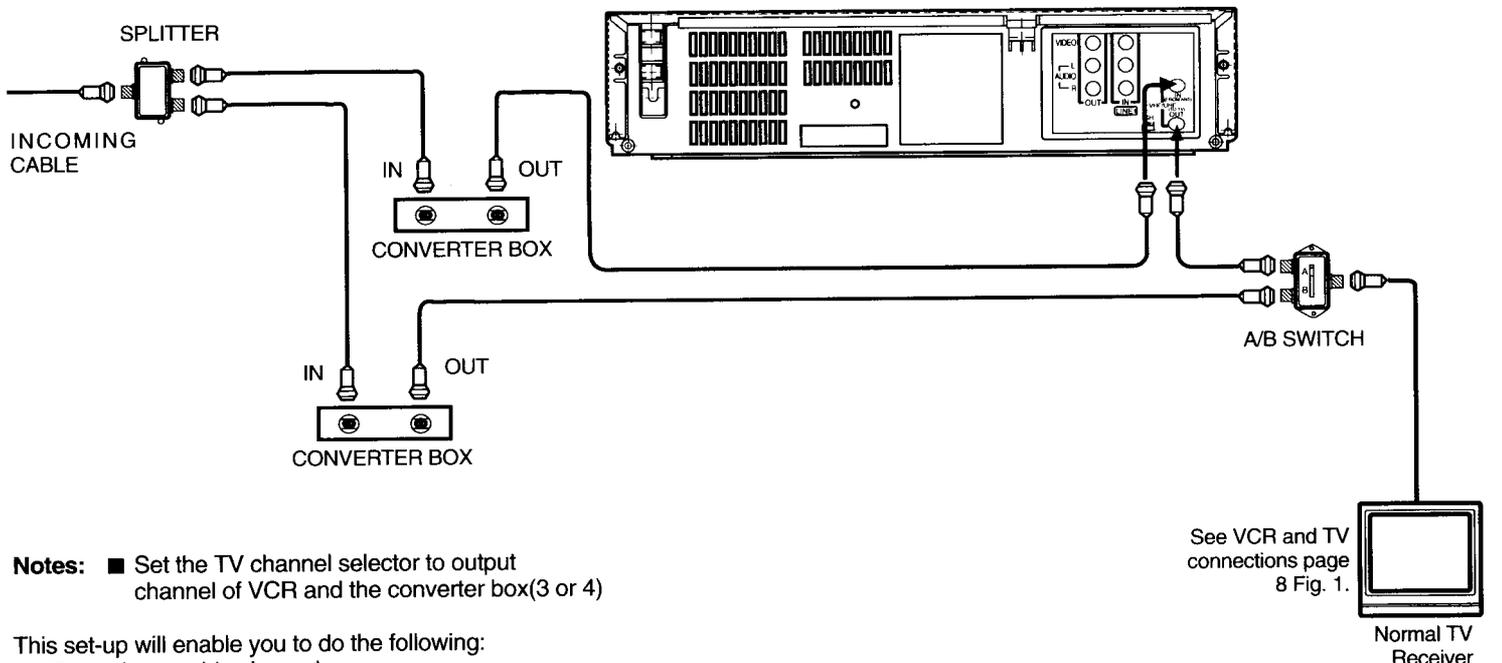

- Notes:**
- Set the TV channel selector to output channel of VCR and the converter box(3 or 4)


This set-up will enable you to do the following:

- Record any cable channel.
- Record one channel and watch another.
- Use programmable timer to record only the channel selected at the converter box.

INSTALLATION(continued)

To record and watch the same channel(unscrambled/scrambled)

To record one unscrambled channel and watch another unscrambled or scrambled channel

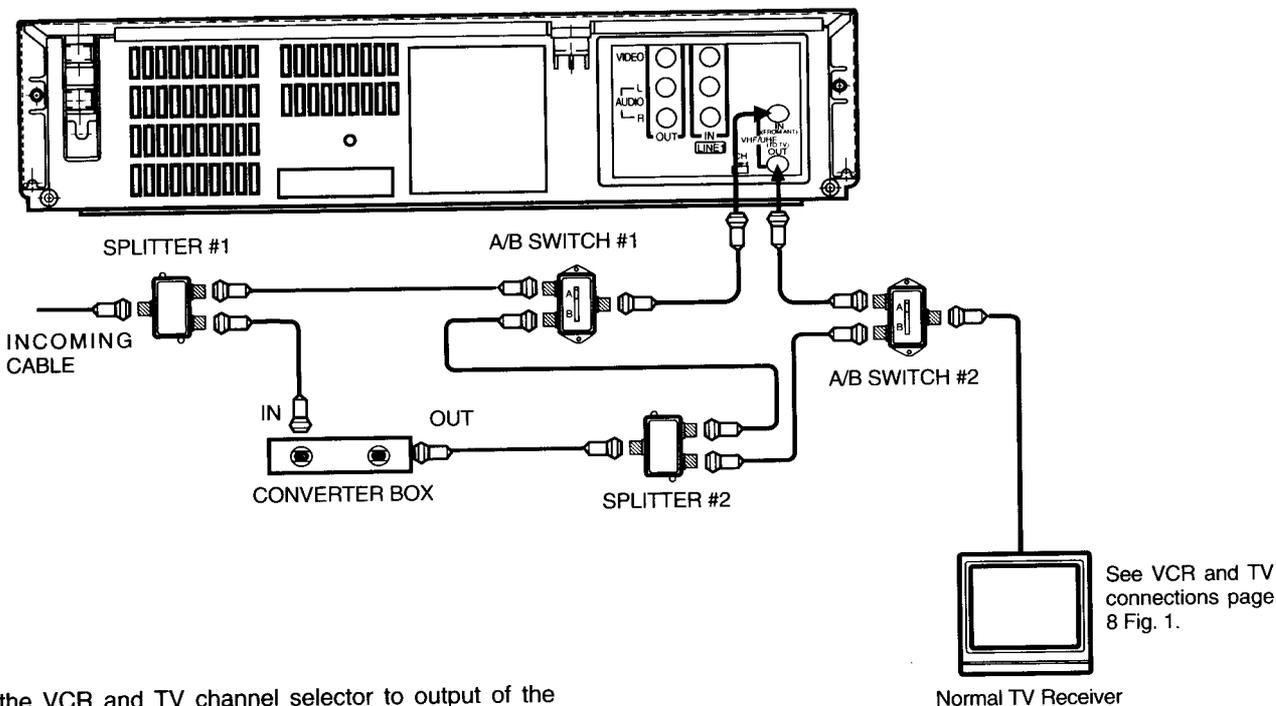

- Notes:**
- Set the VCR and TV channel selector to output of the converter.
 - Select channel to record at the converter.

This set-up will enable you to do the following :

- Record an unscrambled cable channel (A/B switch #1 in "A" position).
- Record all cable channels from the converter box (through splitter #2 and A/B switch #1 "B" position).
- Record one channel while watching another.
- Use the programmable timer when A/B switch #1 is in the "A" position.

"Unscrambled" Cable Channels

Cable companies usually include "Unscrambled" channels in their basic subscription price. Depending on the tuning capability of your TV (how many cable channels your TV is cable of tuning to) you may not need a cable converter box (supplied by the cable company) to view "unscrambled" cable channels on your TV set.

"Scrambled" Channels

Extra (optional) pay cable channels, like HBO and Cinemax in some localities, are often "scrambled" by the cable company. To view these channels on your TV, you must use the cable converter (decoder) box supplied by the cable company.

Cable Converter Box(supplied by Cable Company)

Until recently, all television and VCR receivers were equipped with 69 channel tuners capable of tuning the 12 standard VHF channels (2-13) and the 56 UHF channels (14-69). Since cable television systems do not use the UHF band, once they began expanding beyond 12 channel capacity (some cable companies transmit up to 100

channels) some form of converter became necessary to enable their subscribers to tune in the additional channels. This "cable converter box" rebroadcasts the programs to your TV set or VCR on one designated channel, usually channel 2,3, or 4. When you use a converter box, you will normally change channels using the channel selector on the box. Some cable converters have built-in decoders that translate "scrambled" pay TV channels (i.e. HBO) so they can be used by your TV set.

Cable compatible—either TV or VCR, when cable is connected, can tune to unscrambled cable channels, without the use of a cable converter box. There is a limitation to the tuning mechanism of the TV or VCR. This is usually as 105 channel tuning, 117 channel tuning, 133 channel tuning.

Frequency Conversion—simply means the ability to change one frequency to another (eg. when channel 7 is selected—the converter box takes the channel 7 information and outputs the channel 7 information on channel 3 frequency; for example when channel 11 is selected—the converter box takes the channel 11 information and outputs the channel 11 information on channel 3 frequency). The converter box and the VCR use this principle of frequency conversion.


FIRST-TIME OPERATION

Even if you have never used a VCR before, you can get your VCR connected and working quickly by following the simplified steps below. The page numbers on which you can find detailed instructions for each of these steps are also listed for your convenience.


1. Unpack the VCR and Accessories

Make sure you remove all the accessories and information sheets that came packed with your VCR.


- save the packing materials and box in case you ever need to ship or store your VCR.
- The items shown below came packed with your VCR. If any are missing or appear damaged, contact your TOSHIBA VCR dealer immediately.

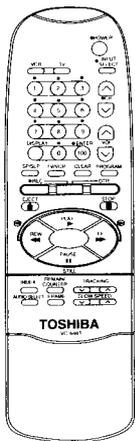

Remote Control

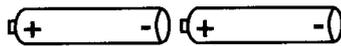

Remote Control Batteries
(Size "AAA" 1.5 Volts)

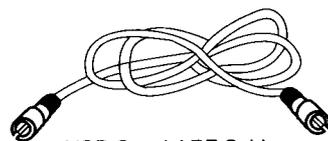

VCR Coaxial RF Cable

Caution: Avoid operating your VCR right after you have moved it from a cold location directly to a warm location. Moisture may have condensed on the head drum inside the VCR that may cause the tape to stick and damage the head wheel or tape. Let the VCR warm up for about 1-1/2 to 2 hours before inserting a video cassette.

2. Install the Batteries in the Remote Control

Turn the remote control over, and remove the cover of the battery compartment. Insert the batteries in the battery compartment so that their positive (+) ends contact the positive terminals. Replace the cover.



Battery
Compartment
cover


Notes: Never place anything heavy on top of the remote control or lay it upside-down. This may accidentally depress the buttons for a long time and discharge the batteries.

Replace the batteries when the VCR fails to respond to the remote control.

Remove the batteries from the remote control if it will not be used for a month or more. This will help prevent possible damage from battery leakage.


3. Connect an Antenna or Cable-TV System to VCR

Your VCR is quite easy to install. To connect an antenna or cable-TV system, you will first be attaching the antenna to the VCR, and then connecting the VCR to the TV as shown below. *Detailed instructions for connecting more complicated types of systems are on page 7-12.*

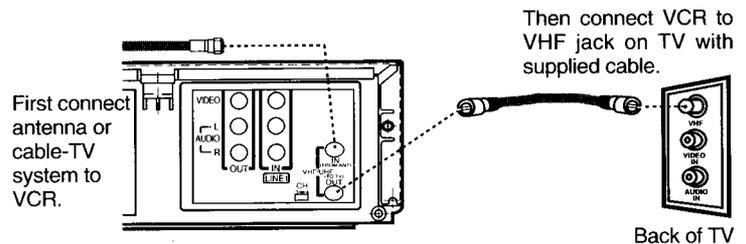

Remember: When you connect the *OUT TO TV* jack on the VCR to the TV as shown above, you will be tuning your TV to channel 3 or 4 to see the signals from the VCR.

Optional for TV Monitors: If your TV is monitor that has *AUDIO* and *VIDEO IN* jacks, you can use optional audio/video cables to connect your VCR to the TV as shown below. This connection may produce a slightly better picture during playback.

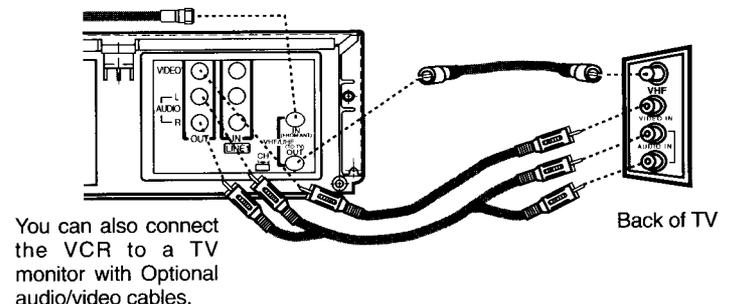



Remember: When you connect the *AUDIO* and *VIDEO OUT* jacks on the VCR to a TV monitor as shown above, you will be tuning your monitor to its video input channel (varies with TV models) to see the signal coming from the VCR. You will also be able to see the VCR's signal on channel 3 or 4.

4. Set the CH4/CH3 Switch on the Back of the VCR to Select the "VCR Channel"

First set the *CH4/CH3* switch on the back of the VCR to either channel 3 or 4, and then tune your TV to the same channel. This is called "VCR Channel"

Remember that your TV must always be turned on and turned to this channel (3 or 4) for you to see what the VCR is doing (unless you have a TV monitor). If you have connected your VCR to a TV monitor with audio/video cables as shown above, set your TV to its proper video input channel (such as 91, etc.) to see what the VCR is doing.

FIRST-TIME OPERATION(continued)

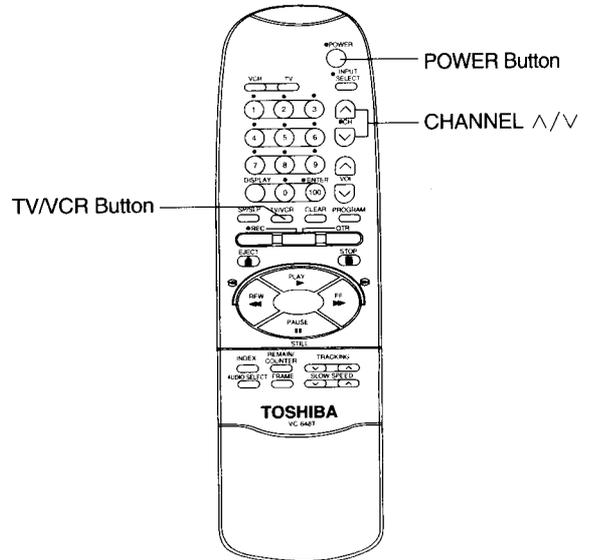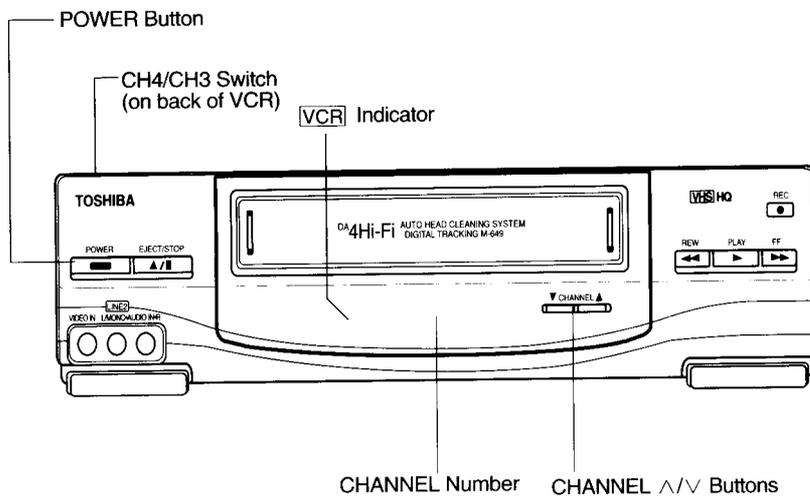

5. Turn on the VCR and Select an Active Channel

- Plug in the VCR's power cord and press the *POWER* button on the VCR (the *POWER* button on the remote control) to turn it on.
- Press the *CHANNEL* up or down button to select and active channel in your area. The channel number will appear in the VCR's display panel.

6. Set the CATV

- See page 15 for "Auto Program Channels into the channel memory."

7. Learn How to Use the TV/VCR Button

Pressing the *TV/VCR* button turns the **VCR** indicator in the display panel on or off. The **VCR** indicator turns on automatically each time you press the *PLAY* button or insert a cassette tape with the safety tab removed.

- When the **VCR** indicator is on, your TV must be tuned to the "VCR Channel" (3 or 4) so you can see what the VCR is doing (unless you have a TV monitor as explained below). The TV then receives the picture from the VCR, and you can select channels with the *CHANNEL* buttons on the VCR (or its remote control).
- When the VCR is turned off (or the **VCR** indicator is off), your TV receives the picture from your home antenna or cable-TV system as it did before you connected the VCR. You can then use the *CHANNEL* buttons on your TV to select channels.
- The *TV/VCR* button lets you record one channel with the VCR while you watch another channel on the TV. *Details are on page 31.*

Note for TV Monitor: Whenever the VCR is turned on, you will be able to see what it is doing on the video input channel if you have connected a TV monitor using the *AUDIO* and *VIDEO* jacks. The signal from the VCR on the video input channel will not be affected by turning off the **VCR** indicator. However, be sure to turn off the **VCR** indicator when you are recording one channel on the VCR and want to watch a different channel on the TV.

8. Test the VCR Connections



1. Turn on the TV and tune it to the "VCR Channel" (3,4, or video input).
2. Turn on the VCR and select an active channel using the *CHANNEL* buttons on the VCR (or VCR's remote control).
3. If your "VCR Channel" is 3 or 4, make sure the **VCR** indicator is on in the VCR's display panel. Press the *TV/VCR* button to turn it on.

Note: If you have connected your VCR to a TV monitor using the *AUDIO* and *VIDEO* jacks, tune your TV to the video input channel. The **VCR** indicator does not have to be on for this connection.

Test 1: Make sure the TV's picture and sound are from the channel you have selected on the VCR and of the same quality they were before you connected the VCR. Change channels on the VCR with the *CHANNEL* buttons on the VCR (or the VCR's remote control). If the picture on the TV does not change to the channel you select with the VCR, go back and carefully check the connections and previous steps.

Test 2: Turn off the VCR, and change channels on the TV with the TV's *CHANNEL* buttons. Make sure the picture and sound you see on the TV and from the channel you selected on the TV and of the same quality they were before you connected the VCR. If the TV does not operate as it did before you connected the VCR, go back and carefully check the connections.

FIRST-TIME OPERATION(continued)

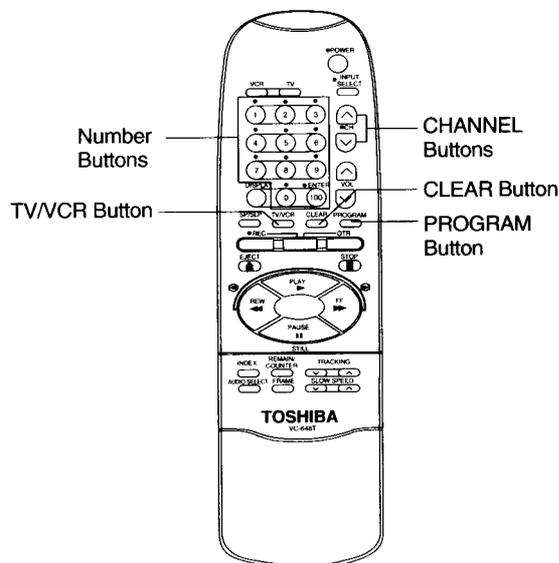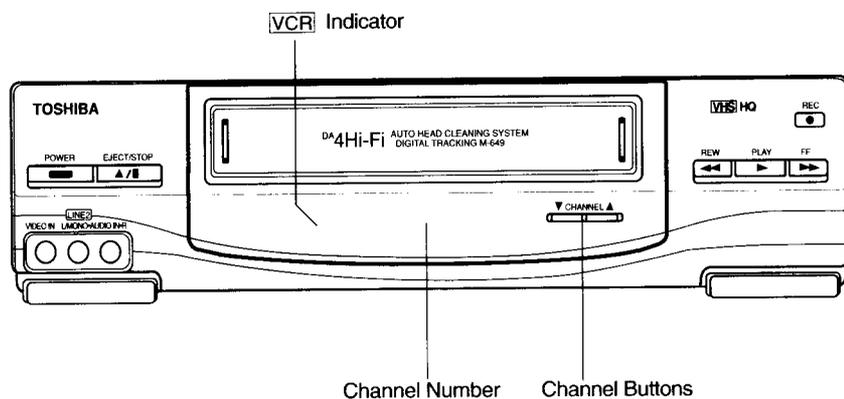

9. AutoProgram Channels into the Channel Memory

The channel memory is the list of channels your VCR will stop on when you press its *CHANNEL* up or down button. The quickest way to program the VCR's channel memory with channels in your area, is to use the autoprogram feature. The VCR will automatically cycle through all channels and place all active channels into its channel memory for you. You can then add or erase individual channels as desired.

Here is how to start the autoprogramming feature :

1. Make sure the VCR and TV are turned on and the TV is tuned to its "VCR Channel" (3,4 or video input). If you are watching the VCR on channel 3 or 4 of your TV, make sure the VCR indicator is on in the VCR's display panel.
2. Press the *PROGRAM* button on the remote control and then press number "4" button to display the following menus.

First Press the
PROGRAM
Button

Then
Press "4"

MENU

1 CLOCK SET
2 TIMER PROGRAM
3 PROGRAM REVIEW
4 VCR SET UP
5 ENGLISH/ESPAÑOL
/FRANÇAIS

PUSH NUMBER TO CHANGE

1 NORMAL/CATV (NORMAL)
2 AUTO PROGRAM
3 ADD/ERASE CHANNEL
4 EDIT (OFF)
5 T120/160/180 (120)
6 AUTO REPEAT (OFF)
7 S-A-P (OFF)
TO END PUSH PROGRAM

3. Before you start AutoProgramming, you must tell your VCR whether you have an antenna or a cable-TV system connected to it. Press number "1" button to change the setting of the NORMAL/CATV display.
 - If you connected a home-antenna system to your VCR, set this display to NORMAL.
 - If you connected a cable-TV system to your VCR, set this display to CATV.

4. After you have selected NORMAL or CATV, press number "2" button while the menu appears on the TV to start the VCR autoprogramming itself.

Note: The VCR will automatically cycle through all the channel numbers and place only the active channels into its channel memory. This takes about one to two minutes. The channel numbers will stop changing in the VCR's display panel when the autoprogramming is completed.

Autoprogramming is usually a one time procedure. If you move to a new location that has different channels or if power is interrupted for an extended period (about one minute), the channel memory will have to be reprogrammed.

5. After the VCR has finished AutoProgramming you can press the *CHANNEL* up or down button to see what channels are in channel memory.

Notes: Occasionally an active channel may be missed if the signal is weak or the channel happens to be "off the air" when the VCR is autoprogrammed.


An inactive channel may be included in channel memory if there is some "noise" or stray signal on the channel during AutoProgramming.

FIRST-TIME OPERATION(continued)

9. AutoProgram Channels(continued)

To add or erase channels from channel memory:

1. Press the *PROG* (program) button on the remote control, then press number button "4", then press number button "3". The following menus will appear on the TV screen.

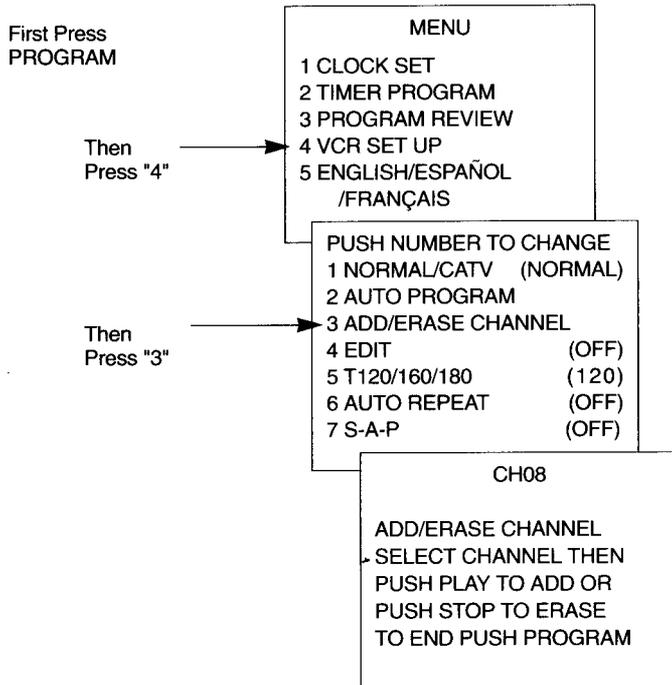

- To add a channel (up to 99) to channel memory, first select the channel you want to add by pressing two number buttons on the remote control. Remember to always press "0" before a single-digit channel number. (For example, press "0" then "8" for channel 8.) Then press the *PLAY* button on the remote control. To add cable-TV channels over 99, press the "100" button and then two number buttons.

- To erase a channel, first press the *CHANNEL* up or down button (or number buttons) to select the channel you want to erase. Then press the *STOP* button on the remote control.


2. When finished, press the *PROGRAM* button on the remote control.

Note: You can still select a channel that is not in channel memory by pressing two number buttons for channels up to 99, or the "100" button and two more number buttons for cable TV channels over 99.

10. Set the Clock and Date

The clock display area in the VCR's display panel will look like "- : - -" until you set the clock. The clock must be set to the correct time before you can program the VCR for timer recordings. Once the correct time and date are set, the VCR will automatically maintain them unless power is interrupted.

To set the clock and date, press the *PROG* (program) button on the remote control, then press number button "1". The following menu will appear on the TV screen.

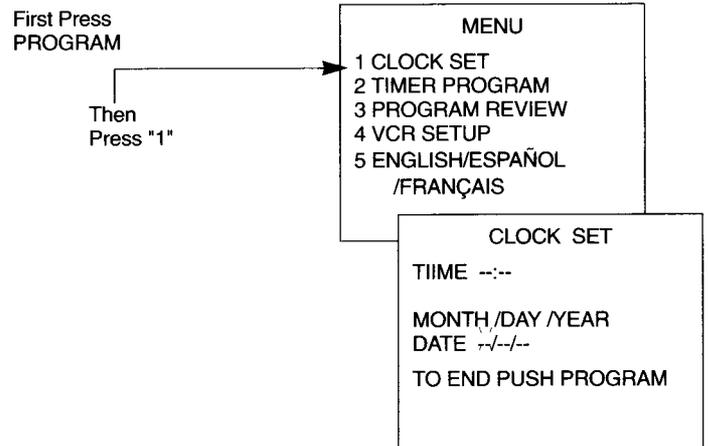

When the *CLOCK SET* menu appears, use the number buttons on the remote control to enter the correct time (including *AM* and *PM*) and date as indicated by the flashing portion of the menu on the TV screen.

Notes: Always press "0" before single-digit hours, minutes, months, or days. For example, to enter a time of 5:07, press "0", the "5" the "0", then "7". To enter august 2, 1993, press "0", then "8", then "0", then "2" then "9", then "3".

Press the number button "1" for *AM* or "2" for *PM*.

When you are finished, press the *PROGRAM* button to start the clock.

To Correct The Time or Date :

If you enter an impossible time or date (13th month for example), a question mark will appear instead of the impossible entry. Enter the correct digit to replace the number.

If a wrong number appears in the time or date, press the *CLEAR* button repeatedly until the incorrect number flashes. Then enter the correct number and continue from there.

FIRST-TIME OPERATION(continued)

11. Make a Recording and Play It Back



Follow the steps below to practice making a short recording and then play it back.

Details on recording speeds, features, and recording guides are on pages 30-39.

Details on playback features and playback guides are on pages 27-29.

Several buttons on the remote control perform the same function as buttons with the same name on the VCR. You may use whichever button is more convenient at the time.

Details on the operating controls of the VCR and remote control are on pages 19 and 21-22

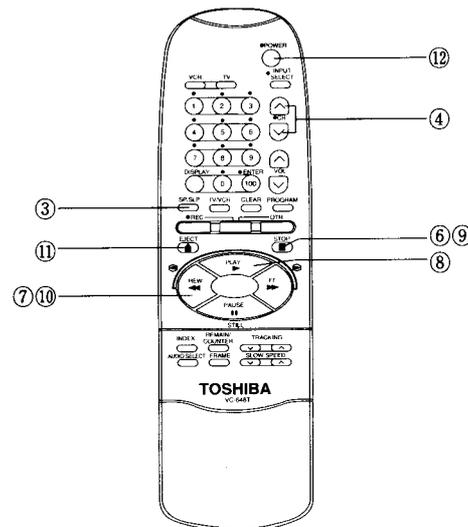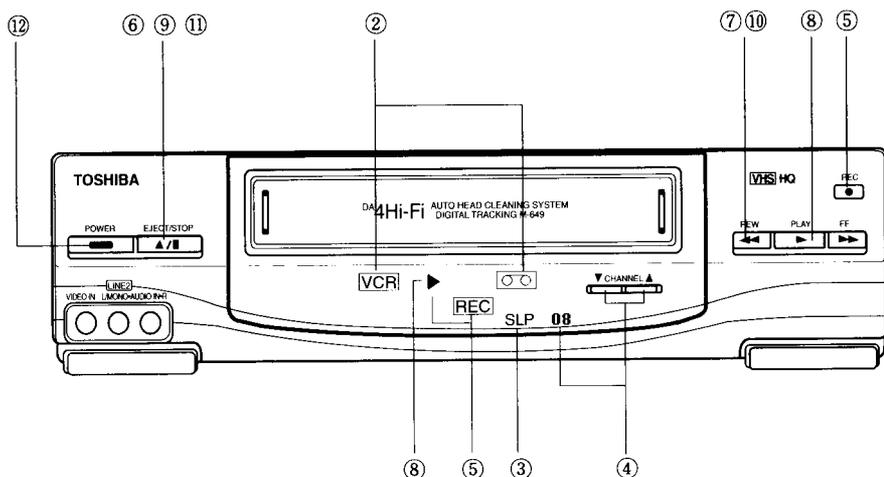

To make a recording :

- 1 Turn on the TV and tune it to you "VCR Channel" (3*, 4*, or video input).

* The TV must be tuned to the same channel you selected with the CH4/CH3 switch on the back of the VCR.

- 2 Insert a cassette with the record-protect (safety) tab intact. The cassette-in indicator  will light in the VCR's display panel. Details about inserting and removing cassettes are on page 26. **Notes:** The VCR is automatically turned on when you insert a cassette.

If you insert a cassette with its record-protect (safety) tab removed, the VCR will automatically begin playback.

If a cassette without a record-protect (safety) tab is inserted, the VCR ejects it when you press the REC button. Details about the record-protect (safety) tab are on page 26.

Make sure the  indicator appears in the VCR's display panel not, press the TV/VCR button to turn it on.

- 3 Select a tape recording speed by pressing the SP/SLP button. The tape speed indicator (SP or SLP) appears in the VCR's display panel. Use SLP for normal recording. Tape recording speeds are compared on page 26. **Note:** The VCR automatically selects the correct tape speed for playback.

- 4 Select the channel to be recorded by pressing the CHANNEL up or down button. The channel number appears in the VCR's display panel and on the TV screen.

- 5 Start recording by pressing the REC button. The record indicator ( and ) will light in the VCR's display panel.

- 6 When you are finished recording, press the EJECT/STOP button on the VCR (or the STOP button on the remote control).

To play the recording back:

- 7 Rewind the tape by pressing the REW button on the VCR (or the REW button on the remote control). If you do not want to play back the tape, skip to step 11.

- 8 Press the PLAY button to begin playback. The play indicator () will light in the VCR's display panel.

- 9 When you are finished playing back the tape, press the EJECT/STOP button on the VCR (or the STOP button on the remote control).

- 10 Rewind the tape by pressing the REW button on the VCR (or the REW button on the remote control).




- 11 To eject the cassette, press the EJECT/STOP button on the VCR (or the EJECT button on the remote control).

- 12 Turn off the VCR by pressing the POWER button on the VCR (or the POWER button on the remote control).

- 13 Turn off the TV.

VCR'S OPERATING CONTROLS AND FEATURES

VCR Jack Panels

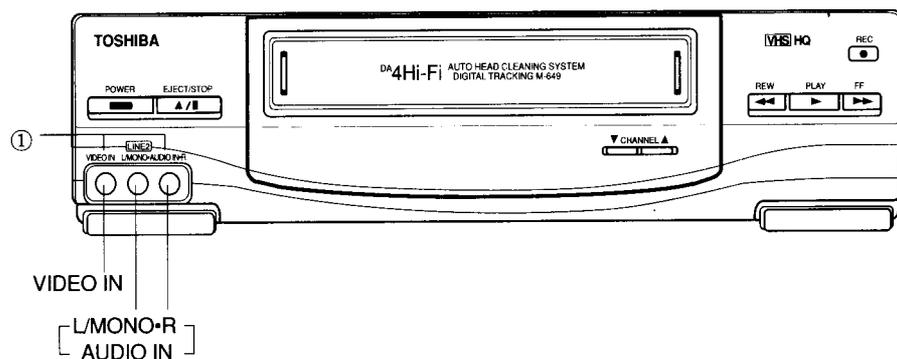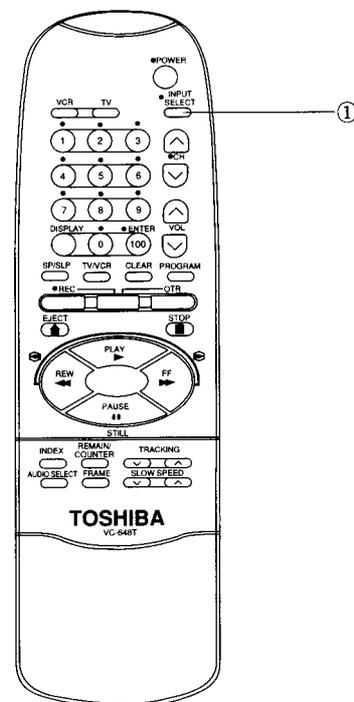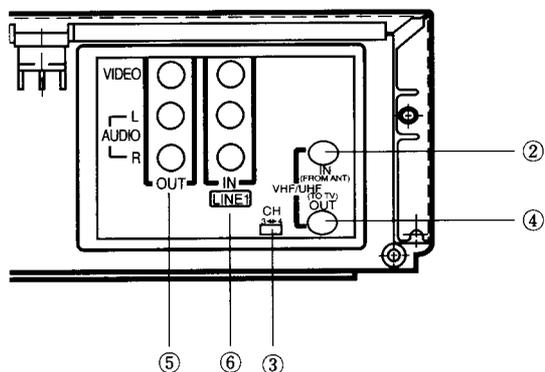

① AUDIO IN and VIDEO IN Jacks of the VCR's front panel

- These jacks are used to receive signals from another device (such as a camcorder or another VCR).
- To see the signal from these jacks, press the *INPUT SELECT* button to light the "L2" in the VCR's display panel.
- At the same time you can find the "LINE2" on the TV screen. Using *INPUT SELECT* button on the remote control.
- See page 37 for "Recording From a Camcorder".
- See page 38 for "Recording From Another VCR".

② IN FROM ANT (Antenna) Connector

- Attach a home antenna or cable-TV system to this connector.
- See pages 7-12 for home antenna connections.
 - See pages 9-12 for cable-TV connections.

③ CH3/CH4 Switch

- Whatever channel you select with the CH4 or CH3, switch is the same channel to which you must tune your TV to see what the VCR is doing.
- See page 13 for details.

④ OUT TO TV Connector

- Connect the supplied VCR coaxial RF cable to this connector. Then connect the cable to your TV.
- See page 7-12 for home antenna connections.
 - See page 9-12 for cable-TV connections.

⑤ AUDIO OUT and VIDEO OUT Jacks


- These jacks are used to send signals from the VCR to another device.
- See page 38 for "Recording From Another VCR".
- See page 45 for "Copying VCR Recording."

⑥ AUDIO IN and VIDEO IN Jacks of the VCR's rear panel

- It has the same function as explained in ①.
- Note:** To see the signal from these jacks, press the *INPUT SELECT* button to light the "L1" in the VCR's display.

VCR'S OPERATING CONTROLS(continued)

VCR's Operating Controls

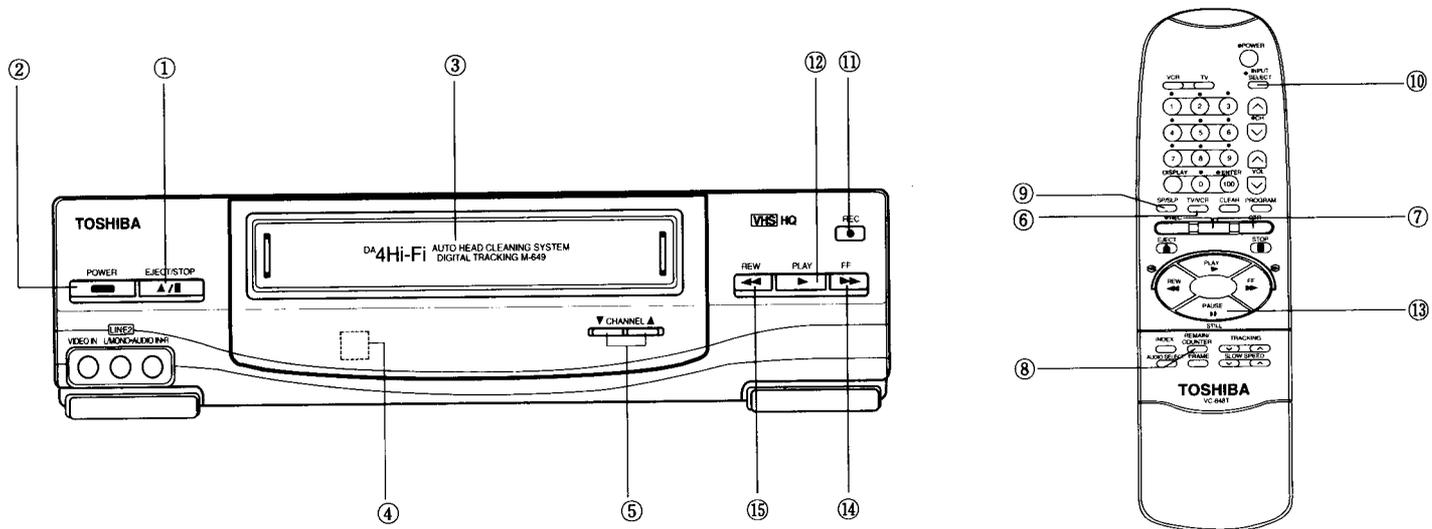

① EJECT/STOP Button

- Press this button to stop the normal functions of recording, playback, rewinding, fast-forwarding, recording pause or still.
- Press this button when the VCR is stopped to eject the cassette. (See page 26.)

② POWER Button

- Press the **POWER** button to turn the VCR on or off.
- The VCR will stop and turn off if you press the **POWER** button during normal recording, playback, rewind or fast-forward operation.
- If you want to stop a normal timer recording, or one touch recording (OTR), press the **POWER** button.

③ Cassette Door (See page 26.)

④ Infrared Remote Sensor

This sensor receive signals from the remote control. Aim the remote control at this sensor. There cannot be any obstructions between them.

⑤ CHANNEL ▲/▼ Buttons

- After channels have been autoprogrammed into the channel memory scan list, press these buttons to select the next higher or lower channel.
- Press **CHANNEL ▲** to select a higher channel.
 - Press **CHANNEL ▼** to select a lower channel.

⑥ TV/VCR Button

Press the **TV/VCR** button to turn the **VCR** indicator in the VCR's display panel on or off (See page 14.)

⑦ OTR (One Touch Recording) Buttons (See page 32.)

⑧ REMAIN/COUNTER Button

Press this button to switch between the linear time counter and the remaining amount of tape in a display mode. (See page 44.)

⑨ SP/SLP Button (See page 30.)

⑩ INPUT SELECT Button

- Press one time to turn on the L1 indicator in the VCR's display panel to record from **AUDIO** and **VIDEO IN** jacks on the VCR's rear panel.
- Press again to turn on the L2 indicator in the VCR's display panel to record from **AUDIO** and **VIDEO IN** jacks on the VCR's front panel for normal recording. (L1=LINE INPUT 1, L2=LINE INPUT 2)

⑪ REC Buttons

Press to begin recording. (See pages 30-38.)

⑫ PLAY Button

Press to begin playback. (See pages 27-29.)

⑬ PAUSE/STILL Button

- Still frame (See page 28.)
- Recording pause (See page 39.)

⑭ FF (Fast-Forward) Button


- Press to fast-forward the tape when the VCR is in the stop mode or the forward search mode.
- Press to operate the forward search in the play mode or the fast-forward mode.
- Keep pressing to operate the forward ACCEL search in the play mode or the forward search mode. (See page 28.)

⑮ REW Button

- Press to rewind the tape when the VCR is in the stop mode or the reverse search mode.
- Press to operate the reverse search in the play mode or the rewind mode
- Keep pressing to operate the reverse ACCEL search in the play mode or the reverse search mode. (See page 28.)

VCR'S OPERATING CONTROLS(continued)

VCR's Display Panel

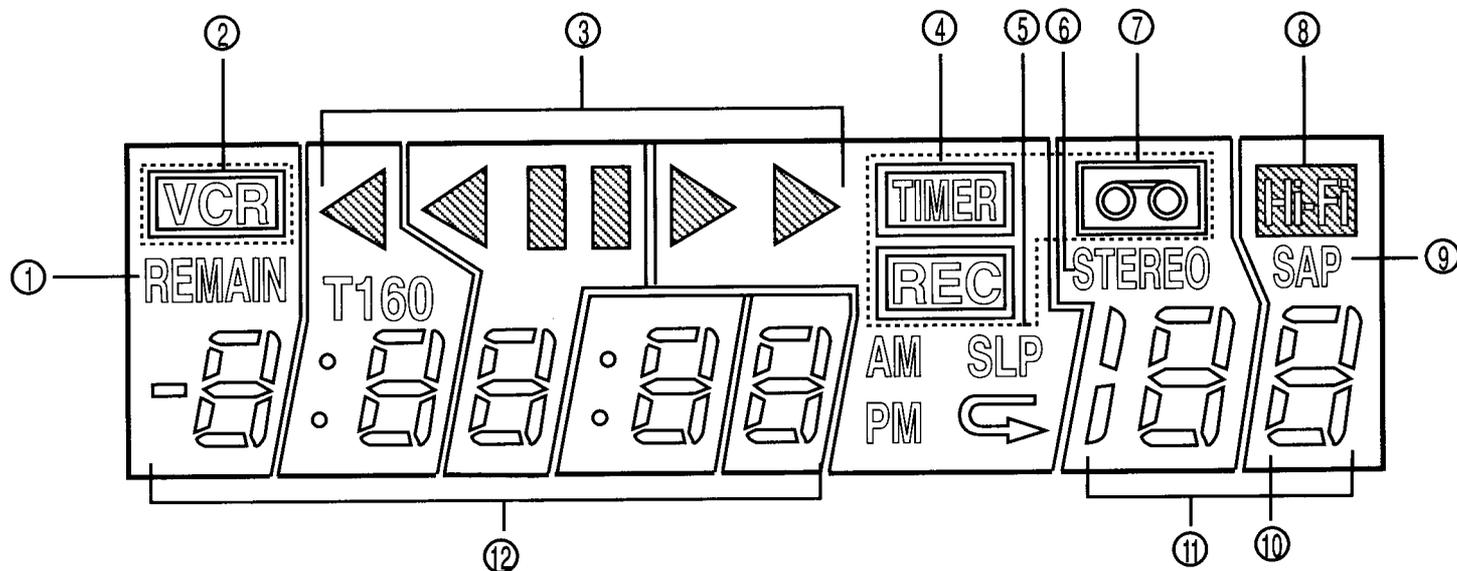

① REMAIN indicator

This indicator lights when the display function to indicate the remaining time on the tape is operating.

② VCR Indicator

(See page 14.)

③ Status Indicators

This area of the display shows what the VCR is doing.

- REC ► for record
- ► for playback,
- flashing ► for double speed playback
- ◀◀ for rewind
- ►► for fast forward
- flashing ►► for forward search and forward ACCEL search
- flashing ◀◀ for reverse search and reverse ACCEL search
- ■■ and REC for record pause
- ■■ for still frame
- ■■ and flashing ► for frame advance and slow motion.
- This area is blank when the VCR is in the stop mode.

④ TIMER Indicator

(See pages 32-36.)

⑤ Tape Speed Indicators (SP/LP/SLP)

(See page 26.)

⑥ STEREO Indicator

(See page 45-46.)

⑦ Cassette-in Indicator

⑧ Hi-Fi Indicator

Each time AUDIO SELECT button is pressed, the on screen display changes as below.

L R → L → R → MONO

↑
Hi-Fi indicator lights up. Hi-Fi indicator lights off.

⑨ SAP Indicator

(See Page 45-46.)

⑩ LINE Indicator

Press the *INPUT SELECT* button to turn the "L1(L2)" indicator on or off in the display panel.

- Turn the "L1(L2)" indicator off for normal recording from the VCR's built-in tuner.
- Turn the "L1(L2)" indicator on to record from another component (such as a camcorder or another VCR) connected to the *AUDIO* and *VIDEO IN* jacks on the VCR.

⑪ Channel Number Display

The channel number selected is displayed in this area.

⑫ Time and Time Counter Display

Press the *DISPLAY* button on the remote control to switch between the current time and the linear time counter.

- See page 16 for "Set the Clock and Date."
- See page 29 for "Time Counter with Memory-Stop Feature".

Notes:

- Those indicators marked multifunctional are sections of the multidisplay which serve a number of purposes. In other words, a number of different symbols appear in the same place according to the buttons you press. This will become clearer as you actually begin using this VCR.

VCR'S OPERATING CONTROLS(continued)

Remote Control Buttons that Control the VCR

When using the remote control, always aim it directly at the front of the component you are trying to control. This remote control can control TOSHIBA VCR and a compatible TV.


To control a different component, first press the corresponding (TV or VCR) button.

To operate the remote control, first press one of the component buttons (TV or VCR) to tell the remote control which component you want to control. The other buttons on the remote control will then

control that component. Only the buttons that control the VCR are explained here. Buttons that control a compatible TV are explained on pages 23-24.

VCR Button: If you press the VCR button, the remote control will go into the "VCR mode" and control the VCR.

The remote must be in the "VCR mode" before the other buttons will control the VCR.

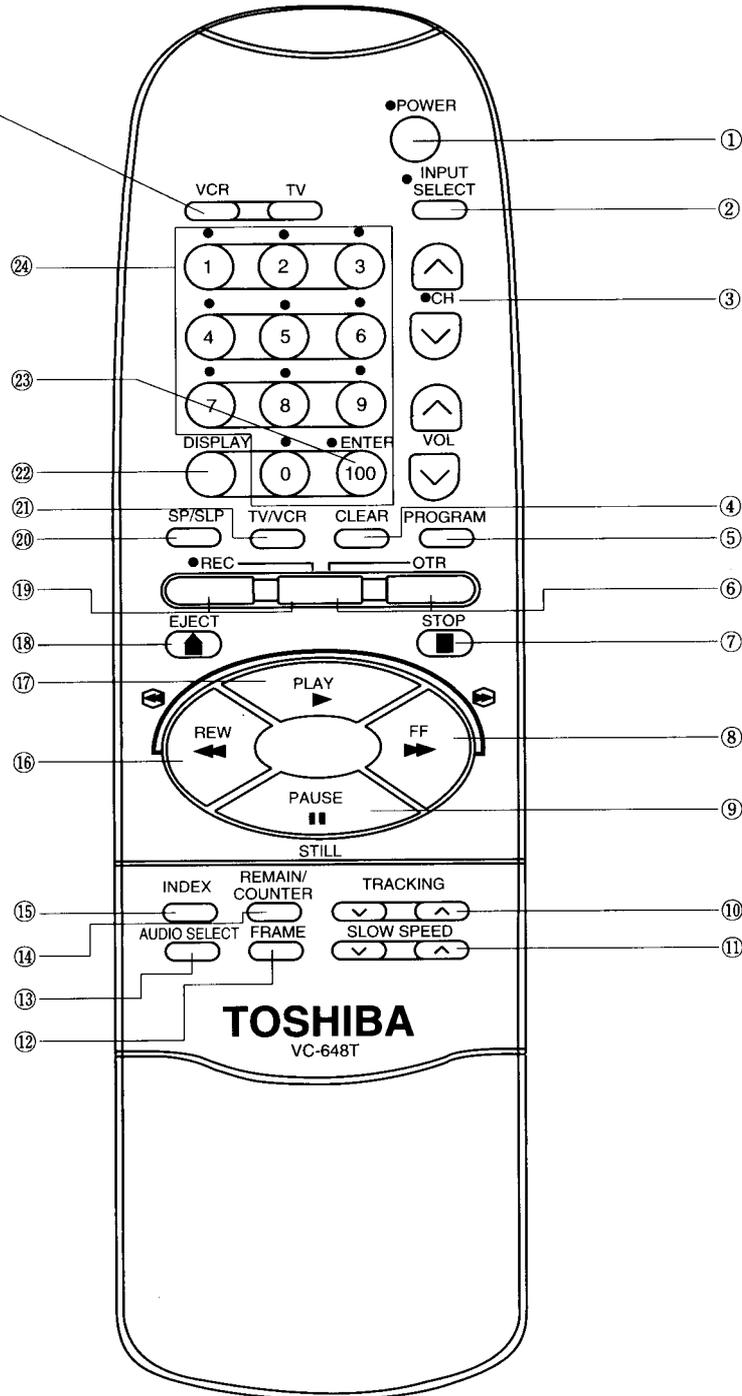

VCR'S OPERATING CONTROLS(continued)

① **POWER Button**

- Press the *POWER* button to turn the VCR on or off.

② **INPUT SELECT Button**

Press the *INPUT SELECT* button to select the INPUT signal. Each time this button is pressed, the on screen display changes as below.

TV (Channel No.) → LINE1 → LINE2 → SIMUL
↑

③ **CHANNEL ^/V Buttons**

Press the *CHANNEL ^* button to select the next higher channel or press the *CHANNEL v* button to select the next lower channel in the VCR's channel memory. (See pages 15-16.)

④ **CLEAR Button** (See pages 16, 29 and 33-35.)

Press the *CLEAR* Button to return the counter to 0:00:00 on the screen.

⑤ **PROGRAM Button**

Press the *PROGRAM* button to display the program menu on the TV screen for setting the clock, programming the timer, reviewing the program and setting up the VCR.

⑥ **OTR (One Touch Recording) Button**

Press these OTR buttons to start OTR. (See page 32.)

⑦ **STOP Button**

Press this button to stop the normal functions of record, play-back, rewind, fast-forward, record-pause, or still frame.

⑧ **FF (Fast-Forward) Button**

- Press to fast-forward the tape when the VCR is in the stop mode or the forward search mode.
- Press to operate the forward search in the play mode or the fast-forward mode.
- Keep pressing to operate the forward ACCEL search in the play mode or the forward search mode. (See page 28.)

⑨ **PAUSE/STILL Button**

- Playback pause (See page 28.)
- Recording pause (See page 39.)

⑩ **TRACKING (TRACK) v/^ Buttons**

(See pages 28, 38 and 37.)

⑪ **SLOW SPEED ^/V Buttons** (See page 28.)

⑫ **FRAME(Frame Advance/Skip Search) Button**

(See pages 28 and 43.)

⑬ **AUDIO SELECT Button**

(See page 46.)

⑭ **REMAIN/COUNTER Button**

Press to switch between the linear time counter and the remaining amount of tape in a display mode. (See page 44.)

⑮ **INDEX Button** (See pages 40-42.)

⑯ **REW Button**

- Press to rewind the tape when the VCR is in the stop mode or the reverse search mode.
- Press to operate the reverse search in the play mode or the rewind mode.
- Keep pressing to operate the reverse ACCEL search in the play mode or the reverse search mode. (See page 28.)

⑰ **PLAY Button**

Press to begin playback or double speed playback. (See page 27-29)

⑱ **EJECT Button**

Press to eject the tape in the VCR.

⑲ **REC Button**

Press these *REC* and *Dummy* buttons together to start recording. (See pages 30-31.)

⑳ **SP/SLP Button** (See page 30.)

㉑ **TV/VCR Button** (See page 14.)

㉒ **DISPLAY Button** (See page 29.)

㉓ **CH 100 Button (in the "CATV mode")**

To select channels 100 through 125, the ⑩ button must be used.

Example; press the CH100 button, ② and ④, channel 124 will be selected immediately. If the second digit is not pressed within two seconds, channel "100" will be selected. If the third digit is not pressed within two seconds, channel 102 will be selected.

㉔ **Number Buttons ("0" through "9" and "100")**

- To select any channel up to 99, press two number buttons (ex : To select 9 CH, press 0 9 buttons).
- To select a cable-TV channel over 99, press the "100" button and then two number buttons (ex : To select 103 CH, press 100, 0, 3 buttons)
- The number buttons are also used with the VCR's special features.

VCR'S OPERATING CONTROLS(continued)

Remote control Buttons That Control a TV

The digital remote control that came packed with your VCR controls your VCR and some functions of a compatible TOSHIBA TV. The remote can also be programmed to control some functions of up to 30 different compatible TV brands (including GE, SONY, MAGNAVOX, SEARS, HITACHI, PANASONIC, MITSUBISHI, RCA and others).

To find out if your TV is compatible, follow the instructions below. If the TV responds to one of the button combinations shown in the chart below, it is compatible.

Programming the VCR Remote to Control a compatible TV(Other Than TOSHIBA)

Because the remote control is designed to operate 14 different types of TV's (up to 30 different brands), you must first program the remote control to match the remote system of your TV. Follow these four easy steps :

1. Turn on your TV.
2. Point the VCR's remote control toward the front of your TV.
3. Hold down the TV button while pressing one of the other buttons shown in the chart below. The TV will change channels when the correct matching button combination is pressed. Try each of the combinations until you find the right one.

4. Release both buttons when the TV start changing channels. Your remote control is now programmed to control your TV.

Notes: The remote control is designed to control some functions of up to 30 different brands (including TOSHIBA, GE SONY, MAGNAVOX, SEARS, HITACHI, PANASONIC, and MITSUBISHI). However, it will not operate all TV's made by these manufactures. If your TV does not respond to any of the button combinations, the TV probably cannot be controlled by this remote control.

You may have to re-program the remote control to control a compatible TV (other than TOSHIBA) when you replace the remote control's batteries.

After the VCR's remote control is programmed, it will control certain functions of your TV depending on the type of TV. Keep these exceptions in mind :

- On a TV that has a 12-position knob-type channel selector, you will only be able to select the first then positions (1 through 10).
- To turn on a compatible TOSHIBA TV, press the POWER button. To turn on a different type of compatible TV (after the remote has been programmed), press the TV button, then press the POWER button.
- Not all functions may be available on your TV. For example, previous channel may not work even through the CHANNEL \wedge/\vee buttons do work.

Step (continued)	Hold TV button and press these additional buttons to program remote:						
	TV and 1 (TOSHIBA)	TV and 2	TV and 3	TV and 4	TV and 5	TV and 6	TV and 7

After programming your VCR remote, it wil control the TV function listed below:

Remote Button	TV Functions which can be controlled:						
TV	—	—	—	—	—	—	POWER ON(RCA)
POWER	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF
0 THROUGH 9	0-9	0-9	0-9	0-9	0-9	0-9	0-9
100	100	—	ENTRER	100	100	—	100
CHANNEL \wedge/\vee	CH \wedge/\vee	CH \wedge/\vee	CH \wedge/\vee	CH \wedge/\vee	CH \wedge/\vee	CH \wedge/\vee	CH \wedge/\vee
VOLUME \wedge/\vee	VOL \wedge/\vee	VOL \wedge/\vee	VOL \wedge/\vee	VOL \wedge/\vee	VOL \wedge/\vee	VOL \wedge/\vee	VOL \wedge/\vee
INPUT SELECT	TV/VIDEO	—	TV/VIDEO	—	—	—	TV/VIDEO

Step (continued)	Hold TV button and press these additional buttons to program remote:						
	TV and 8	TV and 9	TV and 0	TV and CHANNEL \wedge	TV and CHANNEL \vee	TV and 100	TV and INPUT SELECT

After programming your VCR remote, it wil control the TV function listed below:

Remote Button	TV Functions which can be controlled:						
POWER	—	—	—	—	—	—	—
0 through 9	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF
100	K, A-I	0-9	0-9	0-9	0-9	0-9	0-9
CHANNEL \wedge/\vee	—	100	100-	—	—	ENTRER	—
VOLUME \wedge/\vee	L/J	CH \wedge/\vee					
INPUT SELECT	VOL \wedge/\vee	VOL \wedge/\vee	VOL \wedge/\vee	VOL \wedge/\vee	VOL \wedge/\vee	VOL \wedge/\vee	VOL \wedge/\vee
	—	TV/VIDEO	—	TV/VIDEO	TV/VIDEO	TV/VIDEO	—

VCR'S OPERATING CONTROLS(continued)

Controlling a TV with the Remote Control

Only the remote control buttons that are used to control compatible television are described on this page. The buttons that are used to operate the VCR are described on pages 21-22.

If you have a compatible TV (other than TOSHIBA) you must program the remote control as described on the previous page before these buttons will operate your TV.

Depending on the specific features of your TV model, some of these controls may not apply to your TV. Check the chart to see which controls apply to your type of TV.

Most of the buttons (except *VOLUME* \wedge/\vee) will not control your TV unless the remote control is in the "TV mode". If you press the *VCR* button, the remote control will go into the "VCR mode" and control the VCR. Press the *TV* button to return the remote control to the "TV mode" so it will control the TV.

Important Note: When you press the *TV* button, this remote will automatically control your TOSHIBA TV. If your TOSHIBA TV stops responding to this remote, you may have accidentally pressed the buttons to program it for a different brand. To control your TOSHIBA TV again, press the *TV* button and number button "1" together as described on the previous page.

① *TV* Button

- Press the *TV* button to put the remote control in the "TV mode", and then press the *POWER* button to turn on a TV.

② *POWER* Button

- Press the *TV* button to put the remote control in the "TV mode", and then press the *POWER* button to turn on a compatible TV. The remote control must be programmed to operate a compatible TV (TOSHIBA or other).
- Press *POWER* to turn off as compatible TV (TOSHIBA or other) when remote is in "TV mode"

③ *INPUT SELECT* Button


This button has the same function as some compatible TV's remote control *TV/VIDEO* button when the remote control is in the "TV mode".

④ *CHANNEL* \wedge/\vee Buttons

- The remote control must be in the "TV mode" (press *TV* button) to use the *CHANNEL* \wedge/\vee buttons for your TV.
- If your TV has a channel memory scan list, press *CHANNEL* \wedge to see the next higher channel in memory.
 - Press *CHANNEL* \vee to see the next lower channel in memory.

Press the *TV* button to put the remote control in the "TV mode".

Press the *TV* button and then the *POWER* button to turn on a TV.

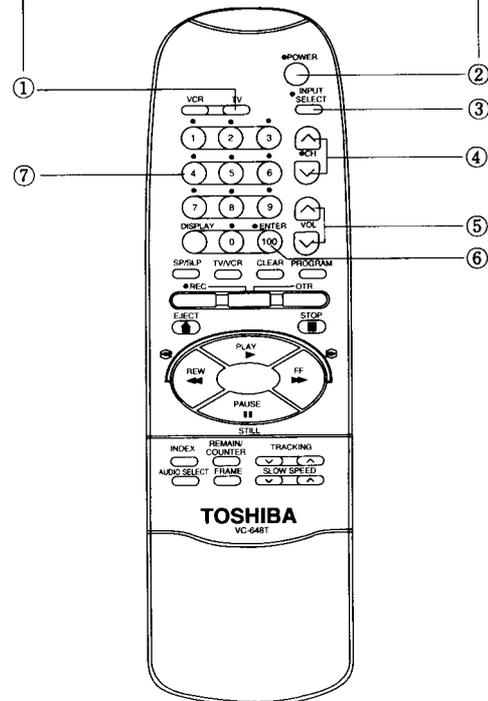

⑤ *VOLUME* \wedge/\vee Buttons

- Press *VOLUME* \wedge to increase the volume.
- Press *VOLUME* \vee to decrease the volume.

⑥ *100 CH* Button

This button has the same function as some compatible TV's remote control *100 CH* or *ENTER* button when the remote control is in the "TV mode".

⑦ *Number* Buttons ("0" through "9" and "100")

The remote control must be in the "TV mode" (press *TV* button) to change channels on the TV.

- Press two number buttons to select any channel (up to channel 99). For example, press "0" then "8" to select channel 8.
- Press the "100" button and then two number buttons to select any cable-TV channel over 99. For example, press "100" then "0" then "8", to select channel 108.

VCR FEATURES(continued)

VCR Features

Quick-Play Feature

The quick-play feature eliminates the "delay" when you begin recording or playing back a tape. The VCR automatically positions the tape for "action" whenever a cassette is inserted or when the VCR is turned on with a cassette already inserted.

The VCR also keeps the tape "ready" when you place the VCR in the stop mode. After you have placed the VCR in the stop mode, you will hear the cylinder head inside the VCR continue to rotate for about five minutes while the VCR is "waiting" for you to select the next function. After five minutes, the cylinder head will stop rotating and you will no longer hear it.

High-Speed Rewind

This VCR has a high-speed rewind and fast forward feature which eliminates the long wait while the tape is rewinding.

Auto Head Cleaner

This VCR is equipped with an automatic Video Head Cleaner. This feature will ensure that your VCR will perform at its best by keeping the video heads clean of dirt that can distort picture quality. The Auto Head Cleaner engages automatically each time a tape is inserted or ejected.

VCR SET UP Menu


Your VCR allows remote control adjustment of several additional feature options. You can use the VCR SET UP menu to select the functions that best fit your personal needs.

To display this menu, press PROGRAM, then press "4" on the remote control.

The NORMAL/CATV, AUTO PROGRAM, and ADD/ERASE CHANNEL features in the VCR SET UP menu are necessary for initial installation of your VCR and are described on pages 15-16.

First Press PROG
(Program)

Then
press "4"

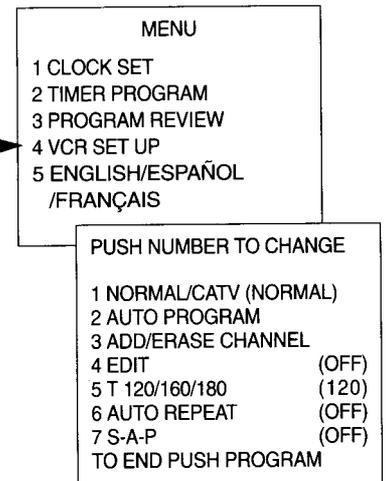

Set the following items respectively.

- | | |
|----------------------|-------------------|
| 1. NORMAL/CATV | : See page 15. |
| 2. AUTO PROGRAM | : See page 15-16. |
| 3. ADD/ERASE CHANNEL | : See page 15-16. |
| 4. EDIT | : See Page 45. |
| 5. T 120/160/180 | : See page 44. |
| 6. AUTO REPEAT | : See page 43. |
| 7. S-A-P | : See page 46. |

VIDEO CASSETTES

Use of poor quality tape or tapes that have been damaged or mishandled can contaminate the VCR heads. This can cause a snowy picture or a missing picture during playback. If a snowy picture or missing picture condition persists, consider the use of a chemical non-abrasive head cleaning tape.

Tape Speed

Recording: Tapes can be recorded at two different speeds, SP (Standard Play : records 3.34 cm/sec.) and SLP (Super Long Play : 1.11 cm/sec.) you select the speed you prefer using the SP/SLP button. Selected speed mode will show up on the TV screen. The basic difference between these speeds is that the SLP mode allows you to get more footage on your tape. Although this is economical, the quality of the image is not as good as recordings made in the SP mode.

Playback: There are three possible speeds for playback; SP, LP, SLP. The appropriate speed will be chosen automatically by the VCR.

Applicable Speeds

Speed Mode	SLP	LP	SP
Recording	○	X	○
Playback	○	○	○

Different types of cassettes and maximum recording times


Video Cassette Record Mode	T180	T-160	T-120	T-60
SLP	540min	480min	360min	180min
SP	180min	160min	120min	60min

Erasing Tapes


You can use your video cassettes over and over again. To erase a previous recording, just record over it.

Erase Protection-Record-Protect (Safety) Tab

To prevent erasing a recording you want to keep, remove the record-protect (safety) tab from the back of the cassette as shown below. Recording is impossible when this tab is removed. To record again on a cassette that has the removed, simply cover the hole with vinyl tape.

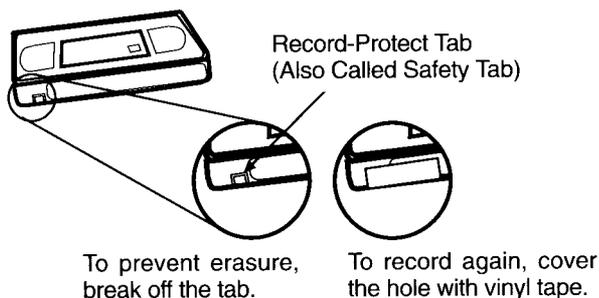


Inserting and Removing Cassettes

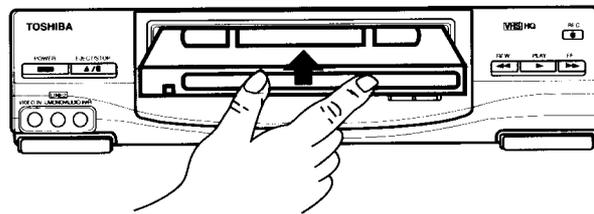

Insert a Cassette. Push the cassette gently through the door of the cassette compartment until the VCR mechanism pulls it into the VCR. Inserting a cassette will automatically turn on the VCR's power. The cassette-in indicator () will light when a cassette is properly inserted into the VCR.

Caution: Insert a cassette only one way with the tape windows facing up, and the record-protect (safety) tab facing out.

EJECT/STOP Button

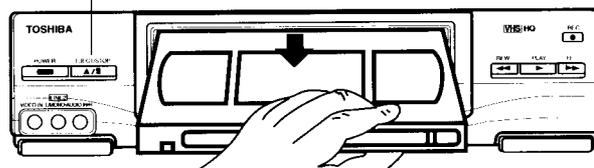

Eject and remove a cassette. The VCR must be in the stop mode. Press the *EJECT/STOP* button to eject the cassette. The cassette is partially ejected automatically by the VCR. Gently pull the cassette straight back out of the compartment. Place the cassette in its case and store it upright.

Cassette Care and Storage

Follow these directions for continued high-quality performance from your cassettes.



- When you are finished with a cassette, rewind it and remove it from the VCR.
- Never attempt to force open the cassette door.
- Store cassettes vertically in their protective cases at normal room temperatures. Avoid extreme heat and humidity. Extreme heat can warp the cassette or cause the tape to stretch excessively.
- Be especially careful to keep dust from entering the cassette and the VCR mechanism. All dust is abrasive, and it will cause excessive wear of both the tape and the VCR's recording/playback heads.

PLAYBACK

Follow the steps below to play back a tape in the VCR. The VCR will automatically select the correct playback speed and the appropriate indicator will light in the VCR's display panel.

Some of the buttons on the VCR and remote control operate differently during playback. These special playback features are described on the following pages.

Playback Guide

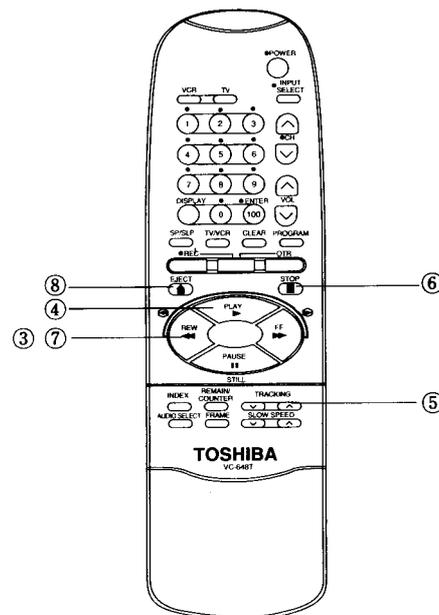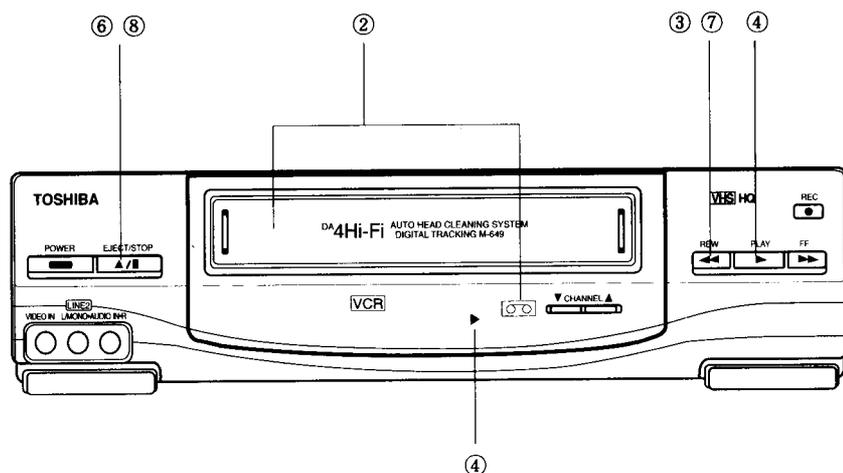

- ① Turn on the TV and tune it to the "VCR Channel" (3*, 4* , or video input).
* The TV must be tuned to the same channel you selected with the CH3/CH4 switch on the back of the VCR.
- ② Insert a cassette in the VCR. (The cassette-in indicators will light.)
Note: The tape will automatically begin playback if the record-protect (safety) tab on the cassette has been removed.
- ③ To rewind the tape if necessary, press the *REW* button on the VCR (or the *REW* button on the remote control).
- ④ To begin playback, press the *PLAY* button. The play indicator (▶) appears in the display panel.
- ⑤ Adjust tracking if necessary. If the tape was recorded on a different VCR, streaks may appear. Press the *TRACKING* ^ or v button on the remote control to move the streaks up or down and out of the picture. *Details are on page 28.*
- ⑥ When you are finished, press the *EJECT/STOP* button on the VCR (or the *STOP*) button on the remote control.
- ⑦ To rewind the cassette, press the *REW* button on the VCR (or the *REW* button on the remote control)
- ⑧ To eject the cassette from the VCR, press the *EJECT/STOP* button on the VCR (or the *EJECT* button on the remote control) when it is in all mode except the record mode.

PLAYBACK(continued)

Picture Search

During playback, the rewind, (*REW*) and fast forward (*FF*) buttons are used for visual searching of the tape.

- During playback, to visually search forward at 5 times normal speed, press and quickly release the *FF* button. To return to normal playback, press the *PLAY* button again.
- During playback, press and quickly release the *REW* button to visually search backwards at 5 times normal speed. To return to normal playback, press the *PLAY* button again.

The sound is turned off during visual searching because it would not be understandable at such high speed.

Expect to see some horizontal lines or bars in the picture when you are using the search mode. The picture will be best for tapes recorded at SP or SLP speeds, although tapes recorded at LP speed can be viewed.

Accel Search

If you keep pressing the *FF* or *REW* button during playback, or picture search the searching speed will be increased to 9 times (SP speed only) or 27 times (SLP speed only) normal speed.

Double speed Playback

If you press *PLAY* button during normal playback, the picture will be viewed in double speed.

Press *PLAY* button once more to return to the normal playback.

Variable-Speed Slow-Motion Playback

During playback, the tape can be viewed in slow motion at variable speeds.

- Press the *SLOW SPEED* \wedge or \vee button on the remote control when a tape is playing to start slow-motion playback. Press the *PLAY* button to return to normal playback.
- During slow-motion playback, you can change the speed by pressing the *SLOW SPEED* \wedge or \vee button on the remote control. Press the *SLOW SPEED* \wedge to increase the speed or *SLOW SPEED* \vee to decrease the speed.

It is normal to see some streaks in the picture during slow motion playback. Press the *TRACKING* \wedge or \vee button on the remote control to move the streaks up or down and out of the picture.

The VCR will automatically switch from slow-motion to after about five minutes.

Slow-motion playback is designed to work at the SP and SLP speeds, For the longest recording time, SLP speed is recommended.

Still for Stop-Action Playback

- Press the *STILL* button during playback to freeze the picture. This lets you examine all the details of the scene, similar to looking at a single frame of a movie film.

- When you are ready to resume normal playback, press the *STILL* button again.
- Still frame is designed to work best at the SP and SLP speed.
- If the picture "jitters" (bounces up and down) during still, press one of the *TRACKING* \wedge or \vee buttons located on the remote control to reduce the "jitter".

Caution: Using still frame on a single frame of the picture for a long time can wear the tape. Use *STOP* instead of *STILL* to interrupt playback for an extended time. The VCR will automatically switch from pause to stop after about five minutes.

Frame(Frame Advance)

Frame advance lets you view one still frame after another.

- Press the *STILL* button to begin stop-action viewing. Then press the *FRAME* (frame advance) button on the remote control each time you want to view the next frame for the scene. Press the *PLAY* button to resume playback at normal speed.
- Frame advance is designed for use on tape recorded in SP or SLP speed. It may be used on tapes recorded in LP, but the picture quality not be as good.

Tracking(Automatic and Manual)

The VCR has a built-in digital automatic tracking feature and there are manual *TRACKING* buttons on the remote control.

Digital Auto Tracking

The VCR automatically adjusts the tracking for rental tapes or tapes recorded on other VCRs or camcorders.

- Every time you insert a tape and press the *PLAY* button, the VCR's digital auto tracking is turned on and tracking is adjusted.
- If you press one of the manual *TRACKING* buttons on the remote control, the digital auto tracking feature is turned off.

Manual Tracking (*TRACKING* \vee and \wedge Buttons)

Tracking can be adjusted manually by pressing the *TRACKING* \vee or \wedge button on the remote control. The VCR's digital auto tracking is turned off whenever you press the *TRACKING* \vee or \wedge button.

- During still playback, press the *TRACKING* \wedge or \vee button to reduce picture "jitter" (bouncing up and down). A small amount of "jitter" is normal during still viewing.
- During slow-motion playback, it is normal to see some streaks (noise bars) in the picture. If the streaks interfere with the time counter display on the TV screen, press the *TRACKING* \wedge or \vee button to move the streaks up or down.

Note :

- When a tape recorded with some other VCR is played back at slow, still frame, noise may not be eliminated even by *TRACKING* control.
-

PLAYBACK(continued)

On-Screen Displays

The VCR's on-screen displays appear automatically on the TV whenever you turn on the VCR or change the VCR's status (stop to play, play to stop, change channels, etc.). The VCR's on-screen displays, the time counter, and the time counter with memory stop can be manually displayed by pressing the *DISPLAY* button on the remote control.

- Press the *DISPLAY* button once to display the normal displays on the TV screen.
- Press the *DISPLAY* button again (while the normal displays still appear on the TV screen) to display only the time counter on the TV screen. The time counter will remain on the TV screen.
- Press the *DISPLAY* button again, and M (memory) appears on the right of the time counter on the TV screen.

Note: Whenever the time counter with memory appears on the TV screen, the time counter's memory stop feature is automatically turned on. Press the *DISPLAY* button on the remote control to switch between the current time and time counter in the VCR's display panel.


- Press the *DISPLAY* button again to remove all displays from the TV screen.

Time Counter with Memory-Stop Feature

The time-counter display shows the actual linear time it takes to record a program or play back a segment of a prerecorded tape. It helps you quickly locate the end of programs you taped. For example, if you recorded a 3-minute program at one segment of the tape, you will be able to stop the tape, display the time counter with memory, and rewind the tape until the time counter reads "0:00:00M" on the TV screen (in the VCR's display panel). This will be the approximate start position of your 30-minute recording.

You can note the time-counter with memory reading at one beginning of each recorded program.

- If the current time appears in the VCR's display panel, press the *DISPLAY* button twice to switch the current time display to the time-counter display.
- Then, press the *DISPLAY* button again to display the time counter-memory on the TV screen.

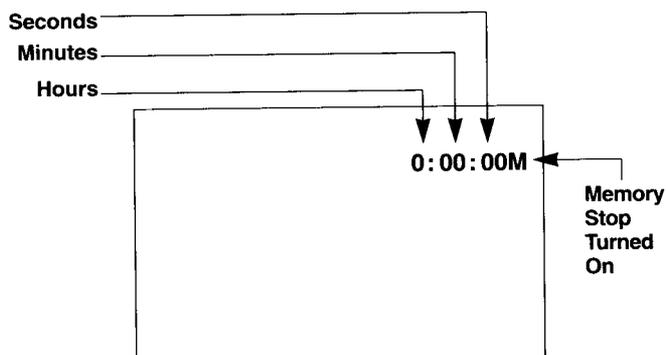

Whenever the time counter with memory is displayed, press the *CLEAR* button on the remote control to set the time counter to a reading of "0:00:00M"

Notes: The time counter is automatically reset to "0:00:00" in the VCR's display panel whenever the tape is ejected from the VCR.

If you rewind the tape farther back than a counter reading of "0:00:00", a minus(-) will appear in front of the time.

Memory-Stop Feature (Zero Return)

The memory-stop feature allows you to quickly return to a counter reading of "0:00:00" from any point on the tape. Memory stop is automatically turned on whenever the time counter with memory is displayed on the TV screen. This is convenient when you want to watch a segment of the tape repeatedly. You may also discover other useful applications for this feature.

1. To turn on the memory-stop feature, press the *DISPLAY* button on the remote control to display the time counter with memory on the TV screen. The time counter will appear with an M on the TV screen when memory stop is turned on.
2. Whenever you are at a spot on the tape that you want to return to quickly, press the *CLEAR* button to reset the counter to "0:00:00M" at the spot.
3. Later, after you have moved somewhere else on the tape, you can quickly return to your original spot (where you set the counter to "0:00:00M") by pressing the *STOP* and then the *REW* or *FF* (fast-forward) button. Make sure the "M" is displayed if you want the VCR to stop at "0:00:00".

Notes: If you are rewinding the tape and the VCR stops at "0:00:00M", press *REW* again to continue rewinding.

If you press the *FF* (fast-forward) button and the time counter never reaches "0:00:00M" between that point and the end of the tape, the VCR will continue to fast-forward to the end of the tape, switch to rewind, and then stop when the counter reaches "0:00:00M".

RECORDING

Recording Guides

The guides on these two pages show you how to make recordings on the VCR.

- The guide on the bottom of this page shows you how to record on the VCR with the TV turned off.
- The first guide on the next page shows you how to record a program on the VCR and watch the same program on the TV.
- The second guide on the next page shows you how to record one program on the VCR while watching a different program on the TV.

This VCR also features One Touch Recording (OTR), and timer recording. It will turn itself on, make a recording, and turn itself off while you are away.

- Details on One Touch Recording (OTR) are on page 32.
- Details on timer recording are on pages 33-35.

PAUSE/STILL Button

Use this button to stop recording temporarily. This enables you to skip recording unnecessary parts of a program (such as commercial messages.)

1. Press the *PAUSE/STILL* button during recording and recording is stopped temporarily. However, since the TV continues operating, the pictures and sound of the program can be received.
2. Press the *PAUSE/STILL* button to resume recording.

Note: If the VCR pauses for more than five minutes, it automatically enters the stop mode to protect the tape.

Tape Recording Speeds

To select one of the VCR's two recording speeds, press the *SP/SLP* button. The appropriate indicator (*SP* or *SLP*) will appear in the VCR's display panel. The information below will help you decide which tape speed to use when recording.


Notes: The VCR automatically selects the appropriate tape speed for playback.

Your VCR's special effects (still-frame and search) are designed for optimum performance at the *SLP* speed.


We recommend *SLP* speed for the longest recording time.

- *SP* (Standard play) provides the best picture but the shortest recording time (2 hours with a T-120 tape). Video recorded at this speed has the least picture noise (snow) in normal play back.
- *SLP* (Super Long Play) provides three times the recording time as *SP* (6 hours with a T-120 tape). *SLP* has slightly more picture noise (snow) than *SP* in normal playback. This may not be noticeable.

Recording With TV Turned Off

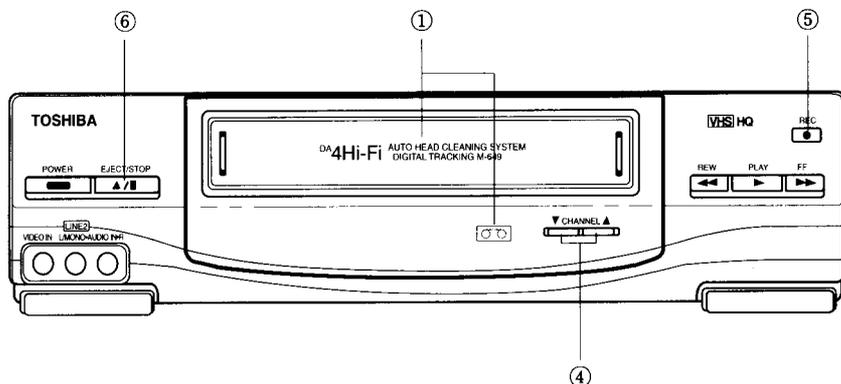

- ① Insert a cassette with the record-protect (safety) Tab intact. (The cassette-in indicator will light.)
- ② Press the *SP/SLP* button to select a recording speed. The Tape speed indicator (*SP* or *SLP*) will appear.
- ③ Make sure the "L1(L2)" indicator does not appear in the VCR's display panel unless you want to record from the VCR's *AUDIO* and *VIDEO IN* jacks. If "L1(L2)" appears, press the *INPUT SELECT* button to turn it off.

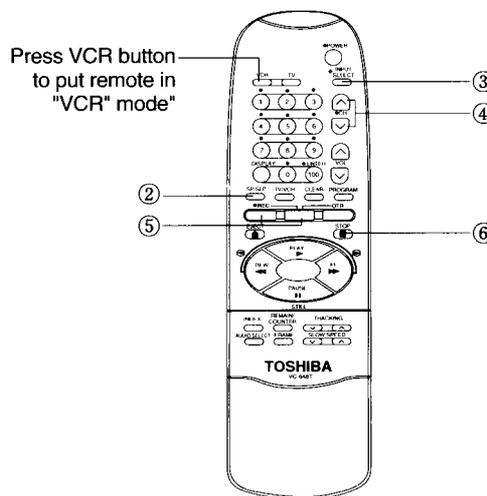


Press VCR button to put remote in "VCR" mode"


- ④ To select the channel you want to record, press the *CHANNEL* ∇ or Δ button until channel number you desire appears.
- ⑤ To start recording, press the *REC* button. The record indicator appears in the VCR's display panel.
- ⑥ When you finished, press the *EJECT/STOP* button on the VCR (or the *STOP* button on the remote control).

RECORDING(continued)

Recording and Viewing the Same Program

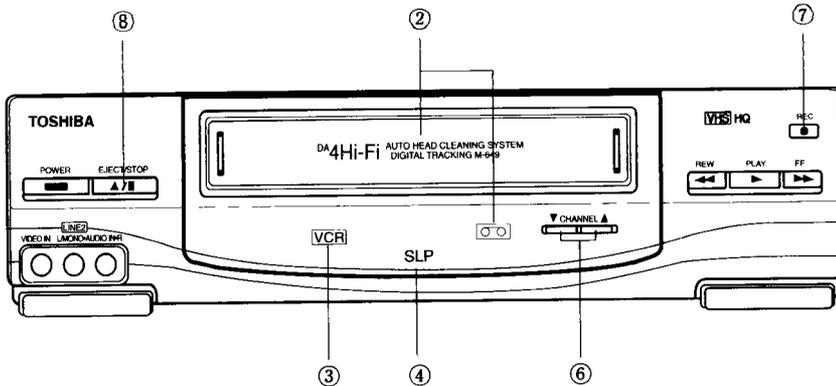


Press VCR button to put remote in "VCR" mode"

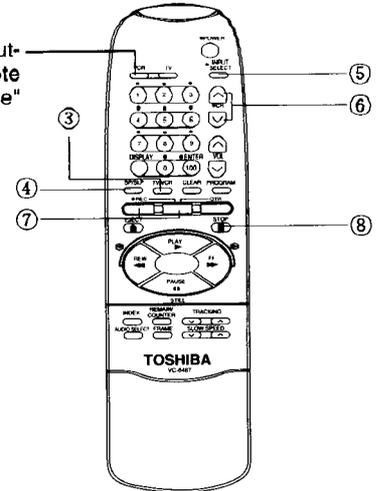


- ① Turn on the TV and tune it to the "VCR Channel" (3*, 4* or video input).
* The TV must be tuned to the same channel you selected with the CH3/CH4 switch on the vack of the VCR.
- ② Insert a cassette with the record-protect (safety) tab intact. (The cassette-in indicator will light).
- ③ Make sure the **VCR** indicator appears in the VCR's display panel. If it does not appear, press the TV/VCR button to turn it on.
- ④ Press the SP/SLP button to select a recording speed. The tape speed indicator (SP or SLP) will appear.
- ⑤ Make sure the "L1(L2)" indicator does not appear in the VCR's display panel unless you want to record from the VCR's AUDIO and VIDEO IN jacks. If "L1(L2)" appears, press the INPUT SELECT button to turn it off.
- ⑥ Press the CHANNEL ∇ or ▲ button to select the channel you want to record. (The channel number appears in the VCR's display panel.)
- ⑦ Press the REC button to start recording. (The recording indicator appears in the VCR's display panel.)
- ⑧ Press the EJECT/STOP button on the VCR (or the STOP button on the remote control) When you are finished.

Recording and Viewing Different Programs

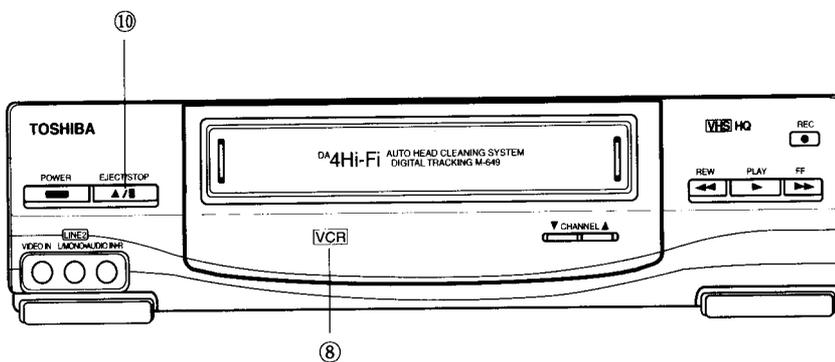

Press VCR button to put remote in "VCR" mode"

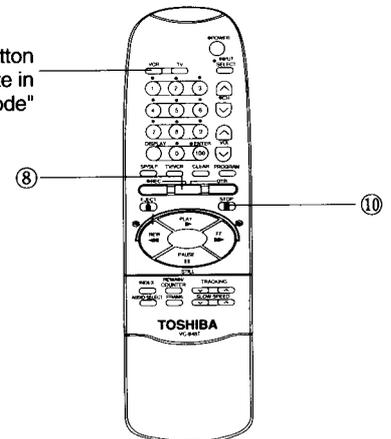

To record one program on the VCR and watch different program on the TV, follows steps ① through ⑦ above and then :

- ⑧ Press the TV/VCR button to turn off the **VCR** indicator.
- ⑨ Select the other channel you want to watch with the TV's channel buttons.
- ⑩ Press the EJECT/STOP button the VCR (or the STOP button on the remote control) when you are finished.

Note: If you want to watch what the VCR is recording, press the TV/VCR button to turn on the **VCR** indicator. Then tune your TV to the "VCR Channel" (3,4, or video input).

Notes:

- Basic Manual Recording is possible only in the SP and SLP modes.
- The recorded pictures on the tape may be distorted around where the PAUSE/STILL button is used. This is not a malfunction.
- Since channel lock function operates during recording. TV channels cannot be changed directly. To change the channel, press the PAUSE/STILL button first. If the PAUSE/STILL button is pressed again, a TV program in a new channel can be recorded.

RECORDING(continued)

One Touch Recording (OTR)

One Touch Recording (OTR) lets you record up to four hours without programming the timer. It also allows you to start (or continue) recording immediately.

When the recording is finished, the VCR will turn off automatically.

Note: The clock doesn't have to be set before you can do One Touch Recording.

Only two buttons on the remote control are used to do One Touch Recording.

Immediate Start

- If you want the VCR to start recording immediately or to continue a recording you have already started, *follow the simplified instructions below or the detailed instructions on the right-side page.*
- Only the *OTR* buttons are used for immediate One touch Recording. Each time you press the *OTR* buttons the recording time is extended.

1st press.....	30 minutes OTR
2nd press	1 hours OTR
3rd press.....	1-1/2 hours OTR
4th press.....	2 hours OTR
5th press	2-1/2 hours OTR
6th press.....	3 hours OTR
7th press	3-1/2 hours OTR
8th press.....	4 hours OTR
9th press.....	Return to normal recording

Simplified Instructions for Immediate-Start

1. Turn on the VCR.
2. Insert a cassette with the record-protect (safety) tab intact. (Rewind if necessary).
3. Select the channel you wish to record.
4. Press the *OTR* button to select desired recording time ["0:30" (30 minutes) to "4:00" (4 hours)]

To Stop OTR After Recording Starts

Repeatedly press the *OTR* buttons until normal recording returns. Then press the *STOP* button during the normal recording.

- OR -

Press the *POWER* button on the VCR set.

RECORDING(continued)

Programming the Timer

The programmable clock/timer permits unattended recording of up to eight different TV programs. The timer is actually a small computer which will turn on the VCR at the time you select, record for a selected length of time, and then turn off the VCR—all automatically without you being there.

You can program the timer to do the following:

- Record a program on a single day up to one year away (*ONE TIME PROGRAM*).
- Record a program at the same time Monday through Friday (*DAILY PROGRAM*).
- Record a program on one certain day of every week (*WEEKLY PROGRAM*).

Simplified Programming Instructions

1. Turn on the TV and tune it to your "VCR Channel" (3,4, or video input).
2. Turn on the VCR or insert a cassette with the record-protect (safety) tab intact. (Rewind if necessary.)
3. Press the *PROG* (program) button on the remote control.
4. Watch the display on the TV screen. It will prompt you through the rest of the programming instructions.
5. **Turn off the VCR.** The VCR must be turned off for the timer program to begin.

Things to know before you start:

- The time and date must be correct before you program the timer.
- You can program the timer up to one year before the TV program is to be recorded.
- You can correct an error in the program any time before the last step by pressing the *CLEAR* button on the remote control.

<p>[1] Turn on the TV and VCR. Tune the TV to the "VCR channel" (3,4, or video input) so you can see the timer program menu on the TV screen. Make sure the VCR's clock is set to the correct time. Reset the clock if necessary.</p> <p>Press the PROGRAM button on the remote control.</p>	<p style="text-align: center;">MENU</p> <p>1 CLOCK SET 2 TIMER PROGRAM 3 PROGRAM REVIEW 4 VCR SET UP 5 ENGLISH/ESPAÑOL /FRANÇAIS</p> <p>TO SELECT PUSH 1-5 TO END PUSH PROGRAM</p>	<p>Press the corresponding number button on the remote control.</p> <ul style="list-style-type: none"> • Press "2" to enter a <i>TIMER PROGRAM</i> • Press "3" to enter a <i>PROGRAM REVIEW</i> • Press "4" to enter a <i>VCR SET UP</i>
<p>[2] If you want to enter a <i>TIMER PROGRAM</i>, press "2" and then, this display appears.</p>	<p style="text-align: center;">TO SELECT MODE PUSH NUMBER SHOWN</p> <p>1 ONE TIME PROGRAM 2 DAILY PROGRAM (M-F) 3 WEEKLY PROGRAM TO END PUSH PROGRAM</p>	<p>Press the corresponding number button on the remote control.</p>
<p>[3] If all eight programs are full, this display appears on the TV screen prompting you to erase an existing program.</p> <p>If a program number is available, the display in Step 4 appears on the TV screen.</p>	<p style="text-align: center;">ALL TIMER PROGRAMS ARE FULL</p> <p>TO ENTER A NEW PROGRAM, FIRST USE PROGRAM REVIEW TO ERASE ONE PROGRAM</p>	<p>Press number button "3" to review the timer programs. Press the <i>CLEAR</i> button on the remote control when the program you want to erase appears on the TV screen.</p>
<p>[4] If you press number button "1" to select the <i>ONE TIME PROGRAM</i>.</p> <p>The display will prompt you to select a channel number.</p>	<p>ONE TIME PROGRAM 1 CH -- TIME ON --:-- TIME OFF --:-- START DATE --/-- TAPE SPEED AUTO TO END PUSH PROGRAM</p>	<p>Enter the channel number you want to record. Press two number buttons to enter a channel up to channel 99. For example, press "0", then "4" for channel 4.</p> <p>For cable-TV channels over 99, press the "100" button and then two more number buttons. For example, press "100", then "0" then "4" for channel 104.</p>

RECORDING(continued)

[5] The display will prompt you to enter the recording start time.

```
ONE TIME PROGRAM 1
  CH 04
  TIME ON --:--
  TIME OFF --:--
  START DATE --/--
  TAPE SPEED  AUTO
  TO END PUSH PROGRAM
```

Press four number buttons to enter the hour and minutes. For example, press "0" then "9" then "3", then "0" for 9:30. (always press "0" before a single-digit hour or minute.)

[6] The display will prompt you to select either AM or PM.

```
ONE TIME PROGRAM 1
  CH04
  TIME ON 09:30
  AM=1 PM=2
  TIME OFF --:--
  START DATE --/--
  TAPE SPEED  AUTO
  TO END PUSH PROGRAM
```

Press number button "1" for AM, or press number button "2" for PM.

Remember: Noon is 12 PM
Midnight is 12 AM

[7] The display will prompt you to select the time you want the recording to end.

```
ONE TIME PROGRAM 1
  CH04
  TIME ON : 09:30 PM
  TIME OFF --:--
  START DATE --/--
  TAPE SPEED  AUTO
  TO END PUSH PROGRAM
```

Press four number buttons to enter the hour and minutes. For example, press "1", "0", "0", "0" for 10:00 (Always press "0" before a single-digit hour or minute.)

Am or PM is automatically displayed after you enter the TIME OFF.

[8] The display will show *START DATE* followed by the current or next date and day. If you want to start recording on the date, skip to Step 9.

```
ONE TIME PROGRAM 1
  CH04
  TIME ON : 09:30 PM
  TIME OFF 10:00 PM
  START DATE 08/04/93 WED
  TAPE SPEED  AUTO
  TO END PUSH PROGRAM
```

If you want to start recording on a future date, enter the date by pressing four number buttons. For example, press "0", "8", "0", "4" to begin recording on August 4th. The year and day of the week are automatically displayed after you enter the month and day. (Always press "0" before a single digit month or day.)

[9] Press the *SP/SLP* button to select the tape speed. If the tape length is not long enough for timer recording in the SP mode, then set the recording speed to AUTO at this step. Recording starts in the SP mode and the VCR automatically selects the tape speed to record the program to the end. If the tape length is not long enough, the tape speed automatically changes from the SP mode to the SLP mode.

```
ONE TIME PROGRAM 1
  CH04
  TIME ON : 09:30 PM
  TIME OFF 10:00 PM
  START DATE 08/04/93 WED
  TAPE SPEED  AUTO
  TO END PUSH PROGRAM
```

Press the *PROGRAM* button again when you are finished to remove the program menu from the TV screen.

[10] **Turn off the VCR.**

The **TIMER** indicator will turn on in the VCR's display panel.

RECORDING(continued)

Checking Timer Programs

Programs can be checked whenever the VCR is turned on.

1. Press the *PROG* (program) button on the remote control to display the program menu.
2. Press number button "3" for *PROGRAM REVIEW*. The TV screen will display the information you entered for the lowest program number for a few seconds. Then the display will change to the next higher program number, and so on, until all the program information has been displayed.
3. Press *DISPLAY* button or press number button "3" if you want to view the next program information without waiting a few seconds.
4. When you are finished, press the *PROG* (program) button to remove the program menu from the TV screen.

Timer Recording From the VCR's Line Input (AUDIO and VIDEO IN Jacks)

It is also possible to timer record from a device connected to the VCR's *AUDIO* and *VIDEO IN* jacks (called "line input"). To enter the channel for the timer recording, press *INPUT SELECT* button. The "L1 (L2)" indicator appears in the VCR's display panel, and *LINE1(2)* appears instead of the channel number on the TV screen. This is convenient if you have a satellite receiver or similar device attached to the *AUDIO* and *VIDEO IN* jacks on the VCR.

Clearing a Timer Program

1. Press the *PROG* (program) button on the remote control to display the program menu.
2. Press number button "3" to select *PROGRAM REVIEW*. The TV screen will display the information you entered for the lowest program number for a few seconds. Then the display will change to the next higher program number, and so on, until all program information has been displayed.
3. Press *DISPLAY* button or press number button "3" if you want to view the next program information without waiting a few seconds.
4. Press the *CLEAR* button on the remote control when the program you want to clear appears on the TV screen.
5. Press the *PROG* (program) button again to remove the program menu from the TV screen.

Stopping a Timer Recording in Progress

Press the *POWER* button on the VCR to stop a Timer Recording in Progress.

Notes: ONE TIME PROGRAMS clear automatically when the recording is finished.

Daily and weekly programs remain in the timer indefinitely.

All programs are erased if power is interrupted for an extended period. (about one minute)

Notes:

- Set the tape speed according to the tape remaining time.
 - When the remaining tape amount is small compared with the reserved recording time and the timer recording starts in the *SLP* mode from the beginning, the recording is not completed to the end.
 - The picture will be distorted when playing back the part where the recording mode was switched over from the *SP* mode to *SLP* mode with the *AUTO* tape speed recording method.
-


RECORDING(continued)

Recording From a Camcorder

To duplicate tapes using your camcorder, connect your camcorder to the VCR as shown below. You will need an output cable(usually supplied with the camcorder).

- ① Connect the *VIDEO* plug from the output cable to the *VIDEO IN* jack on the front or the rear of the VCR.
- ② Connect the *AUDIO* plug from the output cable to the *AUDIO IN* jack on the front or the rear of the VCR.
- ③ Connect the other end of the output cable to the *AUDIO/VIDEO OUT* connector on the camcorder.

Caution: The unauthorized recording of television programs and other material may infringe the rights of others.

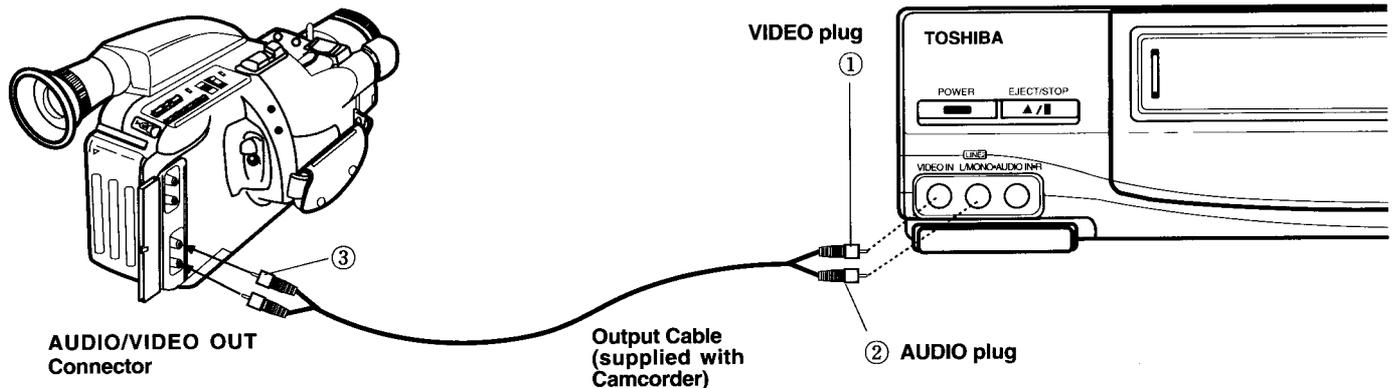

VHS CAMCORDER

Simplified Operating Instructions

1. Connect the camcorder to the VCR as shown above.
 2. Turn on the TV and tune it to the "VCR Channel" (3, 4, or video input.)
 3. Turn on the camcorder and VCR.
 4. Insert the recorded cassette that you want to duplicate in the camcorder.
 5. Insert a blank cassette with its record-protect(safety) tab intact into the VCR.
 6. Make sure the **VCR** indicator appears in the VCR's display panel. If not, press the *TV/VCR* button to turn it on.
 7. Make sure the "L2" indicator appears in the VCR's display panel. If not, press the *INPUT SELECT* button to turn it on.
 8. Select the tape recording speed (*SP* or *SLP*) by pressing the *SP/SLP* button.
 9. Rewind the cassettes if necessary.
 10. Press the *REC* button on the VCR or on the Remote Control.
 11. Place the camcorder in the playback mode and press the *PLAY* button.
 12. Adjust the *TRACKING* control on the camcorder, if necessary.
Note: If the cassette tracking was not adjusted correctly on the camcorder, horizontal streaks may appear in the picture. Adjust the camcorder's tracking.
 13. If you want to edit out any of the material, press the *PAUSE* button on the VCR's remote control. Press the *PAUSE* button again to resume recording.
Note: Use *PAUSE* only for pauses less than three or four minutes. Press the *EJECT/STOP* button on the VCR (or the *STOP* button on the VCR's remote control) for longer pauses. Press the *REC* button on the VCR to resume recording.
 14. Stop the camcorder and VCR when you are finished.
- Note:** The TV does not have to be on to copy tapes. If you want to watch another TV channel, press the *TV/VCR* button to turn off the **VCR** indicator. Then select the channel you want to watch with the TV's channel buttons.
- Remember:** Turn off the "L2" indicator for normal recording from the VCR's tuner.

RECORDING(continued)

Recording From Another VCR


To copy your home videos from one VCR to another, use one VCR as the playback VCR and another VCR as the recording VCR.

Connecting the VCR's

1. Connect a shielded Audio/Video cable from the *VIDEO OUT* jack on the playback VCR to the *VIDEO IN* jack on the recording VCR.
2. Connect another cable from the *AUDIO OUT* jack on the playback VCR to the *AUDIO IN* jack on the recording VCR.

Important Note: Be sure that the recording VCR is connected to the TV so that you can see what is being recorded. This can be done either by connecting the *VIDEO* and *AUDIO OUT* jacks of the recording VCR to the *VIDEO* and *AUDIO IN* jacks of the TV or by connecting the *OUT TO TV* jack on the recording VCR to the *VHF IN* jack on the TV.

Caution: The unauthorized recording of television programs and other material may infringe the rights of others.

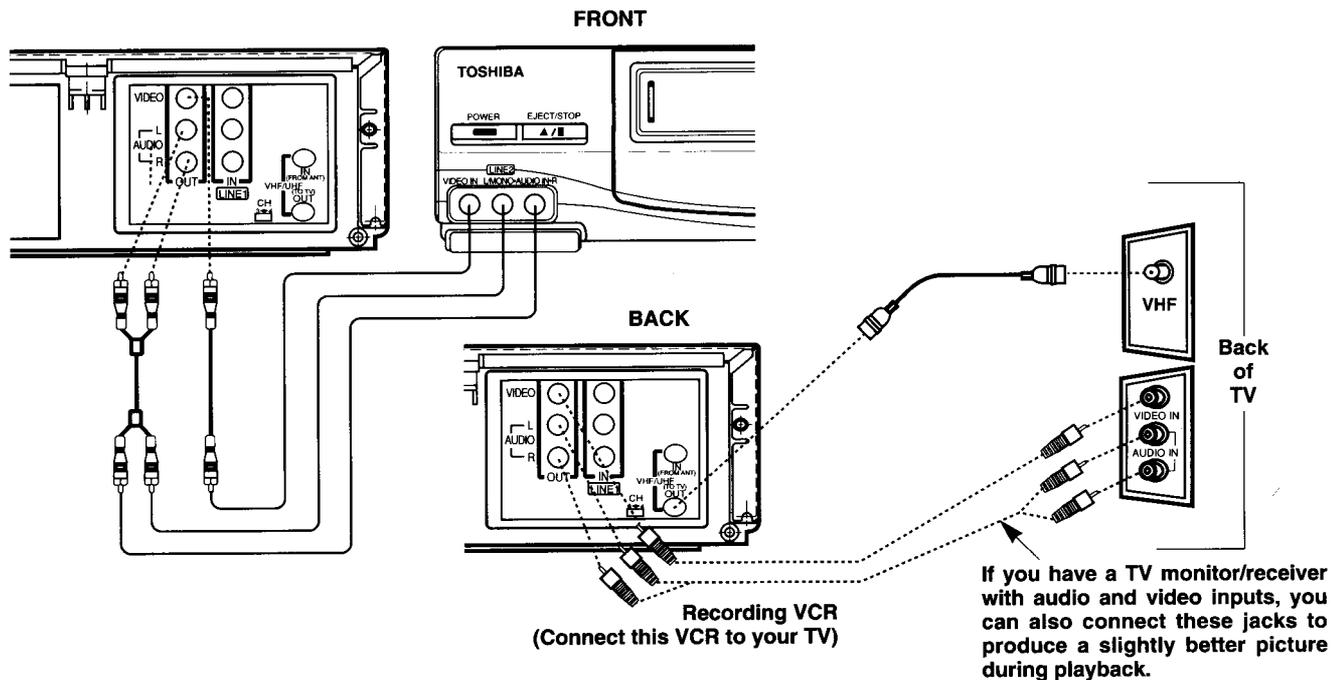

Copying Your Home Video

1. Turn on the TV and VCR's. Tune the TV to the "VCR Channel" (3,4 or video input).

Note: If you are using channel 3 or 4 on your TV to watch the VCR, be sure the *VCR* indicator in the recording VCR's panel is on. Press the *TV/VCR* button to turn it on.

2. Press the *INPUT SELECT* button to turn on the "L2" indicator in the recording VCR's display panel.
3. Insert the home video that you want to copy into the playback VCR. Insert a blank tape into the recording VCR
4. Press the *PLAY* button on the playback VCR to play the tape. Press the *PAUSE* button on the playback VCR when you reach the point where you want to begin copying.

Note: If the tape tracking was not adjusted properly on the playback VCR, horizontal streaks may appear in the picture. You may need to adjust the tracking on the playback VCR with the *TRACKING* up and down buttons on the remote control.

5. Press the *REC* button on the recording VCR, and then press the *PAUSE* button to place the recording VCR in the record pause mode.

6. Press the *PAUSE* buttons on **both VCR's at the same time** to begin copying the tape.

Note: You can edit out segments that you do not want to copy by pressing the *PAUSE* button on the recording VCR at any time to stop copying the tape. Locate the next segment you want to copy on the playback VCR by using the *FF*, *REW*, and *PLAY* buttons. Then place the playback VCR in the play-pause mode by pressing its *PAUSE* button. Press the *PAUSE* buttons **at the same time on both VCR's** to resume copying.

There are some other brand VCR sets which it works in the world. (*PAUSE* button)

7. Press the *STOP* buttons on both VCR's when you are finished.

Note: Remember to turn off the "L2" indicator in the VCR's display panel for normal recording from the VCR's tuner.

RECORDING(continued)

Pause During Recording

Press the *PAUSE* button when you are recording to prevent recording short passages of unwanted material. Press the *PAUSE* button again when you are ready to resume recording.

Caution: Avoid pausing for more than three or four minutes because the spinning heads that do the recording are still in contact with the tape and will eventually wear off the active material. This can cause streaks or spots in the picture when you play the worn part of the tape(called dropouts). To help prevent excessive tape wear, the VCR will automatically switch from pause to stop after about five minutes.

SPECIALIZED OPERATIONS

Index

You can easily search for the recorded program using the index signal registered together with it on the tape.

- **Scan and Play Index Playback**

This function plays back the tape around where the index signal is registered for about 6 seconds while fast forwarding or rewinding. (This function is operable using the remote control.)

- **Skip Search 1 Index Playback**

This function fast forwards or rewinds the tape to the point with the specified index signal to start playback from there automatically. (Specifying the index signal can be operated with the *NUMBER* button on the remote control.)

Index Register

There are two ways to register INDEX signals: automatically and manually.

- **Auto Register**


Press the recording button during the stop mode and the index signals are registered automatically. Auto register can be operated during one touch timer(OTR) or timer programming recording.

- **Manual Register(using the remote control)**

During recording, index signals can be registered at the desired sections of the tape with the remote control.

How to Register Index Signal during Recording

Press the *INDEX* button during recording, then the "INDEX" mark will be appeared for about 2 seconds on the screen.

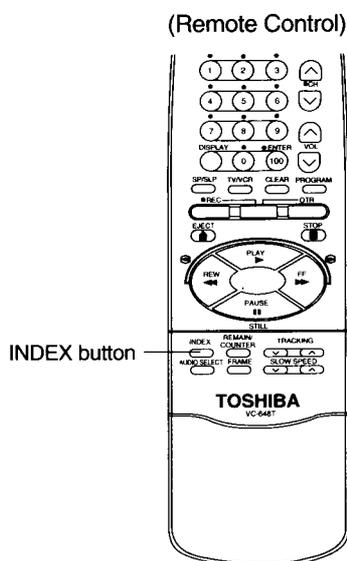


Notes:

- When registering or erasing the index signals is operated on the tape recorded on other VCRs, its pictures may be distorted.
- When you start index playback at the beginning or at the end of the tape, the first index mark on the tape might be skipped by the VCR.
- When registering index signals at 2 or more sections on the tape, certain intervals are needed: more than 1 min. in SP mode and more than 3 min. in SLP mode.


SPECIALIZED OPERATIONS (continued)

Scan and Play (Index Playback)

(Remote Control)

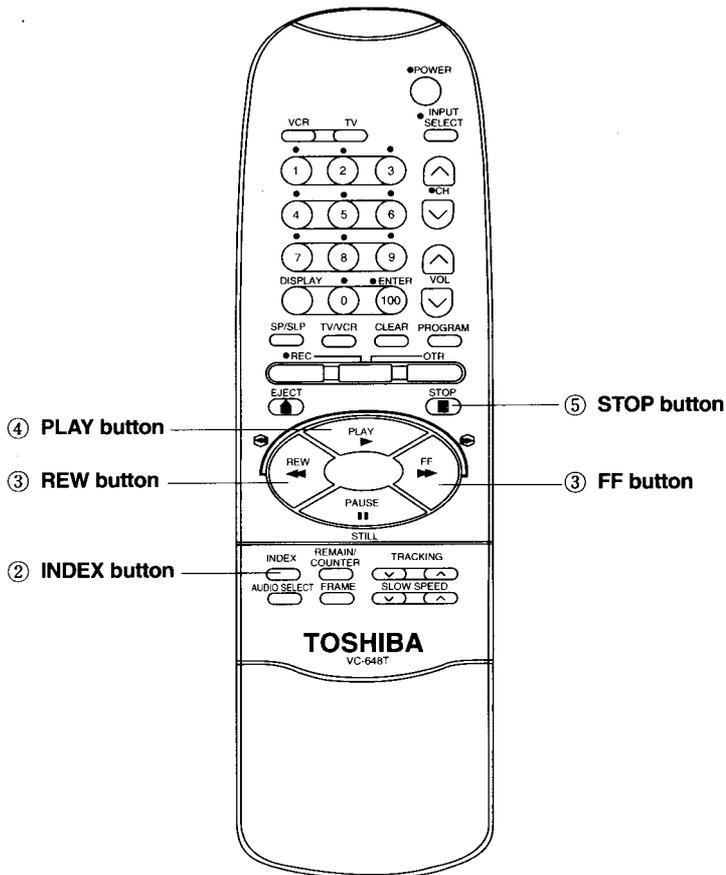


- ① Load the tape with index signals, then play back or stop it depending on preference.
- ② Press the *INDEX* button.

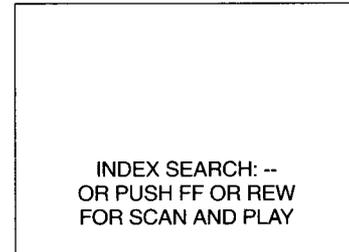

- ③ Press either the *FF* button or *REW* button within 9 seconds.
 - Press *FF* if you are at the beginning of the tape.
 - Press *REW* if you are at the end of the tape.

The VCR starts to fast forward or rewind the tape, playing it back around the section where the index signal is registered for 6 seconds. This operation is repeated until the end of the tape is reached.

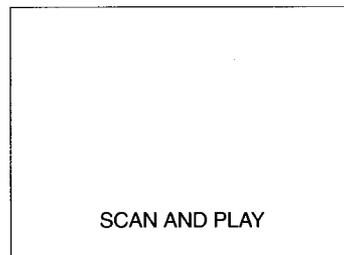

- ④ Press the *PLAY* button when the desired program is searched. "SCAN AND PLAY" on the screen goes off.


If the button is not pressed, fast forwarding or rewinding resumes while the next index signal is being searched.
- ⑤ Press the *STOP* button to stop playback.

Notes:


- Press the *PLAY* button to stop scan and play.
- Scan and play may not be applied to the first program recorded on the tape.
- Index signal may not find in accordance with the tape condition.

SPECIALIZED OPERATIONS(continued)

Skip Search 1 (Index Playback)

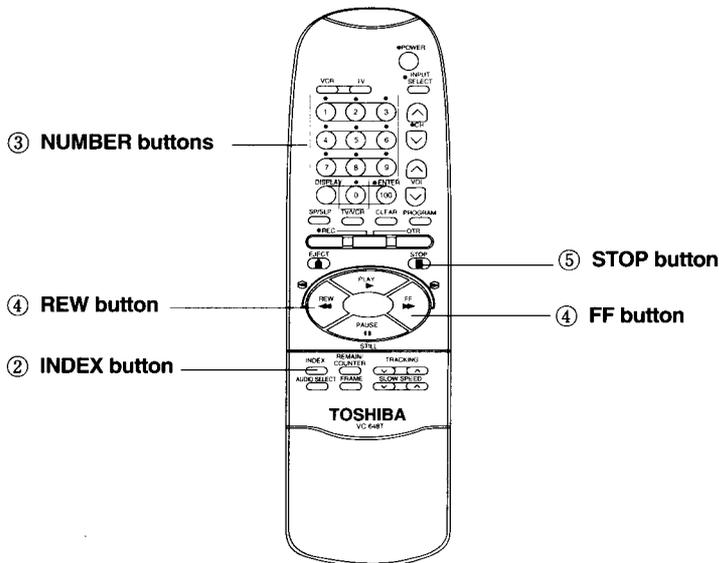



- ③ Press the *NUMBER* buttons to specify the index signal within 9 seconds. The VCR indicator comes on and the index signal number is displayed on the screen.

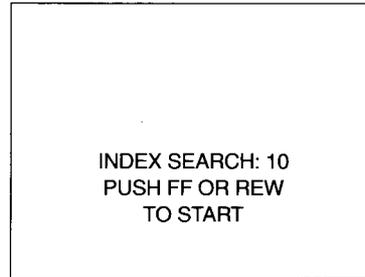

- ④ Within 9 seconds, press the *FF* button, if the desired index signal is in the program ahead, or the *REW* button if it is in the program behind.

• Enter skip search from the stop or playback mode.


- ① Load the tape with index signals, then play back or stop it depending on preference.
- ② Press the *INDEX* button.

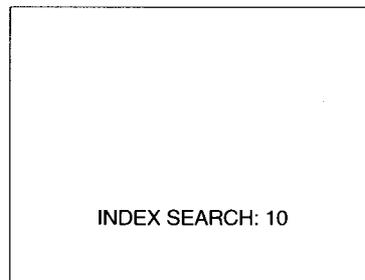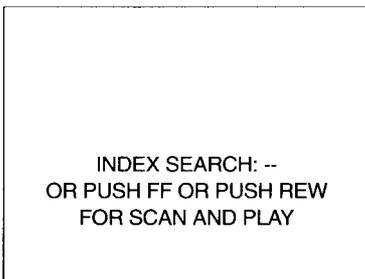

When the tape comes to the specified index signal it is played back automatically. The counter returns to the elapsed-time-on-tape read from the index signal read.

- ⑤ Press the *STOP* button to stop playback.

Numbering the index signals

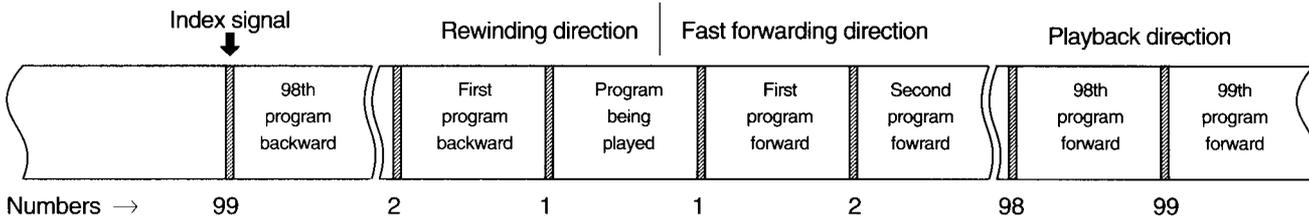

Number for up to 99th program backward and forward can be specified for skip search.

Notes:

- Press the *PLAY* or *STOP* button to stop skip search.
- Skip search may not work for the first program on the tape.
- Index signal may not find in accordance with the tape condition.
- The counter read for numbers reduces by one each time an index signal is skipped.

SPECIALIZED OPERATIONS(continued)

Skip Search 2

This set has a convenient function to search a picture speedily (ForwardPicture-Search) during playback.


Case 1: If you press the *FRAME(SKIP SEARCH)* button once on the remote control during playback, FPS(Forward-Picture-Search) mode is automatically enabled for a few seconds. FPS for a few seconds actually equals about one minute of the pre-recorded picture time.

Case 2: Additionally, if you press the button twice in a row within 2 seconds, FPS is extended twice than the Case 1. The actual elapsed time it takes SP tapes to be performed by SKIP SEARCH 2 is different from SLP tapes. (SP TAPES is about 3 times longer than SLP TAPES.) After the SKIP SEARCH 2 is ended, the mode automatically returns to playback.

Auto Repeat

VCR plays countless times repetition from tape start to end.

1. Press the *PROGRAM* button, the MENU will appear on TV screen.
2. Press the 4 button, the SET UP will appear on TV screen.
3. Press the 6 button to select the AUTO REPEAT ON function

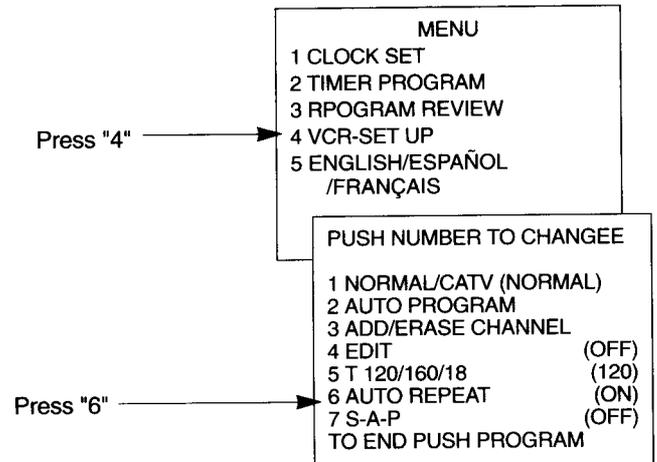

4. AUTO REPEAT indicator(↔) will light in the VCR's display panel, after you choose REPEAT feature on the SET UP screen.
5. Press the *PROGRAM* button twice, to return to normal screen.
6. Press the *PLAY* button to begin playback.
7. If the end of the tape is reached in PLAY mode, the tape will be rewinded automatically and start playing from the beginning again.

Note:


- Pressing the *POWER* or *INDEX* button, while in the AUTO REPEAT ON mode switches the mode to AUTO REPEAT OFF.

SPECIALIZED OPERATIONS(continued)

Remaining Tape Display Function

This function displays the remaining time on the tape. This may help you to plan ahead. This function is activated from the PLAY, REC, FF or REW mode.

- ① Load cassette into the cassette compartment. The VCR is turned on automatically.
- ② On the remote control, press the PROGRAM button, the MENU will appear on the TV screen.
- ③ On the remote control, press the 4 button. This VCR SET UP will appear on the TV screen.

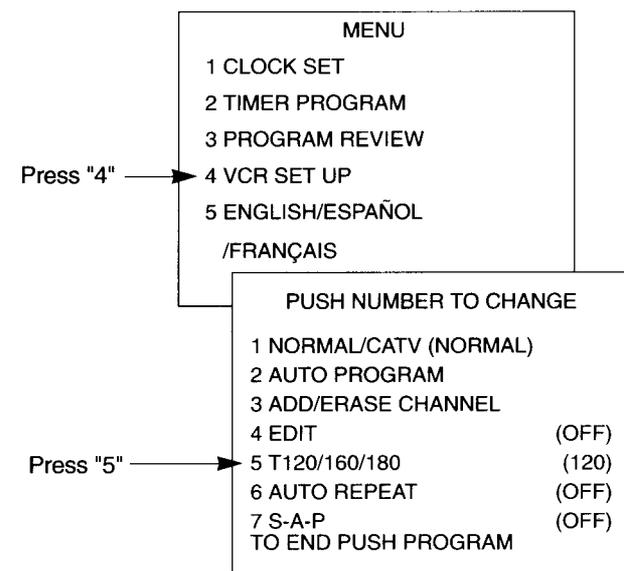

T-180: When using tape type T-180

T-160: When using tape type T-160



T-120: When using tape type T-120 or shorter one

To enter T-180, T-160 or T-120, press the "5" button cyclically.


- ④ Press the PROGRAM button twice to resume the normal screen.
- ⑤ Press the DISPLAY button once to display the normal displays on the TV screen.
- ⑥ Press the DISPLAY button again(while the normal display still appears on the TV screen) to display only the time counter on the TV screen. The time counter will remain on the TV screen.

- ⑦ Press the PLAY button or the REC button.
- ⑧ Press the REMAIN/COUNTER button. The VCR starts to calculate the remaining time on tape. Tape runs for a while for calculation.

The counter enters into the calculation mode from the time counter display mode.

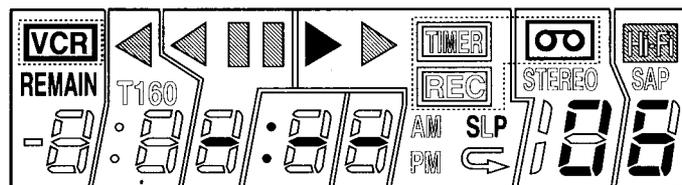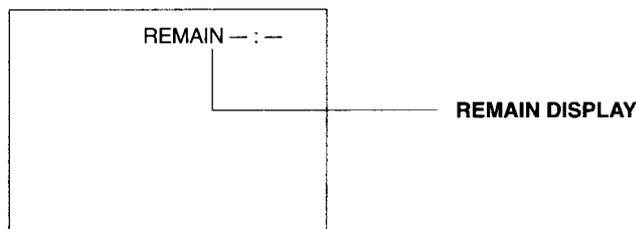

- ⑨ The calculation is completed within 1 minute at the most. The remaining time on the tape is indicated. (The example shows the remaining time is 1 hour 30 minutes.)

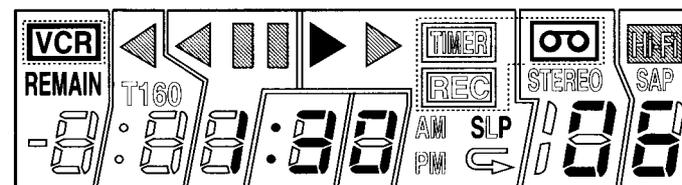

Remaining Time


Press the REMAIN/COUNTER button again and the counter changes from displaying the remaining time on the tape to the linear time.

Notes:

- During the remaining time on the tape is indicated, when the COUNTER button is pressed, or when the tape is being removed, the counter returns to indicate the elapsed time.
- The remaining time displayed is approximate time.
- During recording, the remaining time is calculated based on the recording mode, SP or SLP, which is selected by the SP/SLP button.
- During playback, the remaining time is calculated based on the playback mode(SP/SLP speed).
- The remaining time can be displayed during FF/REW.

SPECIALIZED OPERATIONS(continued)

Connection for MTS

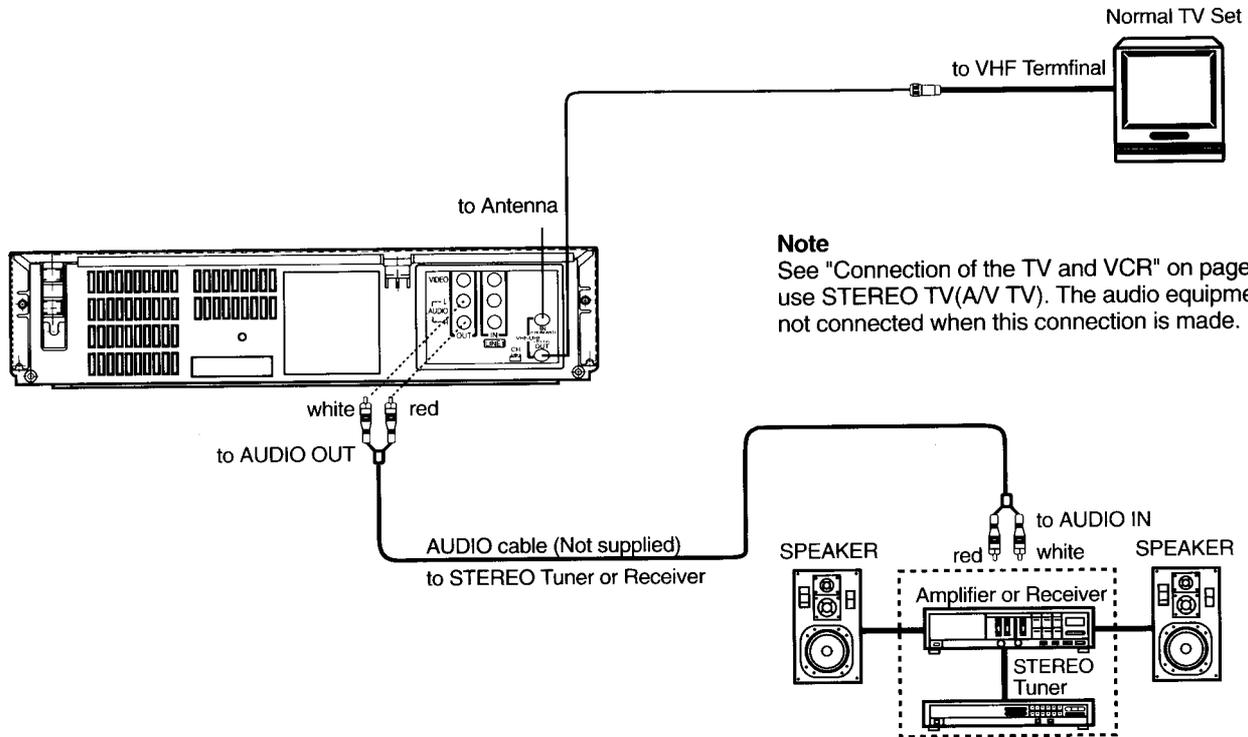

Note

See "Connection of the TV and VCR" on page 8 to use STEREO TV(A/V TV). The audio equipment is not connected when this connection is made.

Notes:

- Power must be off before making any connections.
- Adjust the volume control to avoid loud sounds to come out suddenly which may damage the speakers.
- Make sure that the stereo amplifier power is off before plugging or unplugging the VCR power cord. Otherwise, the speaker might be damaged.

MTS (Multichannel TV sound)

You can enjoy Multichannel TV sound, even if you are viewing a monaural sound TV by using a stereo amplified and speakers.

* Multi Display light on TV screen (SET UP)

PUSH NUMBER TO CHANGEE

1. NORMAL/CATV (NORMAL)
2. AUTO PROGRAM
3. ADD/ERASE CHANNEL
4. EDIT (OFF)
5. T120/160/180 (120)
6. AUTO REPEAT (OFF)
7. S-A-P (ON)

TO END PUSH PROGRAM

- SAP : SAP(Second Audio Program) permits the reception of dual-audio broadcasting. For example, the standard audio band transmits in English and the other in Spanish.
- S-A-P ON: You can enjoy the sound of SAP by setting the SAP ON in the VCR SET UP menu.


Multidisplay lights as follows:

- STEREO : When a program in stereo is received, STEREO mark light in the display panel.
- SAP : When Second Audio Program is received, SAP mark light in the display panel.

SPECIALIZED OPERATIONS(continued)

Recording SAP and/or Stereo Broadcasts

You can record SAP and/or stereo broadcasts by setting the **SAP** mode following the table below in addition to the basic manual recording operation.

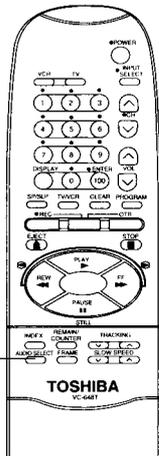

Setting the SAP switch

Type of broadcast	Indicator		S-A-P ON or OFF on the SET UP screen	Contents of recorded sound		
	SAP	ST STEREO		Normal sound track (Mono)	Hi-Fi sound track	
					L	R
Regular broadcast(monaural audio)	OFF	OFF	Either position (ON or OFF)	MONO	MONO	MONO
Stereo broadcast	OFF	ON	Either position (ON or OFF)	MONO (MIXED)	STEREO	
Regular+SAP (MONO)	ON	OFF	ON	MONO	MONO	SAP
			OFF	MONO	MONO	MONO
Stereo + SAP	ON	ON	ON	MONO	MONO	SAP
			OFF	MONO	STEREO	

- PUSH NUMBER TO CHANGE
1. NORMAL/CATV (NORMAL)
 2. AUTO PROGRAM
 3. ADD/ERASE CHANNEL
 4. EDIT (OFF)
 5. TAPE 120/160/180 (120)
 6. AUTO REPEAT (OFF)
 7. S-A-P (OFF)
- TO END PUSH PROGRAM


Note : To choose the SAP function.

1. Press the "**PROGRAM**" button on the remote control.
 2. Press the "4" tbutton, then appears SET UP screen as left.
- Now you can choose the function what you want.

Play of SAP and/or Stereo Sound (or Monitor of Recording)

You can play the sound of SAP by setting the **SAP ON** in the VCR SET UP menu following the table below in addition to the basic playback operation. Press the **AUDIO SELECT** button to turn the SOUND L/R indicators on screen display L or R (LEFT or RIGHT) and off to select the desired sound.

Setting AUDIO SELECT button

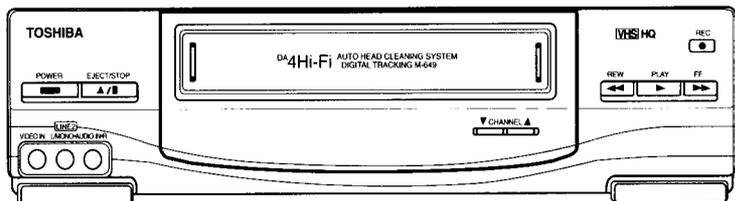

Desired sound	Pressing AUDIO SELECT button to turn on the desired L/R indicator on the screen	Sound through line output
SAP sound	R(RIGHT) is ON.	SAP
Stereo sound	Both R(RIGHT) and L(LEFT) are ON.	Stereo
Stereo sound heard in monaural	Both R(RIGHT) and L(LEFT) are OFF.	Mono

Note:


- Sound is monaural when the TV set to connected to RF OUT of this VCR.
- During Auto Tracking displayed **AUDIO SELECT** button is not operated.

SPECIALIZED OPERATIONS(continued)

SIMULCAST

Connection for Simulcast Recording

Broadcast or Incoming Cable(See CATV Connection)

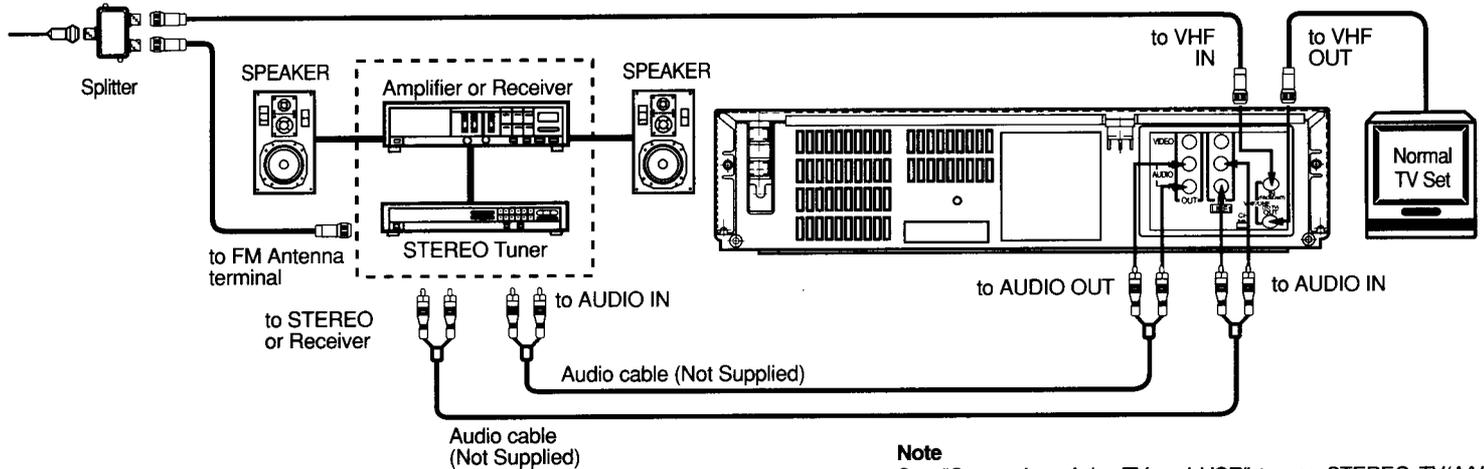

Note


See "Connection of the TV and VCR" to use STEREO TV(A/V TV). The stereo tuner and the VCR should also be connected when this connection is made.

Notes

- Noise might be generated in the AM program if the VCR is placed near a tuner or a radio. Therefore, separate the VCR from any tuner or radio.
- Since tapes recorded in Hi-Fi have wide dynamic range, adjust the volume so that no sudden loud sound damages the speakers.
- The stereo amplifier must be powered off before plugging or unplugging the VCR power cord. Otherwise, the speakers might be damaged.
- Power must be off before connection are made.
- Only L1 (rear Jack) is available, not L2.

Simulcast Recording

If the TV program such as MTV, HBO or MAX is also being simulcast in FM stereo, this VCR can also record the simulcast sound with your FM stereo tuner or receiver on to the sound track.

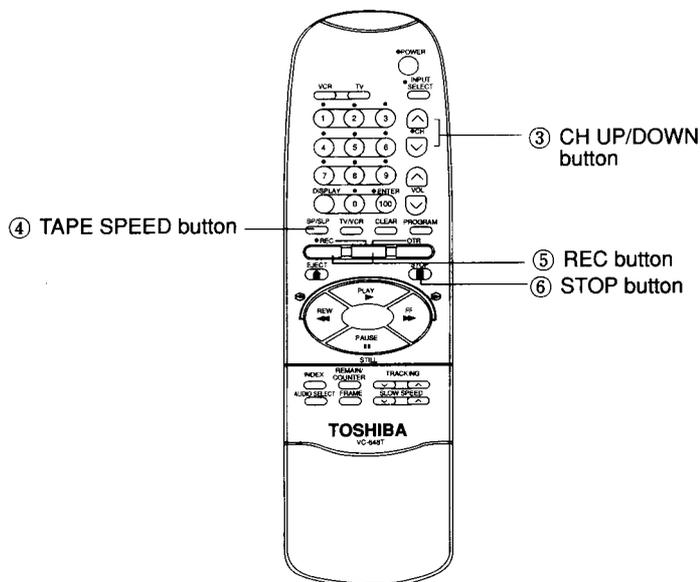


Preparation

1. Turn the FM stereo tuner or receiver ON and tune to the station for the simulcast program.
2. Turn of the TV set. Select 3 or 4 (corresponding with the setting of VCR 3-4 output channel selector).


Operation

- ① Load a cassette to record. The **POWER** turns on automatically.
- ② Press the **INPUT SELECT** button until "SIMUL" indicator is displayed on screen.
- ③ Press the **CHANNEL UP/DOWN** buttons to set the desired channel.
- ④ Set the **TAPE SPEED** button to SP or SLP.
- ⑤ Press the **REC** button.
- ⑥ Press the **STOP** button to stop recording.

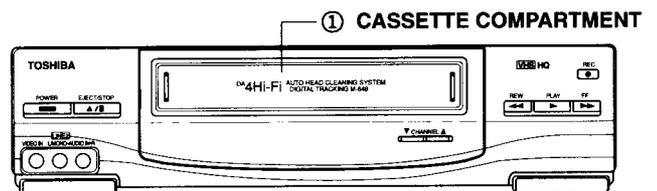

SPECIALIZED OPERATIONS(continued)

Audio Equipment Connection

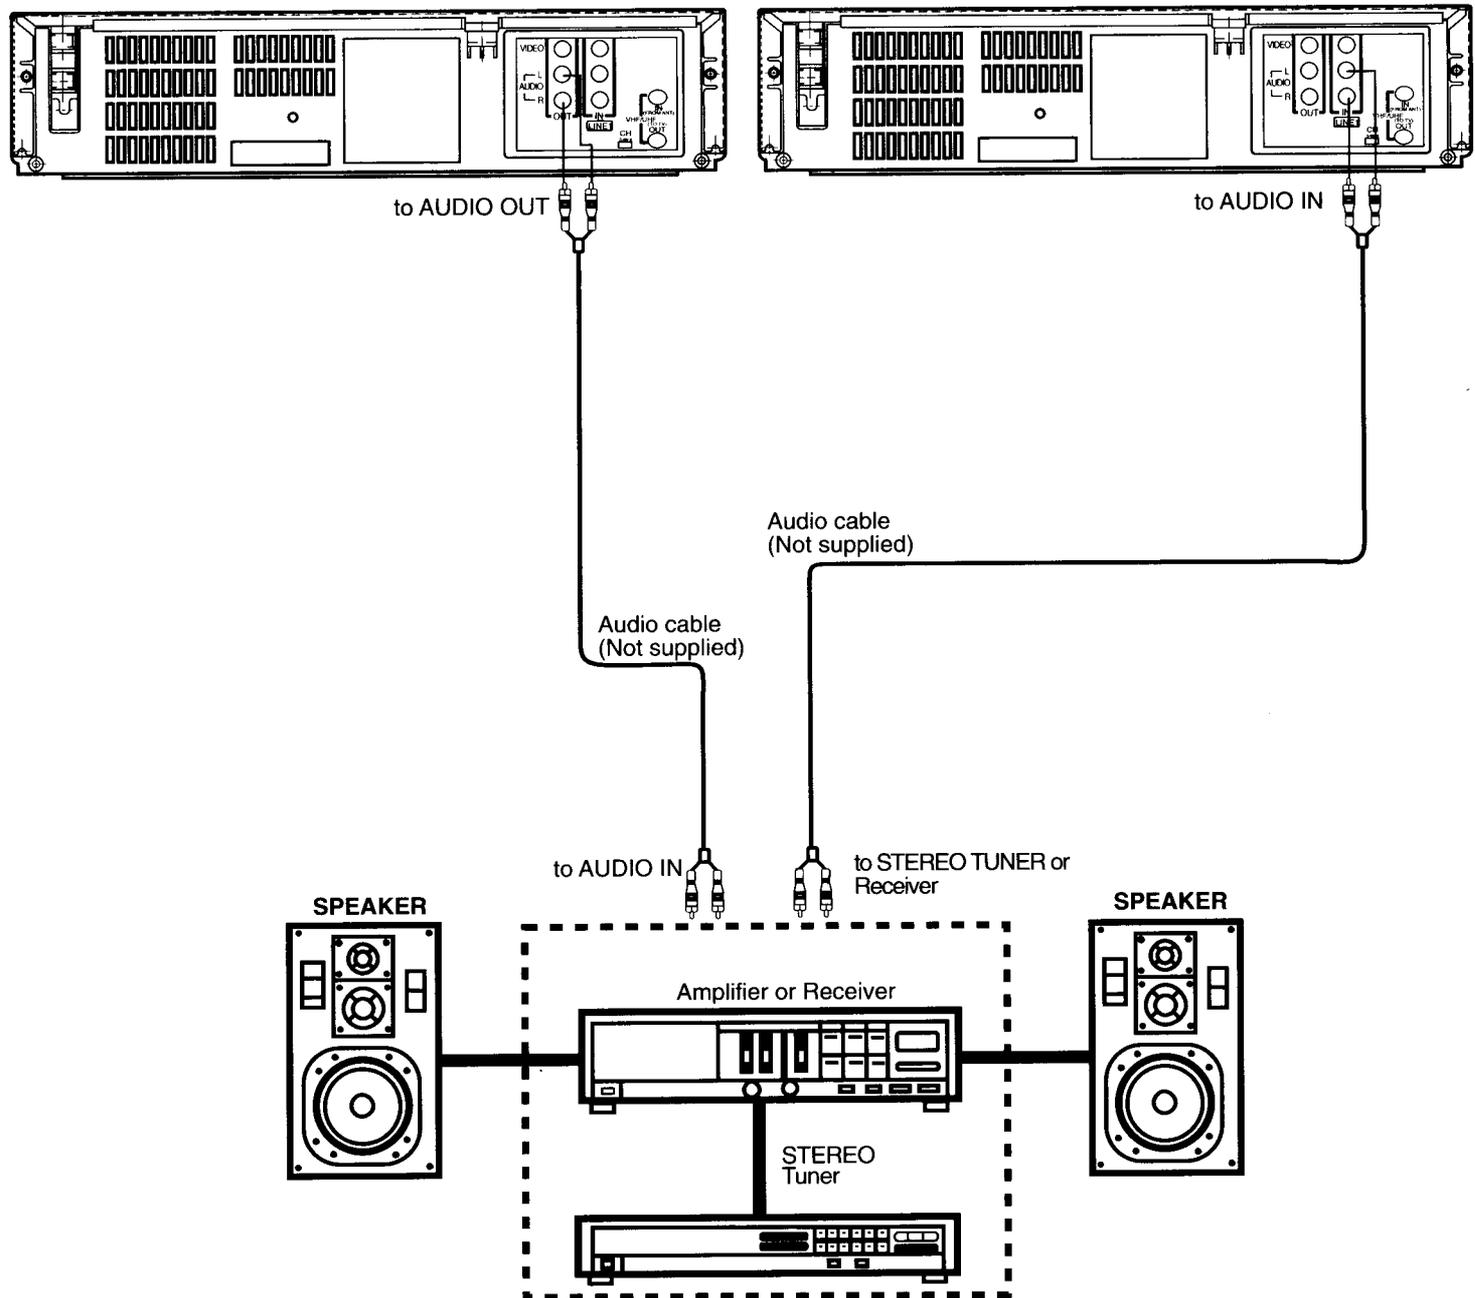


Notes:

- Noise might be generated in the AM program if the VCR is placed near a tuner or radio. If this happens, separate the VCR from the tuner or radio.
- Adjust the volume control to avoid loud sounds to come out which may damage the speakers.
- Make sure that the stereo amplifier is off before plugging or unplugging the VCR power cord. Otherwise, the speakers might be damaged.
- Power must be off before making any connections.

SPECIALIZED OPERATIONS(continued)

Audio Hi-Fi Recording

This VCR can also be used as an Audio Tape Recorder for Hi-Fi long recording (maximum 9 hours in SLP mode when using T-180 cassette).

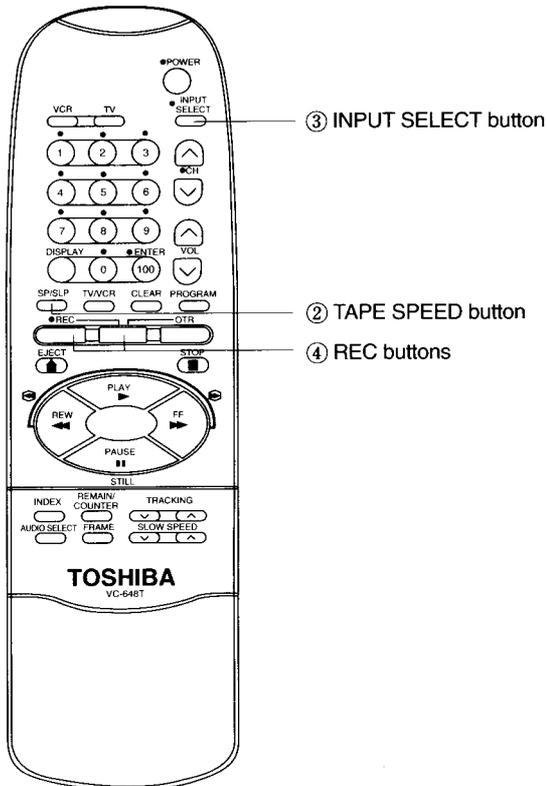


Preparation

- Setting up the audio equipment.
Connect this VCR to audio equipment to turn ON the power.
- Receives broadcast to be recorded in FM tuner.

Operation

- ① Load the cassette to be recorded. The VCR turns ON automatically.
- ② Press the **TAPE SPEED** button to select the recording mode.
- ③ Press the **INPUT SELECT** button to select the "LINE1(2)" display.
- ④ Press the **REC** buttons.

Set the audio equipment to playback at the same time.

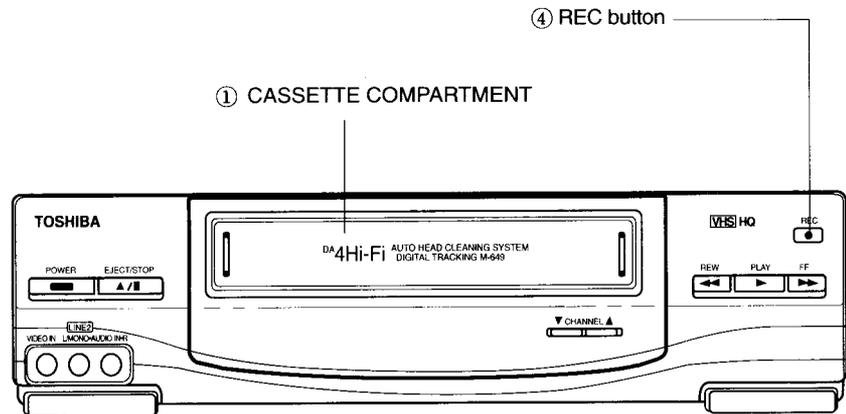

Notes:

- You can record with better audio quality in the SP mode.
- The sound to be recorded on the regular sound track of a tape is always adjusted to appropriate sound level for recording.
- Noise might be generated in the AM program if the VCR is placed near a tuner or radio. If this happens, separate the VCR from the tuner or radio.

SPECIALIZED OPERATIONS(continued)

Copying VCR Recording(using the EDIT ON/OFF) function


You can dub the tape for editing by connecting this VCR to another VCR.

Using this VCR for playback (see p. 27-29)

- ① Playback VCR: Set the EDIT ON/OFF function to "ON".
- ② Recording VCR: Press the record button, then the pause button to enter the recording pause mode.
- ③ Playback VCR: Press the *PLAY* button to activate play.
- ④ Recording VCR: Cancel the pause mode to activate recording.
- ⑤ Both VCRs: To terminate recording, press the stop button on the VCRs, Copying is completed.

Using this VCR for recording(see p. 38)

- ① Playing VCR: Set the EDIT ON/OFF function to "ON", if possible.
- ② Recording VCR: Press the *REC* button, then the *PAUSE/STILL* button to enter the pause mode.
- ③ Playing VCR: Press the play button to activate play.
- ④ Recording VCR: Press the *PAUSE/STILL* button again to cancel the pause mode to start recording.
- ⑤ Both VCRs: To terminate recording, press the stop button on both VCRs. Copying is completed.

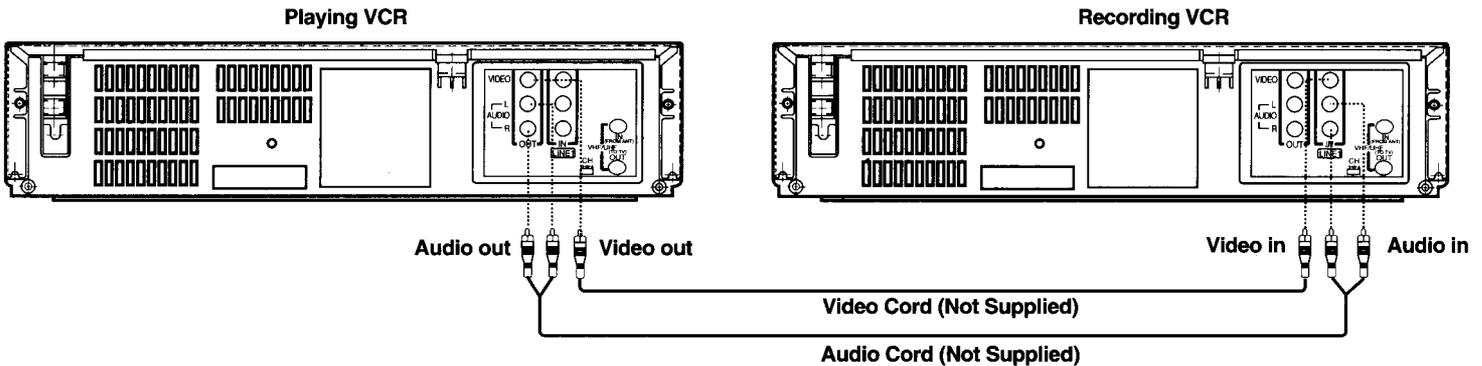

■ EDIT ON/OFF function

1. Press the PROGRAM button.
2. To display VCR SET UP screen, press the "4" button.
3. To display EDIT ON/OFF function, press the "4" button.

PUSH NUMBER TO CHANGE	
1	NORMAL/CATV (NORMAL)
2	AUTO PROGRAM
3	ADD/ERASE CHANNEL
4	EDIT (OFF)
5	T 120/160/180 (120)
6	AUTO REPEAT (OFF)
7	S-A-P (OFF)
TO END PUSH PROGRAM	

When dubbing is completed, set the EDIT ON/OFF function to "OFF". If it remains at "ON" when the tape is played back, picture quality is not satisfactory.

WARNING: Tapes can only be copied and used in accordance with applicable copyright laws. But, if the tape is covered by a copyright, it is illegal to copy it and/or charge an entrance fee to see it.

Note:

- In general, picture quality deteriorates somewhat in the dubbed tape. It is best to use the SP mode.

TROUBLE CHECKS

Sometimes problems can be easily solved by checking a few basic things. Check below before you call for help or take your VCR to an Authorized TOSHIBA VCR Service center.

It could save you time and money. If service should be necessary. Authorized TOSHIBA VCR Service centers are trained and equipped to furnish it.

Trouble	Checks and Adjustments
No Power	<ul style="list-style-type: none"> • Check to see if the VCR is plugged into an operating outlet.
VCR Does Not Respond to Remote Control	<ul style="list-style-type: none"> • Weak battery in remote control. • Remote control not aimed at the VCR or there is an obstruction between them. • Press the VCR button on the remote control for changing to the VCR mode.
Remote No Longer Controls a TOSHIBA TV	<ul style="list-style-type: none"> • Remote accidentally programmed for different brand of TV. Press TV and "1" buttons at the same time on the remote control to re-program. <i>Details are on page 23-24.</i>
Remote No Longer Controls a Compatible TV(Other Than TOSHIBA)	<ul style="list-style-type: none"> • Remote control may need to be re-programmed after batteries are changed. <i>See page 23-24.</i> • Check batteries in remote control.
Poor or No Picture for Normal TV Viewing	<ul style="list-style-type: none"> • [VCR] indicator is on. Press the <i>TV/VCR</i> button to turn it off. • TV monitor/receiver set to "video input". Switch TV to an active channel. • Carefully check antenna connections.
Snowy or No Picture During Playback	<ul style="list-style-type: none"> • Press one of the <i>TRACKING</i> buttons on the remote control to adjust tracking. • [VCR] indicator not on. Press <i>TV/VCR</i> button to turn it on. • Make sure the TV channel selector matches the channel you have selected with the <i>CH4/CH3</i> switch on the back of the VCR(3 or 4). • Make sure the TV is fine tuned. • Check the video cable connections between the VCR and TV monitor/receiver. • Make sure the TV monitor/receiver is set to the "video input" channel. • Try another tape. • Dirty tape has left deposits on VCR's heads. <i>See page 26 for head cleaning.</i> • Some snow/streaks are normal during search, frame advance, slow motion and stop-action playback.
Streaks in Picture During Normal Playback	<ul style="list-style-type: none"> • Press one of the <i>TRACKING</i> buttons on the remote control to move streaks up or down and out of the picture. • Tape stretched (poor quality or worn out).
Will Not Record or Play	<ul style="list-style-type: none"> • No cassette in VCR. • Eject and re-insert cassette. • Broken tape-try another cassette.
Will Not Record	<ul style="list-style-type: none"> • VCR is in pause mode. Press the <i>PAUSE</i> button. • Record-protect(safety) tab removed from cassette. • Make sure "L1(L2)" indicator is turned off in VCR's display panel for normal recording from the VCR's tuner. Press the <i>INPUT SELECT</i> button to turn off "L1(L2)" indicator.
Timer Recording Not Made	<ul style="list-style-type: none"> • Program entered incorrectly(wrong channel or times). • Power interruption. (Clock on the VCR's front panel will show "—:—".) • Clock was not set accurately(check AM/PM). • Program exceeded tape's length or tape was not rewound beforehand. • VCR was not turned off at the time recording was to start. • No tape in VCR or cassette's record-protect(safety) tab broken off.
Tape Stops Before Complete Rewind	<ul style="list-style-type: none"> • Press the <i>COUNTER</i> button on the remote control to turn off time counter's memory-stop feature, or press the <i>REW</i> button again. Tape rewinds only to "0:00:00M" ("0:00:00" in VCR's display panel) when memory stop is turned on. <i>Details are on page 29.</i>
Rewind Does Not Operate	<ul style="list-style-type: none"> • Tape already rewound.
Clock shows Incorrect Time or Date	<ul style="list-style-type: none"> • Power interruption. (Clock on the front panel will show "—:—".) • Clock was not set accurately (check AM and PM). • Clock display shows recording time remaining for OTR recording.
VCR Makes Noise When Stopped	<ul style="list-style-type: none"> • VCR is removing tape from heads. This is normal. The cylinder head inside the VCR will continue to rotate for about 5 minutes after you put the VCR in the stop mode or turn it off.
Will Not Auto Program Active Channels Correctly	<ul style="list-style-type: none"> • <i>CATV</i> is not set correctly. Press 1 button on the VCR <i>SET UP</i> menu to turn on <i>CATV</i> if you have connected a cable-TV system. Turn <i>NORMAL</i> on for a home antenna on the VCR <i>SET UP</i> menu.
Can Not Select Channels Over 69	<ul style="list-style-type: none"> • Channels over 69 can only be selected if available from your cable-TV system.
Tape Plays Back in Slow Motion	<ul style="list-style-type: none"> • Press the <i>PLAY</i> button to normal playback..

Cleaning the VCR

Dust exposed surfaces as required, using a soft cloth or the dusting attachment of your vacuum cleaner. Occasionally use the vacuum cleaner to remove dust from the ventilation, holes on the top, back, sides, and bottom of the cabinet.

Some of the plastic surfaces are easily scratched, and they can be marred by alcohol and various solvents. Avoid excessive use of oil-based furniture polishes since the materials used in the cabinet are non-porous and the residue will accumulate more dust.

Design Specifications

Format:	VHS
Record/Playback System:	Video : 4-Head record/playback system Audio: Hi-Fi STEREO and mono record/playback system
Video Signal System:	EIA standard: NTSC color
Antenna:	75-ohm external VHF/UHF combined Antenna terminal
Tuner:	USA: 181 channels (125 cable channels) CANADA: 178 channels (122 cable channels)
Type:	Auto-programming frequency synthesis
Power Requirement:	120AC, 60Hz
Power Consumption:	23 watts
Dimension:	89.5mm high (3.5 inches) 380mm wide (15.2 inches) 331mm deep (13.2 inches)
Weight:	4.4Kg (9.68 lbs)
Storage Temperature Range:	-22° F to + 149° F
Operating Temperature Range :	+41° F to + 104° F

Specifications and features are subject to change without notice.

LIMITED WARRANTY

TOSHIBA VIDEO CASSETTE RECORDER

Toshiba America Consumer Products, Inc. ("TACP") and Toshiba Hawaii Inc. ("THI") make the following limited warranties. These limited warranties extended to the original consumer purchaser or any person receiving this set as a gift from the original consumer purchaser and to no other purchaser or transferee.

Limited Ninety (90) Day Warranty

TACP and THI warrant this product against defects in materials or workmanship for a period of ninety (90) days after the date of original retail purchase. During this period, TACP and THI will repair a defective product or part, without charge to you. You must deliver the entire product to a TACP/THI Service Center. You pay for all transportation and insurance charges for the set to and from the Service Center.

Limited One (1) Year Warranty

TACP and THI further warrant the parts in this product against defects in materials or workmanship for a period of one year after the date of original retail purchase. During this period, TACP and THI will replace a defective part without charge to you, except that if a defective part is replaced after ninety (90) days from the date of the original retail purchase you pay labor charges involved in the replacement. You must also deliver the entire product to one of the TACP/THI Service Centers. You pay for all transportation and insurance charges for the set to and from the Service Center.

Owner's Manual and Registration Card

You should read the owner's manual thoroughly before operating this product. You should also insure that your name and address are on file as owners of a TACP/THI product by completing and mailing the enclosed registration card within ten days after you, or the person who has given you this product as a gift, purchased this product.

Step-By-Step Procedures – How to Obtain Warranty Service

IN THE CONTINENTAL UNITED STATES...

Should your unit require
service or parts, CALL

This is one way to enable TACP/THI to establish the date of purchase of the product, as well as to provide you with better customer service and improved products. Failure to return the card will not affect your rights under this warranty so long as you retain other proof of purchase such as a bill of sale.

Your Responsibility

The above warranties are subject to the following conditions:

- (1) You must retain your bill of sale or provide other proof of purchase. Completing and mailing in the enclosed registration card within ten days after the original retail purchase is one way of providing such other proof of purchase.
- (2) You must notify an Authorized TACP/THI Services Station within thirty (30) days after you discover a defective product or part.
- (3) All warranty servicing of this product must be made by an Authorized TACP/THI Service Station.
- (4) These warranties are effective only if the product is purchased and operated in the U.S.A.
- (5) Labor service charges for set installation, set up, adjustment of customer controls and installation of repair or antenna systems are not covered by this warranty. Reception problems caused by inadequate antenna systems are your responsibility.
- (6) Warranties extend only to defects in materials or workmanship as limited above and do not extend to any product or parts which have been lost or discarded by you or to damage to products or parts caused by misuse, accident, improper installation, improper maintenance or use in violation of instructions furnished by us; or to units which have been altered or modified without authorization of TACP/THI or to damage to products or parts there of which have had the serial number removed, altered, defaced or rendered illegible.



HAWAII

Toshiba Hawaii Inc.
Service Department
327 Kamakee Street
Honolulu, HI 96814
Phone Number
:
(808) 521-5377

IN THE EVENT A PROBLEM SHOULD DEVELOP WITH YOUR PRODUCT, PLEASE PROCEED AS FOLLOWS:

- (1) Refer to the troubleshooting guide in your owner's manual. This check list may solve your problem.
- (2) Contact one of the TACP/THI Service Centers listed below for warranty service or call the TACP toll free number 1-800-631-3811 within thirty (30) days after you find a defective product or part.
- (3) Arrange for the delivery of the product to the Authorized TACP/THI Service Center. Products shipped to the Service Center must be insured and safely and

securely packed, preferably in the original shipping carton, and a letter explaining the defect and also a copy of the bill of sale or other proof of purchase must be enclosed. All transportation and insurance charges must be prepaid by you. (See Packing and Shipping instructions on TOSHIBA SERVICE PROCEDURE).

- (4) If you have any question about service, please contact one of the following TACP/THI Service Centers:

EAST

82 Totowa Road
Wayne, NJ 07470
Phone Number:
(201) 628-8000

SOUTHEAST

490 Armour Circle, N.E.
Atlanta, GA 30324
Phone Number:
(404) 872-6955

MIDWEST

1010 Johnson Drive
Buffalo Grove, IL
60089
Phone Number:
(708) 541-9400

SOUTHWEST


1421 champion Drive
Suite 304
Carrollton, TX 75006
Phone Number:
(214) 243-1367

WEST

5490 E. Francis Street
Ontario, CA 91761
Phone Number:
(714) 988-5303

IMPORTANT: PACKING AND SHIPPING INSTRUCTIONS

When you send the product to a service center, you must use the original carton box and packing material, then insert the original carton box containing the unit into another carton, using more packing material.

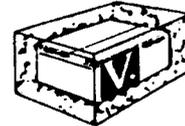

ALL WARRANTIES IMPLIED BY STATE LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY LIMITED TO THE DURATION OF THE LIMITED WARRANTIES SET FORTH ABOVE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. **WITH THE EXCEPTION OF ANY WARRANTIES IMPLIED BY STATE LAW AS HEREBY LIMITED, THE FOREGOING EXPRESS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, GUARANTEES, AGREEMENTS AND SIMILAR OBLIGATIONS OF MANUFACTURER OR SELLER WITH RESPECT TO THE REPAIR OR REPLACEMENT OF ANY PRODUCT OR PARTS.**

IN THE EVENT SHALL TACP OR THI BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages so the above limitation may not apply to you.

No person, agent, distributor, dealer, service station or company is authorized to change, modify or extend the terms of these warranties in any manner whatsoever. The time within which an action must be commenced to enforce any obligation of TACP and THI arising under this warranty or under any statute, or law of the United States or any state thereof, is hereby limited to one year from the date you discover or should have discovered, the defect. This limitation does not apply to implied warranties arising under state law. Some states do not permit limitation of the time within which you may bring an action beyond the limits provided by state law so the above provision may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

TOSHIBA AMERICA CONSUMER PRODUCTS, INC.

Printed in Korea

70790243



TOSHIBA
...In Touch with Tomorrow