

SVEN®

OFFICE KEYBOARD 8000

РУКОВОДСТВО ПОЛЬЗОВАТЕЛЯ

Рус

Клавиатура Sven Office Keyboard 8000



Перед эксплуатацией внимательно ознакомьтесь с настоящим руководством и сохраните его на весь период использования.

Благодарим Вас за покупку клавиатуры торговой марки SVEN!

АВТОРСКОЕ ПРАВО

© Sven Corp. 2004. Версия 1.0 (V 1.0)

Данное руководство и содержащаяся в нем информация защищены авторским правом. Все права оговорены.

ТОРГОВЫЕ МАРКИ

Все торговые марки являются собственностью их законных владельцев.

ПРЕДУПРЕЖДЕНИЕ ОБ ОГРАНИЧЕНИИ ОТВЕТСТВЕННОСТИ

Информация, содержащаяся в этом документе, тщательно проверена, однако нет полной гарантии, что она будет соответствовать описанию конфигурации аппаратной части и программного обеспечения (ПО) конкретной системы. В содержание руководства могут быть внесены изменения без предварительного извещения.

По вопросам технической поддержки обращайтесь по адресу: <http://www.sven.ru>
Здесь же вы сможете найти обновленную версию данного руководства.

СОДЕРЖАНИЕ

1. Особенности клавиатуры	4
2. Комплектация	4
3. Требования к системе	4
4. Подготовка к работе	4
4.1 Установка программного обеспечения (ПО) для Windows 98/Me/NT/2000/XP	4
4.2 Удаление ПО	4
5. Описание функций кнопок и клавиш клавиатуры	5
5.1 Интернет-кнопки	5
5.2 Кнопки мультимедиа	5
5.3 Кнопки управления питанием для Windows	6
5.4 Кнопки управления Windows-приложениями	6
5.5 Кнопки вызова программ Office	6
5.6 Кнопки для программ Office	6
5.7 Дополнительные клавиши Office	7
6. Настройка программы мультимедийной клавиатуры	8
6.1 Активизация клавиш на экране	8
6.2 Конфигурирование кнопок	8
6.3 Иконка на панели задач	8
6.4 Закреть	8
6.5 Настройки функции «Дисплей на экране» (OSD)	8
6.6 О программе	8
6.7 Выход	8
7. Решение возможных проблем	9

1. ОСОБЕННОСТИ КЛАВИАТУРЫ

- Совместима с Windows 98/Me/NT/2000/XP
- Удобное управление средствами мультимедиа
- Клавиши регулирования громкостью
- Клавиши прокрутки вверх/вниз в Windows-приложениях
- Интернет-кнопки
- Кнопки управления питанием
- Кнопки вызова программ Office
- 15 дополнительных клавиш Office

2. КОМПЛЕКТАЦИЯ

- 1) Клавиатура — 1 шт.
- 2) CD-диск — 1 шт.
- 3) Руководство пользователя — 1 шт.

3. ТРЕБОВАНИЯ К СИСТЕМЕ

- Windows 98/Me/NT/2000/XP
- CD-ROM
- Звуковая плата
- Интерфейс PS/2

4. ПОДГОТОВКА К РАБОТЕ

4.1 Установка программного обеспечения для Windows 98/Me/NT/2000/XP

Перед установкой драйвера клавиатуры Sven Office 8000 удалите ранее установленные драйверы других клавиатур. Вставьте CD-диск с драйверами в CD-ROM и запустите программу установки Setup.exe. Следуйте инструкциям на экране. В первом окне – введение. Прочитайте его, затем продолжайте установку. Есть 2 способа установки драйвера:

Минимальная инсталляция для Windows Me/2000/XP (Minimum installation)

При такой установке драйвер поддерживает кнопки прокрутки (вверх, вниз, влево, вправо), клавиши запуска приложений в Office и 5 кнопок быстрого доступа. Такая инсталляция использует минимум ресурсов ОС Windows и занимает очень мало места на жестком диске. Стандартные кнопки быстрого доступа (мультимедийные и интернет-кнопки) функционируют без установки драйвера.

Стандартная инсталляция для любой версии Windows (Typical installation)

При такой установке драйвер поддерживает кнопки прокрутки (вверх, вниз, влево, вправо), кнопки запуска приложений в Office, 12 кнопок быстрого доступа, стандартные мультимедийные и интернет-кнопки быстрого доступа и функцию отображения клавиатуры на экране. Такая установка занимает больше места на жестком диске и использует больше ресурсов ОС.









Программное обеспечение автоматически начнет инсталляцию на жесткий диск и установится в папку C:\PROGRAM FILES\NETROPA\. После инсталляции драйвера клавиатуры перезагрузите компьютер, чтобы активизировать программное обеспечение мультимедийной клавиатуры. После запуска ОС иконка клавиатуры в панели задач Windows автоматически активизируется.

4.2 Удаление ПО








Чтобы удалить ПО клавиатуры, зайдите в **Setting (Настройка) -> Control Panel (Панель управления) -> Add/Remove Programs (Установка/Удаление программ)** и удалите ПО клавиатуры.

5. ОПИСАНИЕ ФУНКЦИЙ КНОПОК И КЛАВИШ КЛАВИАТУРЫ

5.1 Интернет-кнопки

	Back (Назад)	Возвращает к предыдущей веб-странице.
	Forward (Далее)	Продвигает к последующему, ранее просмотренному элементу в веб-браузере.
	Stop (Стоп)	Приостанавливает загрузку и/или обновление веб-страницы или активного окна.
	WWW (Интернет)	По умолчанию запускает веб-браузер. Если веб-браузер активен, открывает домашнюю страницу.
	E-mail (Электронная почта)	Запускает программу электронной почты, установленную по умолчанию.
	Favorites (Избранное)	Открывает пункт меню Favorites (Избранное) в программе Internet Explorer, где хранятся ссылки на часто используемые файлы и веб-страницы.
	Refresh (Обновить)	Обновляет информацию на открытой странице или в активном окне.
	Search (Поиск)	По умолчанию запускает интернет-браузер.



5.2 Кнопки мультимедиа

	V- (Уменьшение громкости)	Уменьшает громкость звука на один уровень на каждое нажатие кнопки.
	V+ (Увеличение громкости)	Увеличивает громкость звука на один уровень на каждое нажатие кнопки.
	Mute (Отключение звука)	Отключает звук. Для включения звука нажмите на эту кнопку еще раз.
	Pre-track (Предыдущий трек)	Переводит воспроизведение к предыдущему треку/файлу.
	Play/Pause (Воспроизведение/Пауза)	Проигрывает/приостанавливает воспроизведение аудио/видеофайлов.
	Stop (Стоп)	Останавливает воспроизведение аудио/видеофайлов.
	Next track (Следующий трек)	Переводит воспроизведение к следующему треку/файлу.




Примечание.

Функция Play проигрывает CD-, VCD-, DVD-диски и видеофайлы (.AVI, .MPG, .MOV). Если дисковод пуст, появится диалоговое окно, где будет предложено выбрать аудио/видеофайл. Воспроизведение начнется, когда будет выбран файл и подана команда Open. Если у Вас установлено два CD-Rom'a, выполнять эту функцию будет только один, выбранный по умолчанию.





5.3 Кнопки управления питанием для Windows

	Power	Выключает компьютер, если в BIOS установлена функция управления питанием.
	Sleep	Переводит систему в режим сна, если ПК поддерживает управление питанием и функция активизирована. Если управление питанием не активизировано, данная функция не выполняется.










5.4 Кнопки для работы в Windows-приложениях

	My Computer (Мой компьютер)	Открывает окно «Мой компьютер» с отображением содержимого дисководов, жесткого диска, сетевых приводов и т. д.
	Calculator (Калькулятор)	Запускает встроенный калькулятор от Microsoft Windows.
	Log Off (Выход из системы)	Открывает диалоговое окно Завершение работы: выход из системы, закрытие всех программ, отключение компьютера от сети, подготовка компьютера к работе другого пользователя.















5.5 Кнопки вызова программ Office

	Word	Открывает Microsoft Word, можно запрограммировать эту кнопку быстрого доступа на другое приложение.
	Excel	Открывает Microsoft Excel, можно запрограммировать эту кнопку быстрого доступа на другое приложение.
	Power Point	Открывает Microsoft Power Point, можно запрограммировать эту кнопку быстрого доступа на другое приложение.
	Calendar	Открывает Microsoft Outlook, можно запрограммировать эту кнопку быстрого доступа на другое приложение; по умолчанию установлен календарь.

5.6 Кнопки для программ Office

	Cut (Вырезать)	Вырезает выделенные объекты в буфер обмена.
	Copy (Копировать)	Копирует выделенные объекты в буфер обмена.
	Paste (Вставить)	Вставляет предварительно вырезанную или скопированную в буфер обмена информацию.
	Mark (Выделить)	Выделяет объекты с помощью кнопки управления курсором и кнопки Mark.
	Back (Назад)	Возвращает к предыдущему, ранее просмотренному элементу в программах, поддерживающих команду Back.
	Forward (Далее)	Продвигает к последующему элементу в программах, поддерживающих команду Forward.
	App Sw (Переключить окна приложений)	Переключает окна: активное и предыдущее открытое.
	Close (Закрыть)	Закрывает активное приложение Windows.
	Scroll Pad (Кнопка-манипулятор прокрутки)	Выполняет функцию прокрутки по четырем направлениям: влево/вправо/вверх/вниз.

5.7 Дополнительные клавиши Office


Office Lock	Office Lock key	Подключает 15 дополнительных клавиш Office. По умолчанию функция включена.
	F1 - Help	Открывает Справку в активном окне.
	F2 - New	Создает новый документ в программах, которые поддерживают эту функцию.
	F3 - Open	Открывает документ в программах, которые поддерживают эту функцию.
	F4 - Save	Сохраняет файл в активном окне.
	F5 - Replace	Осуществляет поиск, замену и форматирование заданного текста.
B	F6 - Bold	Выделяет/снимает выделение.
	F7 - Spell	Запускает функцию «Проверка правописания» в текущем документе, если текстовый редактор поддерживает ее.
	F8 - Bullets	Добавляет/убирает маркеры в выделенном абзаце.
	F9 - Reply	Вызывает бланк электронного сообщения (для программы MS Outlook или Outlook Express).
	F10 - Forward	Переадресовывает электронное сообщение в активном окне (для программы MS Outlook или Outlook Express).
	F11 - Send	Отправляет электронное сообщение (для программы MS Outlook или Outlook Express).
	F12 - Task panel	Показывает/скрывает предварительно отображенную панель задач Office (только для Office XP).
	Print Scn - Print	Распечатывает текущий файл.
	Scroll lock - Undo	Отменяет последнюю команду или отменить последний ввод.
	Pause - Redo	Возвращает действие последней отмененной команды.

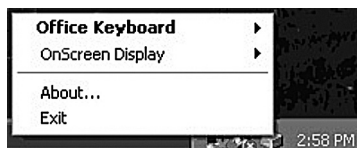
Примечание к разделу 5.

Особенности работы клавиатуры в различных операционных системах:

- При работе в ОС Windows 95 и выше функциональные клавиши (Cut, Copy, Paste, Mark, Application Switch, Close, My Computer, Log Off, Sleep, Power) не нуждаются в какой-либо программной поддержке.
- При работе в ОС Windows Me/2000/XP мультимедийные и интернет-клавиши не нуждаются в какой-либо программной поддержке.
- При работе в ОС Windows клавиши приложений (Office, Scroll Pad, Calculator) не нуждаются в какой-либо программной поддержке.


6. НАСТРОЙКА ПРОГРАММЫ МУЛЬТИМЕДИЙНОЙ КЛАВИАТУРЫ

При правильной установке программного обеспечения для мультимедийной клавиатуры в панели задач Windows появится соответствующая иконка . Она позволит запустить приложение и несколько функций Вашего компьютера одним нажатием клавиши на клавиатуре.



Нажмите правую кнопку мыши на этой иконке, чтобы активизировать меню для настройки OSD и ПО клавиатуры.

6.1 Активизация клавиш на экране



Нажмите левой кнопкой мыши на иконку  в панели задач Windows, чтобы активизировать клавиши клавиатуры Sven Office 8000. Чтобы убедиться в функционировании любой из 12 кнопок, щелкните левой кнопкой мыши по изображению клавиши на экране, затем нажмите соответствующую ей кнопку на клавиатуре.

6.2 Конфигурирование кнопок



Если Вы активизируете ПО клавиатуры и выберете **Configure Buttons**, то на экране увидите трехмерную картинку (3D Image). В этом режиме можно определять функции Office Keyboard. Щелкнув левой кнопкой мыши по любой из кнопок на экране, Вы увидите функцию этой кнопки по умолчанию.

6.3 Иконка на панели задач

Выберите эту опцию, чтобы показать/спрятать иконку  Office Keyboard на панели задач. Опция 3D Image также выполняет эту функцию. Чтобы восстановить иконку , вновь вызовите Office Keyboard из меню программ.

6.4 Закреть

Выбор этой опции прекратит выполнение клавиатурой функций быстрых клавиш. Опция 3D Image также выполняет эту функцию. Для восстановления этих функций вновь вызовите Office Keyboard из меню программ. Функции быстрых клавиш будут восстановлены.

6.5 Настройки функции «Дисплей на экране» (OSD)

Опция **Подключение/Отключение** позволяет включать и выключать режим «Дисплей на экране» (OSD).

Опция **Цвет надписей** открывает диалоговое окно, в котором можно выбрать цвет надписей OSD.

Опция **Тип шрифта** открывает диалоговое окно, в котором можно выбрать любой тип шрифта, установленный в ОС Windows, для отображения на экране OSD.

Опция **Установка длительности высвечивания OSD** позволяет установить продолжительность отображения на экране монитора функций OSD.

6.6 О программе



Эта опция включает диалоговое окно, отображающее информацию о драйвере клавиатуры.

6.7 Выход



Эта опция позволяет закрыть ПО клавиатуры и удалить его из оперативной памяти компьютера. При повторной загрузке ОС программное обеспечение клавиатуры будет активным.

7. РЕШЕНИЕ ВОЗМОЖНЫХ ПРОБЛЕМ

— ПО клавиатуры Sven Office 8000 не позволяет установить другое ПО.

Если при установке какого-либо ПО возникает конфликт с ПО клавиатуры Sven Office Keyboard 8000, то, возможно, придется удалить действующий драйвер клавиатуры из памяти компьютера. Щелкните правой кнопкой по иконке  Sven Office Keyboard 8000 и выберите Exit. Установите необходимое Вам ПО. После перезагрузки компьютера иконка  Sven Office Keyboard 8000 снова появится на панели задач.

— ПО клавиатуры не функционирует должным образом.

После установки ПО Sven Office Keyboard 8000 на панели задач появится иконка . Щелкните правой кнопкой по иконке  и выберите пункт меню Exit. Затем откройте панель управления из меню Start (Пуск), выберите Установка/удаление программ и удалите ПО клавиатуры Sven Office Keyboard 8000. Перегрузите компьютер и установите драйверы заново.

— CD-ROM слишком медленно работает.

Если Ваш CD-ROM слишком медленно работает, его скорость может быть увеличена заменой дисководов на более быстрый.

— Не запускается CD или VCD-проигрыватель.

Убедитесь, что на Вашем компьютере есть соответствующее программное и аппаратное обеспечение для выполнения этих функций и что оно правильно установлено.

— Установленные по умолчанию клавиши быстрого доступа Microsoft Windows не работают.

Драйвер клавиатуры Sven Office Keyboard 8000 перехватывает некоторые ресурсы клавиш быстрого доступа, установленные по умолчанию для ОС Windows. Если установлен драйвер клавиатуры, комбинация клавиш - CTRL+ALT+E, CTRL+ALT+P, CTRL+ALT+O, CTRL+ALT+D, CTRL+ALT+C, возможно, не будут функционировать должным образом, Вам придется выбирать другие комбинации.

Keyboard Sven Office Keyboard 8000



Please read this operation manual before using the unit and retain this operation manual in safe place for future reference.

Thank you for purchase of the keyboard of trade mark Sven.

COPYRIGHT

© Copyright 2004 V 1.0

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic or other means, in any form, without prior written permission of the manufacturer.

TRADEMARKS

All trademarks and registered trademarks are the property of their respective owners.

ABOUT THIS MANUAL

This manual is designed to assist you in installing and using the keyboard. Information in this document has been carefully checked for accuracy; however, no guarantee is given to the correctness of the contents. The information in this document is subject to change without notice.

TABLE OF CONTENTS

1. Features of the keyboard	13
2. Completeness of delivery	13
3. System Requirements	13
4. Installation	13
4.1 Installation for Windows 98/Me/NT/2000/XP	13
4.2 Un-installation	13
5. Work on the keyboard	14
5.1 Description of functions of buttons for Internet	14
5.2 Description of functions of buttons for multimedia	14
5.3 Description of functions of buttons for Power Manager for Windows	14
5.4 Buttons for work in Windows applications	15
5.5 Buttons of a call of programs Office	15
5.6 Buttons for programs Office	15
5.7 Additional keys Office connected by key Office Lock Key	16
6. Setting program	17
6.1 Activation of buttons on the screen	17
6.2 Configure buttons	17
6.3 Enable Taskbar Icon	17
6.4 Close	17
6.5 On Screen Display (OSD)	17
6.6 About	17
6.7 Exit	17
7. Troubleshooting	18

1. FEATURES OF THE KEYBOARD

- Compatible with Windows 98/Me/NT/2000/XP
- Convenient management of means multimedia
- Hot keys of regulation of loudness
- Hot keys for Internet
- Buttons of change of scale of the image in Windows
- Buttons of the Power management
- 15 Additional keys Office connected by key Office Lock Key

2. COMPLETENESS OF DELIVERY

- 1) Keyboard — 1 pc.
- 2) CD — 1 pc.
- 3) User's manual — 1 pc.

3. SYSTEM REQUIREMENTS

- Windows 98/Me/NT/2000/XP
- CD-ROM
- Sound card
- PS/2 compatible

4. INSTALLATION

4.1. Installation for Windows 98/Me/NT/2000/XP

Before installing the Office Keyboard driver, check to see if there are any other keyboard drivers already installed on your system. All other keyboard drivers must be uninstalled BEFORE installing the Office Keyboard drivers.

Insert the Driver CD into your CD-ROM drive and run Setup.exe. The first screen is an introduction. Read it before proceeding to the next step. The software will automatically begin to install to your hard disk. After installation, you will be prompted to restart your computer in order to enable the Keyboard software.

Click (Finish) and restart your computer. The Keyboard Icon will be activated automatically after Windows restarts.

* Insert the Driver CD into your CD-ROM drive and the CD will Auto Run. If it does not, please choose (Run) from the Start Menu. The file name on the CD is "AUTORUN". The first screen is an introduction. Read it before proceeding to the next step. The software will automatically begin to install to your hard disk in a sub-directory titled C:\PROGRAM FILES\NETROPA. After installation, you will be prompted to restart your computer in order to enable the Office Keyboard software.

* There are two different choices for installing the drivers:

Minimum installation for Win ME, WIN 2000, Win XP

This driver selection supports Scroll Pad Up, Down, Left, and Right key functions, Office Application key functions and five short cut keys. It also shares minimum Windows OS resources and hard disk space. The standard Hot Key functions (CD keys and Internet keys) are always enabled without any driver.

Typical installation supports all versions of Windows

This driver selection supports Scroll Pad Up, Down, Left, and Right key functions, Office application key functions, 12 short cut keys, standard Hot key buttons (CD keys and Internet keys) and the OnScreen display function.

This driver selection shares some Windows OS resources and hard disk space.

* Click (Finish) and restart your computer. The Office Keyboard Icon will be activated automatically after Windows restarts.









After installing the Office Keyboard drivers, you must restart your computer, or the Office Keyboard software will not be enabled.

4.2. Un-installation








To remove the Office Keyboard drivers from your system, simply go to **Setting** → **Control panel** → **Add/remove programs and remove «Office Keyboard»** application software.

5. WORK ON THE KEYBOARD



5.1 Description of functions of buttons for Internet

	Back	Goes back to a previous item you already viewed in programs that support the "Back" command, such as a Web browser.
	Forward	Goes to the next item—if it was previously viewed in the same session, in programs that support the "Forward" command, such as a Web browser.
	Stop	Stops loading or refreshing a Web page or the contents of certain windows.
	WWW	Starts the default Web browser and goes to the home page. If the Web browser is active, it opens the home page. You can reassign the WWW key to start another Web/Home or use a different Application.
	E-mail	Starts the default e-mail program. Pressing the Mail Hot Key will tell you what the default e-mail program is. You can reassign the mail Hot Key to start another email Program or use a different Application.
	Favorites	Opens the Internet Explorer Favorites pane. This is where you can store shortcuts to frequently used files, Web Sites, or other items, for easy access.
	Refresh	Updates the Information on an active Web page or the contents of certain windows.
	Search	Open the Internet Explorer Search pane.




5.2 Description of functions of buttons for multimedia

	V-	Decreases the computer's sound volume. Hold down to decrease volume more quickly.
	V+	Increases the computer's sound volume. Hold down to increase volume more quickly.
	Mute	Mutes the computer's sound volume. Press it again to turn the system volume back on.
	Pre-track	Switches to the previous media track. Press once for each preceding media track.
	Play/Pause	Switches between Play and Pause of DVD/VCD/MP3/Audio media. Once Pause is pressed, pressing this button again resumes play.
	Stop	Stops playing the media.
	Next track	Switches to the next media track. Press once for each subsequent media track.





5.3 Description of functions of buttons for Power Manager for Windows

	Power	Puts the system into Power-Off mode if the PC supports power management and it is enabled. You can power off your computer with the press of a button. If power management is not enabled, this Hot Key will not work. The Power-On function available depends on how the Motherboard is set up. For more information about how your system resumes operation, see the documentation that accompanied your computer or contact the dealer or manufacturer.
	Sleep	Puts the system into Sleep mode if the PC supports power management and it is enabled. You can put your computer to sleep by pressing this button directly on your desktop, protecting your data and saving energy. If Power management is not enabled, this Hot Key will not work.










5.4. Buttons for work in Windows applications

	My Computer	Opens My Computer. This shows the contents of the floppy disk, hard disk, CD-ROM drive and network drives, etc.
	Calculator	Starts Microsoft Calculator.
	Log Off	Opens the log off Windows dialog box. Logging off closes all programs, disconnects the computer from the network, and prepares the computer to be used by someone else.
















5.5 Buttons of a call of programs Office

	Word	Open Microsoft Word. You can also reassign the Word Hot Key to use a different Application.
	Excel	Open Microsoft Excel. You can also reassign the Excel Hot Key to use a different Application.
	Power Point	Open Microsoft Power Point. You can reassign the PowerPoint Hot Key to use a different Application.
	Calendar	Open Microsoft Outlook, The default is set to Calendar. You can also reassign the Calendar Hot Key to open a different Application.

5.6 Buttons for programs Office


	Cut	Cuts the selected item(s) to the Clipboard.
	Copy	Copies the selected item(s) to the Clipboard.
	Paste	Pastes the previously cut or copied item(s) from the Clipboard.
	Mark	Use the cursor movement directional arrow keys and Mark key to select and Mark item(s).
	Back	Goes back to a previous item you already viewed in programs that support the "Back" command, such as a Web browser.
	Forward	Goes to the next item—if it was previously viewed in the same session in programs that support the "Forward" command, such as a Web browser.
	App Sw	Switches between the active window and a previously opened window.
	Close	Closes the active Windows Application.
	Scroll Pad	Provides the same functions as a scrolling mouse but with 4D direction — Up and Down, Right and Left (Optional).

5.7 Additional keys Office connected by key Office Lock Key

Office Lock	Office Lock key	
	F1 - Help	Enables the 15 Embedded Office Keys. By default, the function is ON. Opens the Help file (if any) for the active window.
	F2 - New	Creates a new document in programs that support this command.
	F3 - Open	Opens a document in programs that support this command.
	F4 - Save	Saves the file in the active window.
	F5 - Replace	Searches for and replaces the specified text and formatting.
	F6 - Bold	Bold or un-bold the characters that have been marked.
	F7 - Spell	Starts the spell-checking program in the active document, if the document's program has this feature.
	F8 - Bullets	Adds bullets to or removes bullets from selected paragraphs.
	F9 - Reply	Replies to the e-mail in the active window. (For MS Outlook or Outlook Express.)
	F10 - Forward	Forwards the e-mail in the active window. (For MS Outlook or Outlook Express.)
	F11 - Send	Send the e-mail in the active window. (For MS Outlook or Outlook Express.)
	F12 - Task panel	Shows or hides the Office task pane previously displayed. (For Office XP Only.)
	Print Scn - Print	Prints the file in the active window.
	Scroll lock - Undo	Reverses the last command or deletes the last entry typed or action taken.
	Pause - Redo	Redoes the previously undone action.

6. SETTING PROGRAM

This section describes how to use the Office Keyboard setting program.


Once the software installation for the Multimedia Keyboard is complete, the icon  is shown on the Windows taskbar. It allows you to launch any application and several functions of your computer by simply clicking a single button on your **KEYBOARD**.



Right click on the (**Office Keyboard Icon**) to activate a menu with options to configure the **OnScreen Display** and **Office Keyboard Software**.

6.1 Activation of buttons on the screen



Left-click the icon  on the taskbar of Windows, to activate the Office Keyboard Buttons. The 12 Office Keyboard buttons and an Exit button are labeled according to their corresponding icons. Left-click an On Screen button to define a key and then press the Hotkey on the keyboard to perform the function that you defined.

6.2 Configure buttons

When you activate the **Office Keyboard** and select **Configure Buttons**, you will see a 3D image on the screen. In this mode, you can customize the functions of the **Office Keyboard**. With your mouse, click one of the Hot Key Buttons and you will see the default functions of that button. When the **Office Keyboard** is in Button Configuration Mode, **left-clicking one of the 3D Keyboard Image Keys** that is user definable will bring up a dialog box for customizing that button or key.

6.3 Enable Taskbar Icon

Click this option to show or hide the Office Keyboard Icon on the Taskbar. Clicking the 3D image option will also enable the Taskbar Icon.

6.4 Close

Click this option to stop the **Office Keyboard** functions. All hot key functions will be disabled and the **Office Keyboard icon** will change color. When you left-click the **Office Keyboard icon** again, the hot key functions will be enabled.

6.5 On Screen Display (OSD)

> Enable/Disable

This option toggles the On Screen Display on and off.

> Select Color of Text

This option opens a dialog box that will help you select a color for the On Screen Display text.

> Select Font

This option invokes a dialog box for selecting the font for the On Screen Display. You may select any installed True-Type font for Windows@ 98, Me, 2000 and XP.

> Settings

This option allows you to select the size of the characters and icons used in the On Screen Display. You may also change the time-out value for the display. This is the time that the display remains on the screen after a hot button is pressed.

6.6 About

Click this option to get information about the **Office Keyboard** software version.

6.7 Exit

Clicking the **EXIT** button will close **Office Keyboard Software** and remove it from your computer's memory. If you want to reload the **Office Keyboard Software**, you must restart your system or click on the Start Menu and select Programs to locate the **Office Keyboard Icon** and click it.

7. TROUBLESHOOTING

If you have any problems using the OFFICE KEYBOARD, please consult the Troubleshooting Guide below to see if your problem is listed.

— **The Office Keyboard software is not working properly.**

The Hot Key functions do not work after installing the Office Keyboard Software. Please make sure you have no other drivers installed for another brand of keyboard that uses Hot Key drivers. If so, you must un-install the other driver and then reinstall the Office Keyboard Software to fix the problem (see next item).

— **Add/Remove Office Keyboard Software and Re-Install**

After you have installed the Office Keyboard software, the Office Keyboard Icon will display on system tray. If you want to re-install the software for any reason, you must delete the Office Keyboard software drivers from your system. Right-click the mouse button on the Office Keyboard Icon and choose EXIT. Next, open the Control panel from the Start menu and then select (Add/Remove) to delete the Office Keyboard software. This will remove the drivers from your system. Now you must restart your system and re-install the software drivers.

Note: You must use this procedure if you want to upgrade your Office Keyboard functions or the software does not work properly.

— **I cannot properly install other software applications.**

If you want to install another software application but experience problems, you may have to remove the Office Keyboard driver from your system memory. Right-click on the (Office Keyboard icon) and then choose EXIT. Now install the desired software application. After completion of the new application software installation, restart your system, the Office Keyboard Icon will display in tray again.

— **The Onscreen Display response is too slow.**

If your CD-ROM drive response seem too slow, performance and response can be improved by upgrading to at least a 4X CD-ROM drive (or faster).

— **CD or Video Player cannot be launched.**

Be sure your system has software and hardware for these functions and that both are properly installed.

— **Cannot play a VCD title or MPEG file.**

Be sure you have the Windows Media player 7 installed properly. The Media Player 7 can be downloaded from the Microsoft Web site.

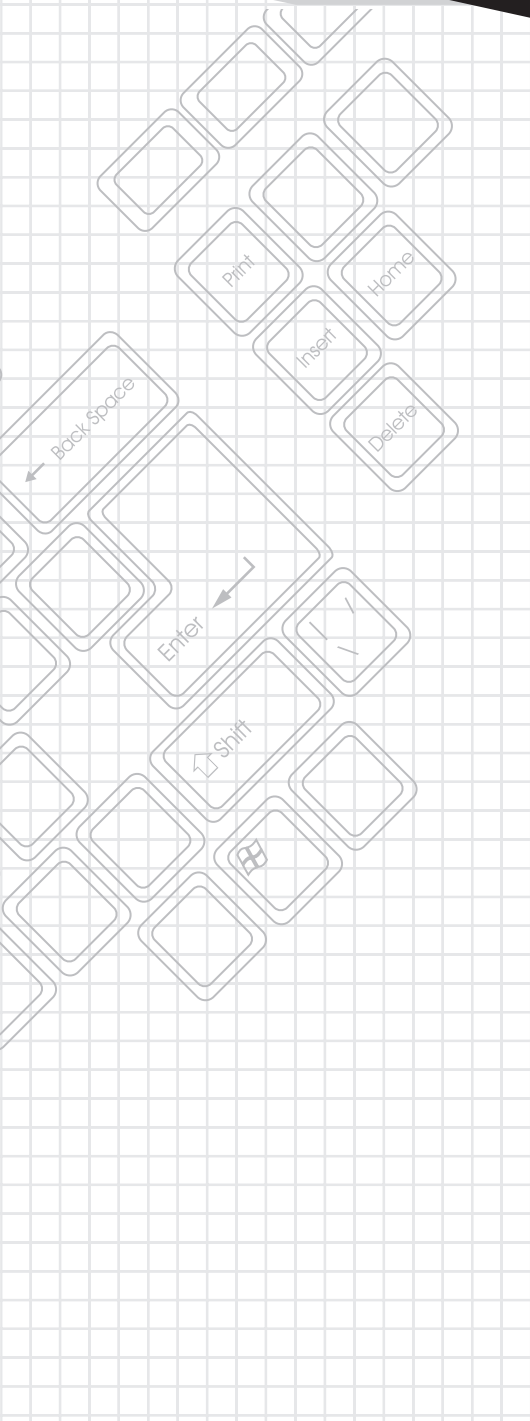
— **Prev-track & next-track key repeat rate do not match the CD-ROM drive speed.**

If you maintain pressure on those buttons, the CD player will continuously search previous or next tracks until you release this key. If your CD-ROM drive speed is too slow, releasing that key will not stop the (continue-search-tracks-function) immediately. Upgrading to a faster CD-ROM drive of at least 4X, will solve this problem.

— **Cannot use the Microsoft Windows default shortcut keys function.**

The OFFICE KEYBOARD software driver will share some Windows OS default short cut key function resources. Once the OFFICE KEYBOARD drivers are installed, the following five (5) combination keys cannot be used; you must choose another combination.

CTRL+ALT+E, CTRL+ALT+P, CTRL+ALT+O, CTRL+ALT+D, CTRL+ALT+C.



SVEN[®]

Made in China